DVR Quick Guide(4ch/8ch/16ch)



Jog/Shuttle

- 1. Forward/Reverse 1 to 64 times
- 2. Step playback (1 Frame)



Button Name

12. Search 13. PTZ 2. Channel 3. Jog Shuttle 14. FUNC 4. LED 15. Relay 5. Power 16. Mon 17. REW/◀ 6 Menu 7. ESC 18. Stop/▼ 8. REC 19. FWD/▶ 9. Multi 20. Pause/▲ 10. SEQ 21. Play/Enter 11. Copy 22. USB

Front / Search

1. Monitoring



Multi Conversion

With pushing Muliti button, convert screen into 4/9/16.

Single Conversion

In division screen, If pusing the channel button, its channel will be shown in single screen.



User recording start

If Manual & Event is configured on recording configuration, when user pushes REC button of the front panel, recording will work

2. Playback



Push Playback button in Monitoring mode.



Forward Playback


If pushing FWD button, forward Playback speed will be changed from 2 to 64 times in Monitoring / Playback mode.



Reverse Playback

If pushing REW button, Reverse Playback speed will be changed from 2 to 64 times in Monitoring /


3. Search

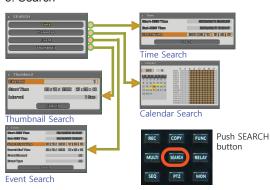

DVR Quick Guide(4ch/8ch/16ch)

General Func.

- 1. Main Menu
- 6. D-Zoom
- 2. Information 3. Monitor
- 7. PTZ 8. Search
- 4. Display
- 9. Copy
- 5. Sequence

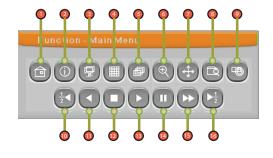

Playback Func.

10. 1/2 REW 14. Pause 11. REW 15. FWD

12. Stop 16. 1/2 FWD

13. Play

Recording/Event/Copy

4. Recording Configuration



Program configuration

Choose default set value or user configuration value.



Manula/Schedule & Event

Select and use between Manula & Event and Schedule & Event.



Schedule configuration

Input programe per day and time. No recording part will be

5. Event



Event Check

When configuring Event Check as Always Time Zone, it works.



Motion Detection

User can configure the sensitivity and area per channel different.



Sensor Input

Choose correct sensor type

between N.O type and N.C type.



6. Copy

CD/DVD Copy

User can copy multipul channel in to CD/DVD-R even including

Mini Playter together.



User can copy multipul channel into USB Memory at the same time even including Mini Player.

AVI Copy

Selected single channel can be copied into USB Memory.