

HVRM H1600L / H1600M /H3200M

Installation & User's Guide



Caution

Since this device is operation purpose and registered as suitable electromagnetic waves, seller or user should be cautious on this point. If the device is sold or purchased wrongly, it is required to replace as Home use.

FCC Compliance Statement

Caution : Any changes or modifications in construction of this device which are not expressly approved the party responsible for compliance could void the user's authority to operate the equipment.

NOTE : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications, Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures

Warning

1. In case of changing built-in lithium battery, it should be replaced as same or kindred one to prevent a danger of explosion. Since old batteries could be a factor of environment contamination, be cautious to treat them.
2. Do not throw the batteries to fire or heating. Neither short circuit or disassembly is prohibited.
3. Do not charge the batteries provided with Remote Controller

Important Notice

1. Do not place heavy objects on the top of the HVRM
2. HVRM is for indoor use. It is not weatherproof. Use HVRM with referring to its environmental specifications (Temperature & Humidity). To clean the HVRM, gently wipe the outside with a clean dry cloth.
3. HVRM use AC power of 110V~240V. Be cautions not to cause electric damages to HVRM.
4. Be careful not to drop the HVRM. Physical shocks may harm the products including internal HDD. In addition, be sure the HVRM is secured after installation.
5. HVRM is made of metal. Therefore you can hurt human beings if you throw it to them or hit on them. When HVRM is installed, be cautious to locate on safe places where children are unreachable.
6. If HVRM does not operate properly, please contact the closest HUNT ELECTRONIC USA INC. distributor for after sales service. Tempering or disassembling the product will void warranty.
7. Security surveillance laws may differ for each country. Therefore, please contact the local region first to avoid any surveillance law violations.

The content of this manual can differ according to firmware or Software upgrading, and the standard and appearance of products may be changed for the improvement of quality without an advance notice.

Contents

Installation Guide.....	11
OVERVIEW	11
1. Introduction	11
2. Supplied accessories.....	13
3. Description & Function	14
INSTALLATION AND CONNECTION	16
4. Connecting & Running	16
4.1. Connecting camera	16
4.2. Connecting monitor	17
4.3. Connecting Audio	17
4.4. Supplying power.....	18
5. Running OSD menu	19
5.1. Using menu	19
5.2. Dialogue box to edit a word	20
6. Setting remote controller.....	21
6.1. Setting ID of HVRM.....	21
6.2. Selecting HVRM	22
6.3. Operable range of remote controller	22
6.4. Loading the batteries into remote controller	22
7. HVRM configuration.....	23
7.1. Basic configuration	23
7.2. Advanced configuration	23
7.3. External storage & Back up configuration.....	24
7.4. Internet/ Intranet configuration.....	24
8. HVRM basic setting	25
8.1. Viewing Image	25
8.2. Setting Date & Time	26
8.2.1. Time Zone	26
8.2.2. Daylight Saving.....	26
8.2.3. Sync with NTP	26
8.2.4. Time Format	27

8.2.5.	Date.....	27
8.2.6.	Time.....	27
8.2.7.	Apply Date/Time.....	27
8.3.	Setting recording condition.....	28
8.3.1.	Configuration Status.....	28
8.3.2.	Recording Speed/Quality.....	29
8.3.3.	Speed(ips).....	29
8.3.4.	Quality.....	29
8.3.5.	Audio Recording.....	29
8.3.6.	Alarm Recording.....	29
8.3.7.	Apply.....	29
9.	Connecting and configuring DIO ports.....	30
9.1.	Connecting and configuring sensor.....	30
9.1.1.	Specification.....	30
9.1.2.	Connecting sensor input.....	31
9.1.3.	Configuring sensor at OSD menu.....	32
9.1.3.1.	Global.....	32
9.1.3.2.	Configuration.....	32
9.2.	Connecting & configuring relay out.....	33
9.2.1.	Specifications.....	33
9.2.2.	Connecting relay out.....	33
9.2.3.	Configuring relay out as OSD menu.....	34
9.3.	Connecting serial port.....	35
9.3.1.	Configuring serial ports for Pan/Tilt/Zoom.....	35
9.3.2.	Diagram of serial ports.....	35
9.3.2.1.	Diagram of COM1(RS232).....	36
9.3.2.2.	Diagram of COM2/COM4.....	36
9.3.2.3.	Diagram of COM3.....	36
9.3.3.	Configuring Serial.....	37
9.4.	Connecting external device with serial port.....	38
9.4.1.	Connecting text inout device (ATM / POS / Access Control).....	38
9.4.2.	Configuring serial setup (COM1) at OSD menu.....	39
9.4.3.	Configuring text.....	40
9.5.	Connecting USB device.....	41
9.6.	Connecting video in/output.....	42
10.	Connecting External Storage.....	42

10.1.	IEEE1394 port	42
10.2.	Connecting IEEE1394 Device	43
10.3.	Available HDD	43
10.4.	Registering & Formating HDD.....	44
11.	Network monitoring & managing.....	45
11.1.	Connecting Ethernet	45
11.2.	Configuring Network infomraiton of HVRM.....	46
12.	Using Control Center Lite	47
12.1.	Starting.....	47
12.1.1.	PC system requirements for running Control Center Lite.....	47
12.2.	Installing Control Center Lite	47
12.3.	Log-In.....	48
12.4.	Configuration Tool	49
12.5.	Monitor	49
12.6.	Playback.....	50
User's Guide.....		51
13.	Description	51
13.1.	Front Part	51
13.2.	Rear Part	53
13.3.	Summery of Installation.....	54
BASIC STRUCTURE.....		55
14.	Monitoring.....	55
14.1.	Basic Screen monitoring	55
14.2.	Single full screen mode.....	55
14.3.	Multi screen mode.....	55
14.4.	Manual Recording.....	56
14.5.	Auto Switch mode.....	56
14.5.1.	System Standard mode	56
14.5.2.	User Sequence mode.....	57
14.6.	Alarm mode.....	58
14.7.	Zoom Screen mode.....	59
14.8.	Pause Live screen.....	59
14.9.	PTZ Control.....	59
14.9.1.	Pan/Tilt Control.....	59
14.9.2.	Zoom/Focus Control	60

14.9.3.	Utilizing Load Preset	60
14.9.4.	Utilizing Save Preset.....	60
14.9.5.	Utilizing Clear Preset.....	60
14.9.6.	Utilizing Auxiliary On.....	60
14.9.7.	Utilizing Auxiliary Off.....	60
14.10.	Relay control	61
14.11.	Screen Lock control.....	61
14.12.	Utilizing Quad monitor	62
14.12.1.	H1600L Monitoring	62
14.12.2.	H1600L Monitoring & Playback	63
14.12.3.	H1600M Monitoring	63
14.12.4.	H1600M Monitoring & Playback	64
14.12.5.	H3200M Monitoring	64
14.12.6.	M3200M Monitoring & Playback.....	65
15.	Playback.....	66
15.1.	Various Playback mode(Playback).....	66
15.1.1.	Playback on standard monitor (16 division)	66
15.1.2.	Playback to divided Channel(4/9/16).....	66
15.1.3.	Playback channel no. 5~16 at 4/9 channel division	66
15.1.4.	Zoon Playback screen	66
15.1.5.	Various Playback functions.....	67
15.2.	Search mode	68
15.3.	Copy / Backup / Delete.....	69
15.3.1.	Copy Image.....	69
15.3.2.	Backup Data.....	70
15.3.3.	Delete Data	71
16.	Configuration.....	71
16.1.	Quick Setup.....	71
16.1.1.	Tim Set(Date/Time)	71
16.1.2.	Recording Setup	74
16.2.	Camera Setup.....	76
16.3.	Manual Recording setup	79
16.4.	Schedule Recording Setup.....	80
16.4.1.	Global Setup	80
16.4.2.	Setup by Channel.....	81
16.5.	Alarm Recording Setup.....	84

16.5.1.	Sensor Setup	84
16.5.2.	Motion Detection Setup.....	85
16.5.2.1.	Motion Detection Setup by Channel.....	86
16.5.3.	Text Setup.....	88
16.5.4.	Global Alarm Recording.....	89
16.5.5.	Setup by Channel.....	90
16.6.	Alarm Action Setup.....	92
16.6.1.	Schedule	92
16.6.2.	Setup	93
16.6.3.	System Alarm.....	94
16.6.3.1.	System Alarm Setup	94
16.6.3.2.	Alarm Method Setup.....	95
16.7.	Monitor Setup	96
16.8.	System Setup	97
16.8.1.	Audio Setup	97
16.8.2.	Time Schedule Setup	98
16.8.3.	Special Time	99
16.8.4.	Security Setup	100
16.8.4.1.	Local Password.....	100
16.8.4.2.	Remote Users.....	101
16.8.5.	Disk Setup	102
16.8.6.	Network Setup.....	103
16.8.6.1.	Network	103
16.8.6.2.	xDSL.....	104
16.8.6.3.	WRS	105
16.8.6.4.	NTP Setting	107
16.8.7.	Serial Setup.....	108
16.8.8.	Status Overview	109
16.8.9.	Miscellaneous	110
16.9.	Disk Manager (Utility).....	112
16.9.1.	Disk Manager.....	113
16.9.2.	USB Utility.....	115
17.	Web Viewer	117
17.1.	LOGIN.....	117
17.1.	User Connection setup.....	117
17.2.	Usable Browser.....	119
17.3.	Monitor	121

17.3.1.	Screen division & Change of video location.....	121
17.3.2.	Change to Resolution.....	123
17.3.3.	Change of Frame Rate.....	123
17.3.4.	Moving Playback.....	124
17.3.5.	Channel On/Off.....	124
17.3.6.	Sensor Indication.....	125
17.3.7.	Relay Operation.....	125
17.3.8.	Using Microphone.....	126
17.3.9.	Event data.....	126
17.3.10.	Video Recording & recording Pause Video.....	127
17.3.10.1.	Video Recording.....	127
17.3.11.	Using PTZ.....	128
17.3.12.	Using Audio.....	129
17.3.13.	Closing Video Channel.....	130
17.4.	Playback.....	131
17.4.1.	Video Division & Changing Channel.....	131
17.4.2.	Image recording.....	132
17.4.3.	Printing.....	132
17.4.4.	Backup.....	133
17.4.5.	Web Monitor.....	134
17.4.6.	Channel On/Off.....	134
17.4.7.	Saving time & Checking Rec. Capacity.....	135
17.4.8.	Searching Calander.....	135
17.4.9.	Functional function at the buttom of monitor.....	135
EXTENSION	137
18.	External device connection.....	137
18.1.	Using Text device.....	137
18.1.1.	Setup in Text.....	137
18.1.2.	Setup in RS232 menu of Serial Setup.....	138
18.1.3.	Setup in Alarm Rec.....	139
18.1.4.	Setup in Recording.....	140
18.2.	Using Keyboard.....	141
18.2.1.	Setup in COM1 menu of Serial Setup.....	141
18.2.2.	Setup in PTZ menu of Serial Setup.....	141
Appendix.....	142
#1.	HDD.....	143

#1.1.	Fundamental notions & terms.....	143
#2.	Specification	146

Installation Guide

OVERVIEW

1. Introduction

HVRM Series is DVR(Digital Video Recorder) that can record analog video channel, Audio, text data, alarm info. etc in regard to all channel simultaneously. Also using MPEG-4 algorithm increases the quality and video file size innovatively.

Quick Setup menu in HVRM Series makes possible to direct recording by only connection between Power & CCTV video. Quick Setup menu is programmed to optimize video quality and recording performance.

Also, HVRM Series can extend the storage to maximum 8TB through IEEE 1394, eSATA and Network Storage. For easy backup, it is easy to apply through user PC for HDD backup by FAT32 which is main Window format type. Through 1 USB port, F/W upgrading and saving & retrieving setting value and copy small size images is available.

<Note>

Extension through NVS04R, IEEE 1394b will be supported later.

For the details, please contact to local distributor.

HVRM Series offers with Control Center Lite-D software. Control Center Lite-D S/W makes available for easy setup, saving, playback via remote PC.

Main features

- It supports 16ch (32ch) video
- Supports 4 ch bi-directional audio
- Supports recording, playback, network recording, network playback simultaneously (Pentaplex)
- Recording speed
 - D1, 480(H1600L) ips¹
 - Half, 480(H1600M) ips
 - Half, 960(H3200M) ips
- Real-time display speed
 - Max. 480(H1600L, H1600M) ips
 - Max. 960(H3200M) ips
- Real time video surveillance and recording via PC monitor & CCTV monitor
- Support Quad CCTV monitor (H1600M supports Dual CCTV Monitor)
- Internal hardware Quad Splitter for analog channel
- Internal software multiplexer for 16channel division monitoring (1 / 4 / 9 / 16 channel mode)
- Max. 8TB storage (External HDD expansion via IEEE 1394, eSATA, Network Storage)
- Various Recording & playback
- Independent file system for effective alarm data management
- Recording text data from ATM/POS in relevant to video data
- 16 sensor input & 4 alarm output
- MD searching (330 different specified MD area set, when Control Center operates)
- Text Searching (when Control Center operates)
- Internal DVD Writer backup
- PTZ control through RS232, RS485
- 32bit True Color graphic OSD menu for easy to use (Support Anti-Flicker)
- Support Static IP and DHCP, dynamic IP and xDSL, cable modem user
- Apply embedded Linux OS for reliability and efficiency
- Support Remote controller
- Firmware upgrading, Setup, retrieving through USB memory device
- Digital Water Mark
- Register max. 16 units HVRM to Control Center Lite-D (PC user interfacer)
[Total 256 channel managements (16 HVRM H1600L x 16ch) through one S/W program]

<Note>

It supports only DVD backup. CD backup will be supported later.
For the details, please contact to local distributor.

¹ ips = image per second






<Note>

Extension through NVS04R, IEEE 1394b will be supported later.

For the details, please contact to local distributor.

2. Supplied accessories

Unpack and check all the items as below;
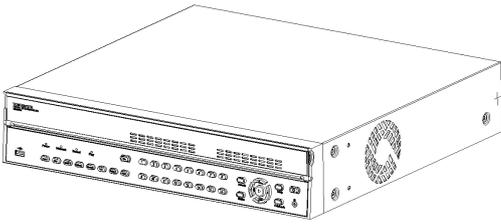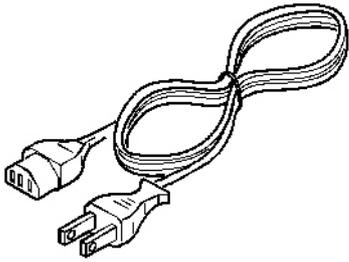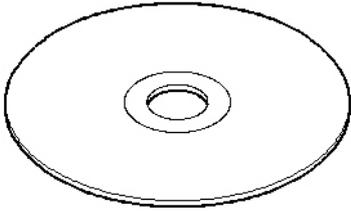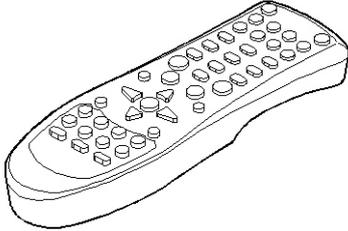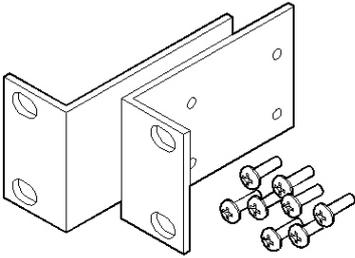
<p>1. HVRM (1EA)</p> 	<p>2. AC Power Cord (1EA)</p> 
<p>3. CD (Including Software) (1EA)</p> 	<p>4. Remote Controller (1EA)</p> 
<p>5. RACK FIXING KIT (1SET)</p> 	<p>6. R-HDD screw (8EA)</p> 

<Note>


Attention for the system without HDD installed

In case of system without HDD, HDD only can only be installed in R-HDD(Removable Hard disk rack).

For the internal installation of HDD additionally, For the details, please contact to local distributor.


3. Description & Function

Front

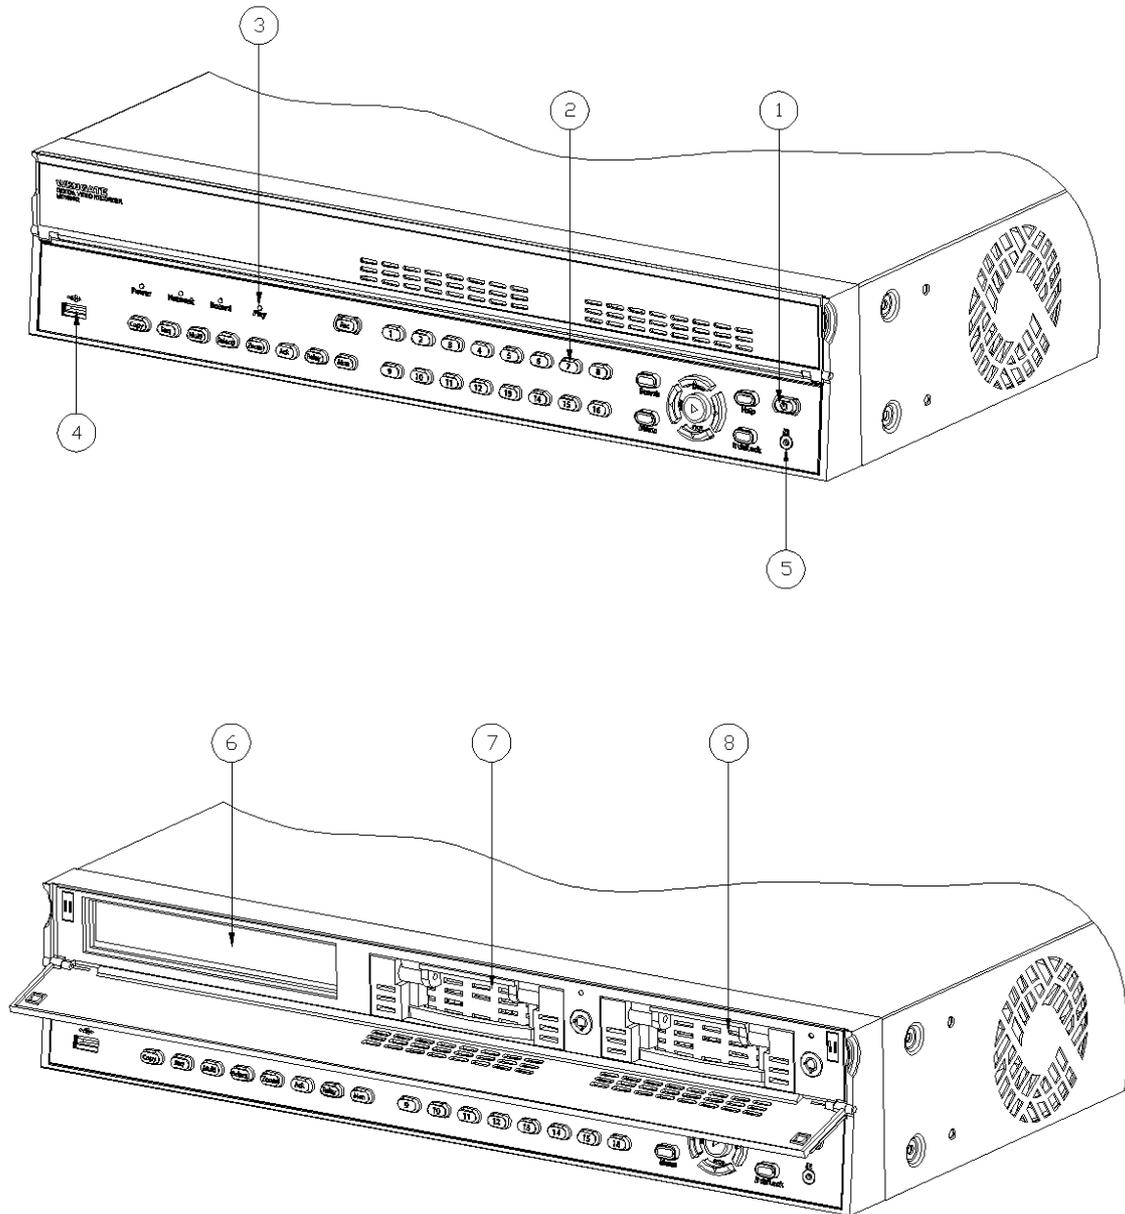

- (1) Power switch
- (2) Function buttons
- (3) LED
- (4) USB port
- (5) Remote controller receiver
- (6) CD/DVD-RW
- (7),(8) Built-in Hard Disk Rack

Rear

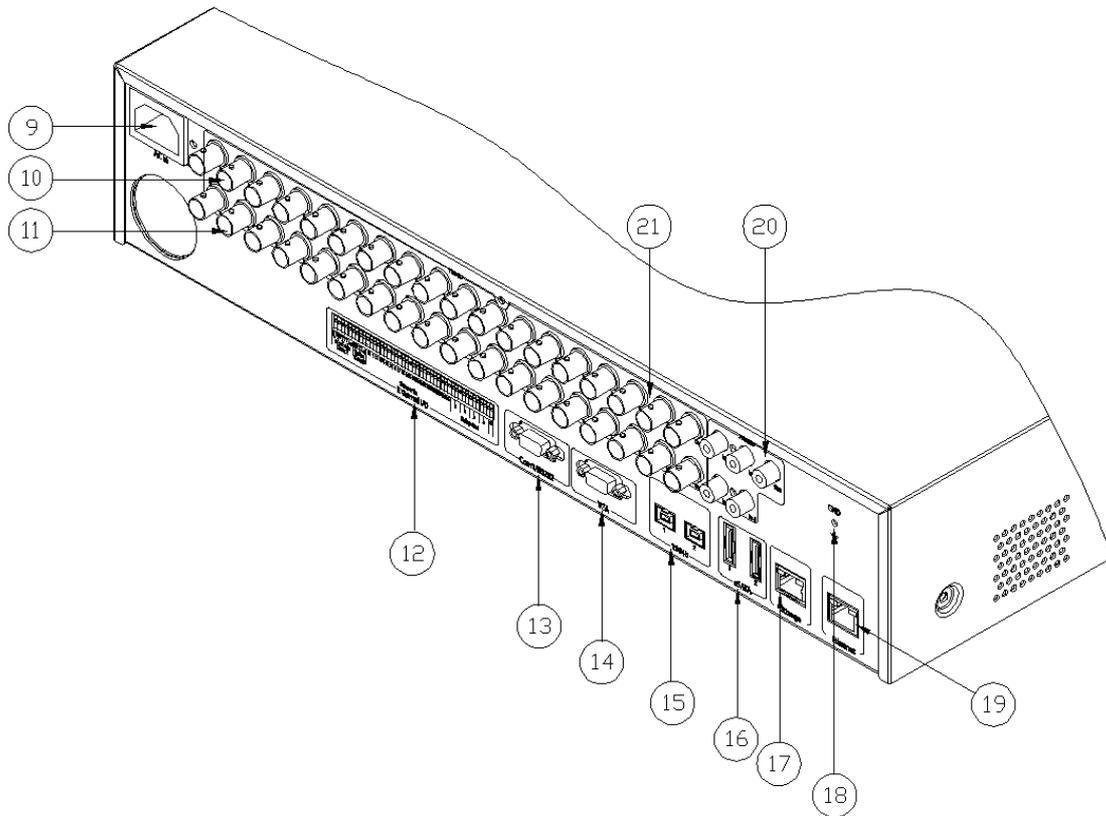


- (9) AC power connector
- (10) BNC connector for video input
- (11) BNC connector for video output (H1600L, H1600M) / BNC connector for video input (H3200M)
- (12) Terminal block for sensor, relay, and serial input/output
- (13) RS232 connector
- (14) VGA connector
- (15) IEEE1394 connector
- (16) eSATA connector
- (17) Network Storage connector(RJ45)
- (18) GND
- (19) Ethernet connector
- (20) Audio input/ output connector
- (21) BNC connector for monitor output

INSTALLATION AND CONNECTION

4. Connecting & Running

4.1. Connecting camera

(1) Connect CCTV camera to HVRM with BNC cable as below.

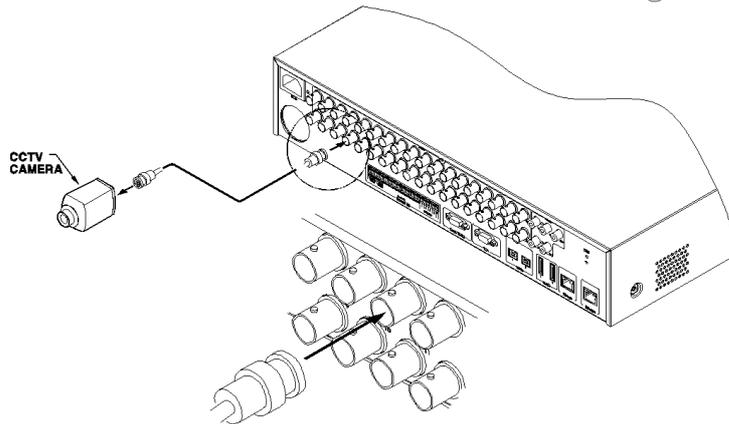

<Note>


1. The video type for all channels should be either NTSC or PAL, not be combined both.
2. HVRM sets video signal's impedance (75Ω) automatically.
Impedance is set as 75Ω basically. If connecting a device to video output, impedance will be "Hi-z" status. Please refer to "9.6 connecting Video In/Output" on page 12
3. Video Type(NTSC/PAL) should be changed after opening HVRM. The order of camera recognition follows Ch1 camera through Ch16(Ch32) camera and 1st recognized camera type leads other camera type.

4.2. Connecting monitor

(1) Connect CCTV monitor to HVRM with BNC cable as shown below;


<Note>

HVRM's monitor output divided into Video Out 1~4(H1600L, H3200M) / 1~2(H1600M), and connect to Video Out 1 for the use of 1 monitor only

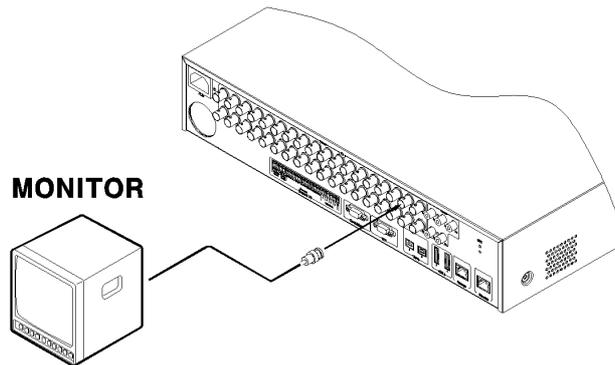


4.3. Connecting Audio

(1) Connect auto signal to HVRM with using RCA cable.

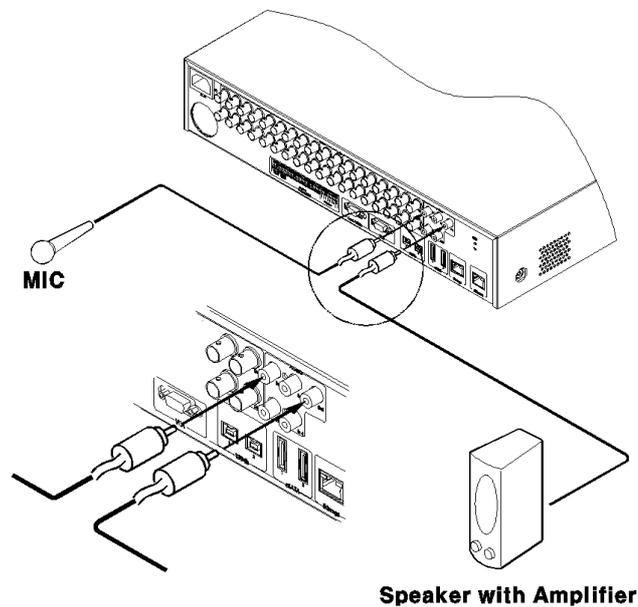


4.4. Supplying power

(1) Connect power cable as shown below

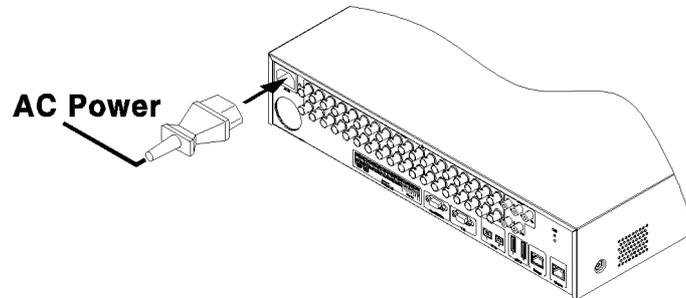

<Note>


1. When supplying power, HVRM starts booting automatically.
2. In order to cut off power, press the power switch on HVRM front during 4 seconds and enter admin password after appearing a pop window.
3. For supplying again, push the power switch.

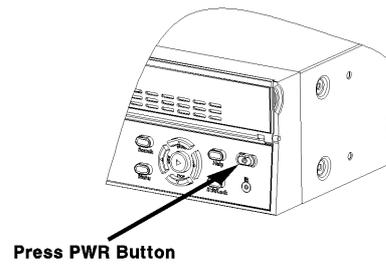

5. Running OSD menu

5.1. Using menu

Press the [MENU] in keypad of front to open the OSD Configuration Menu

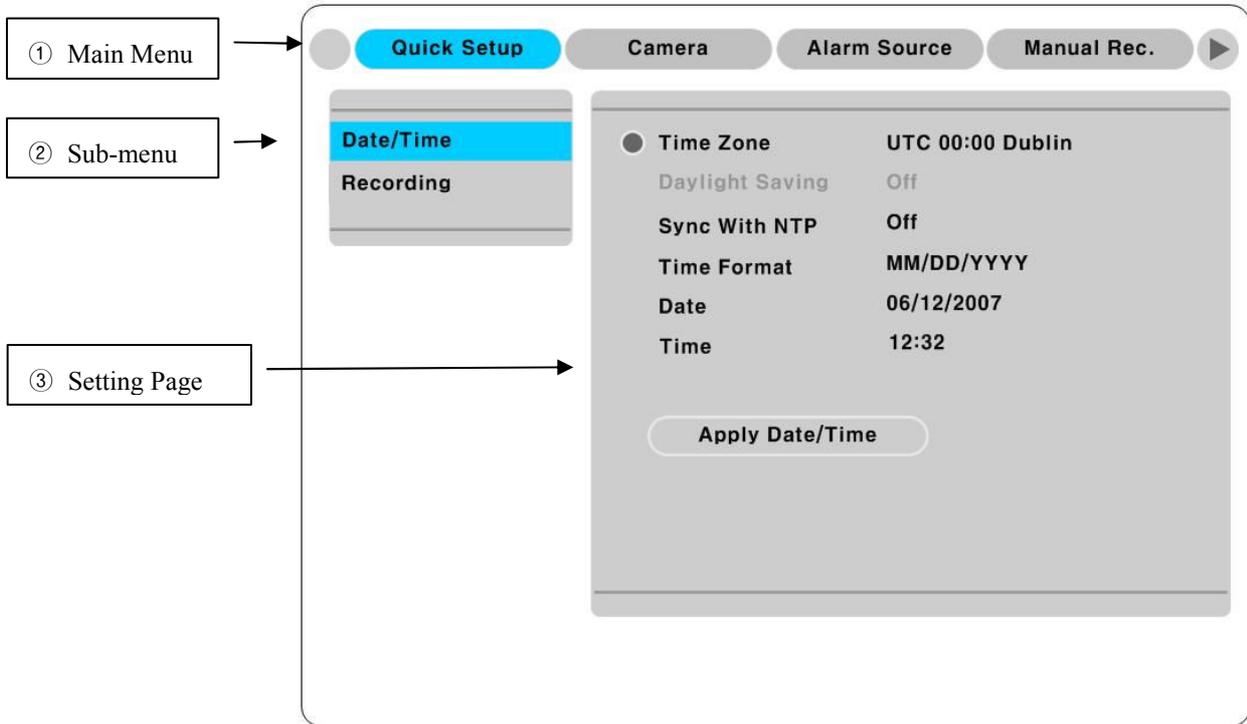


(1) Main Menu : The selected tab is shown in blue and the related sub-menu will be shown below the tab. To move to the previous/next Main Menu tab, use the [◀/▶] arrow buttons. To move to a sub-menu, press the [▷]/[▼] arrow buttons.

(2) Sub-menu : The selected sub-menu is shown in blue and the related setting will be shown to the right of the sub-menu. Use the [▲/▼] arrow buttons to move within the sub-menu list. To move to the setting page, press [▷] button. To exit the setting page, press the [EXIT] button.

(3) Setting Page : The selected sub-menu is shown as a circle on the left side of the name and gray color for setting value. To move within each page, use the [◀/▶] or [▲/▼] arrow buttons. Press the [▷] button to change the value of a setting. When setting value is a word, a dialogue box to edit the word will open. When setting value is a number, it should be set with using [◀/▶] or [▲/▼] arrow buttons. After the value is set, press the [EXIT] button. To exit the Setting page, press the [EXIT] button.

5.2. Dialogue box to edit a word

There are two methods to input a word..

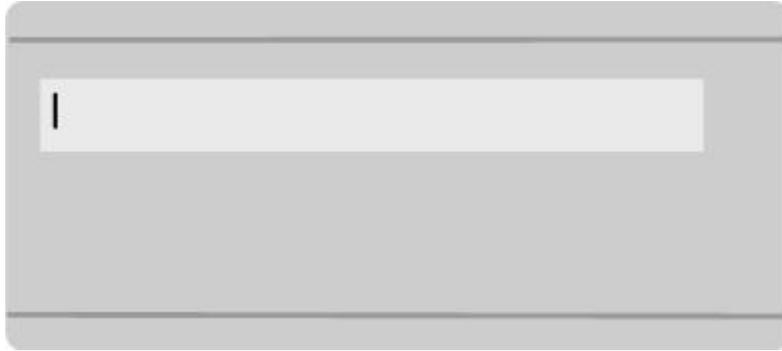

(1) Entering words

Move pressing [▶] arrow button to enter next word until the word is looking for is shown using [▲/▼] arrow buttons. In case of spacing words, press [▶] to move one space and enter the word. To exit the Dialogue box, press the [▷] arrow button.

(2) Available words range to use

1 2 3 4 5 6 7 8 9 0

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z


a b c d e f g h i j k l m n o p q r s t u v w x y z

() - . \$ # @

6. Setting remote controller

6.1. Setting ID of HVRM

When controlling several HVRMs with one remote controller, set Remote Control ID as follows.

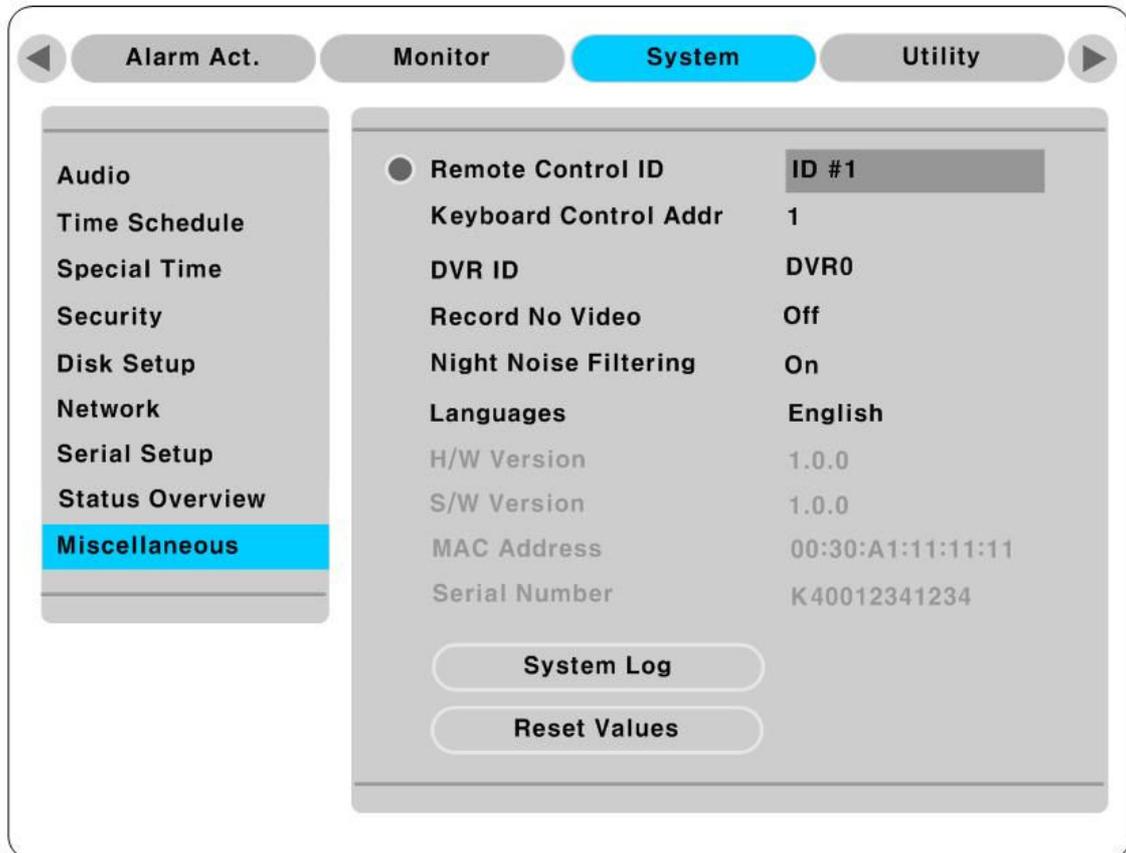

- (1) Press the [MENU] button
- (2) Select "System" with using [▶] button and press the [▷] or [▼] button
- (3) Select "Miscellaneous" from the sub-menu list using the button [▼] and press [▷] button.
- (4) Select "Remote Control ID" and press the [▷].
- (5) Select a value using the [◀/▶] buttons and press the [EXIT] button.
- (6) Press the [EXIT] button to exit the Settings Page and return to Monitor mode.

<Note> Remote Control ID


Up to 16 HVRMs can be controlled with a single remote controller.

When not using remote controller, set the Remote Control ID as "Off".

6.2. Selecting HVRM

If several HVRMs are set with unique ID numbers, they can be controlled with one remote controller. To select a specific HVRM, Keep pressing the ID button of remote controller until a buzzer sounds during 2 seconds.

Press repeatedly
till to select eDVR
that you want

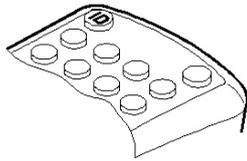


Remote Controller

Unselected	
Selected	 LED Blink One Time

<Note>


Because remote controller ID is sixteen, HVRM will correspond until pressing ID button sixteen times.

6.3. Operable range of remote controller

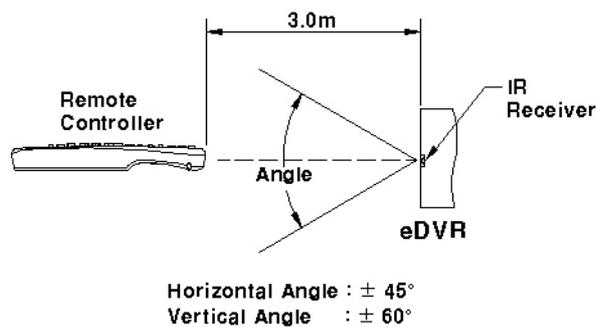


6.4. Loading the batteries into remote controller


Remote Controller requires two AAA-type batteries

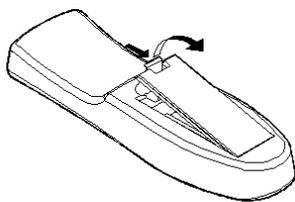

1. Remove the battery cover

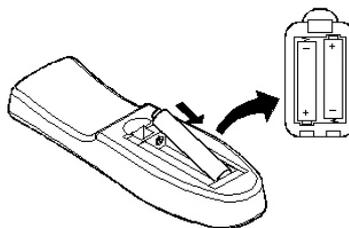

2. Taking care that the poles(+/-)
Are correctly positioned.

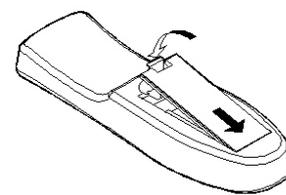


3. Replace the battery cover

<Note>


Batteries are not included as a packing accessory

7. HVRM configuration


7.1. Basic configuration

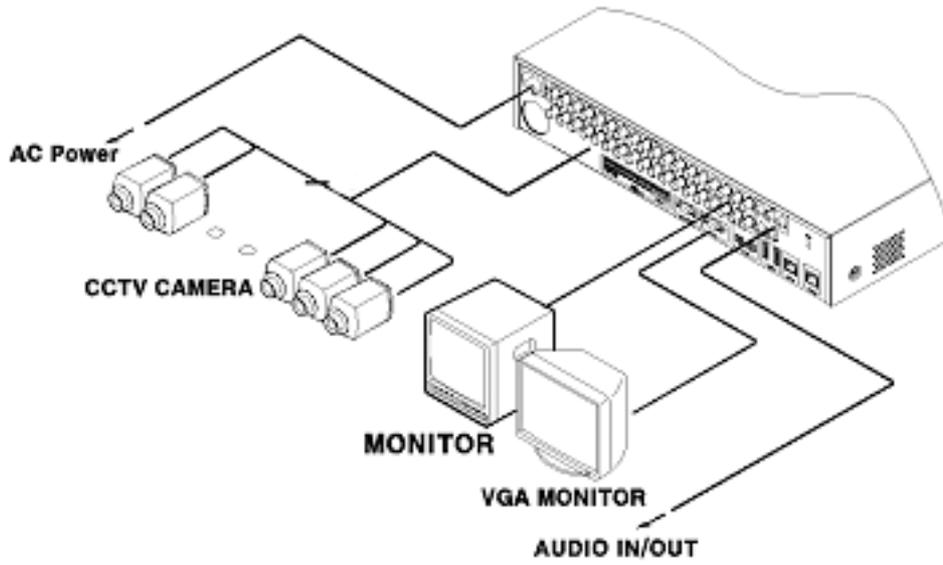


7.2. Advanced configuration

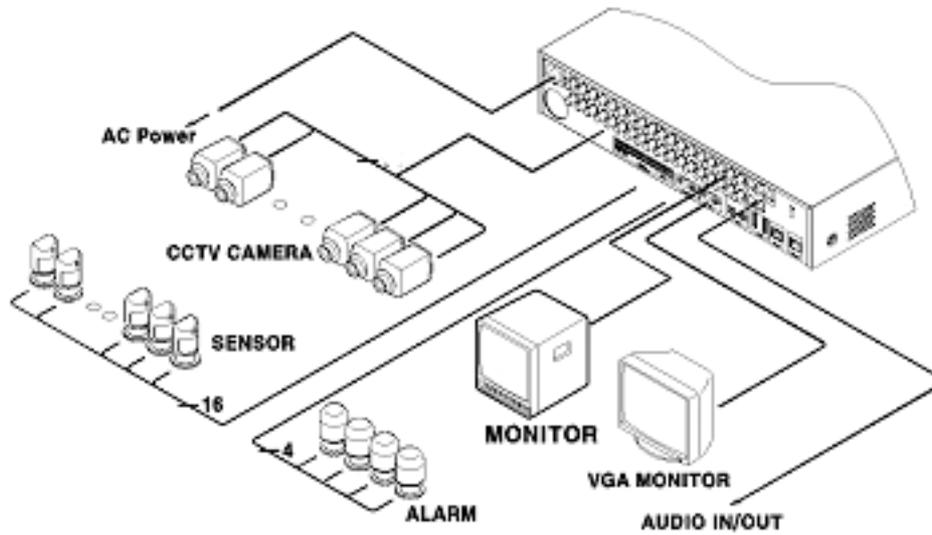

7.3. External storage & Back up configuration

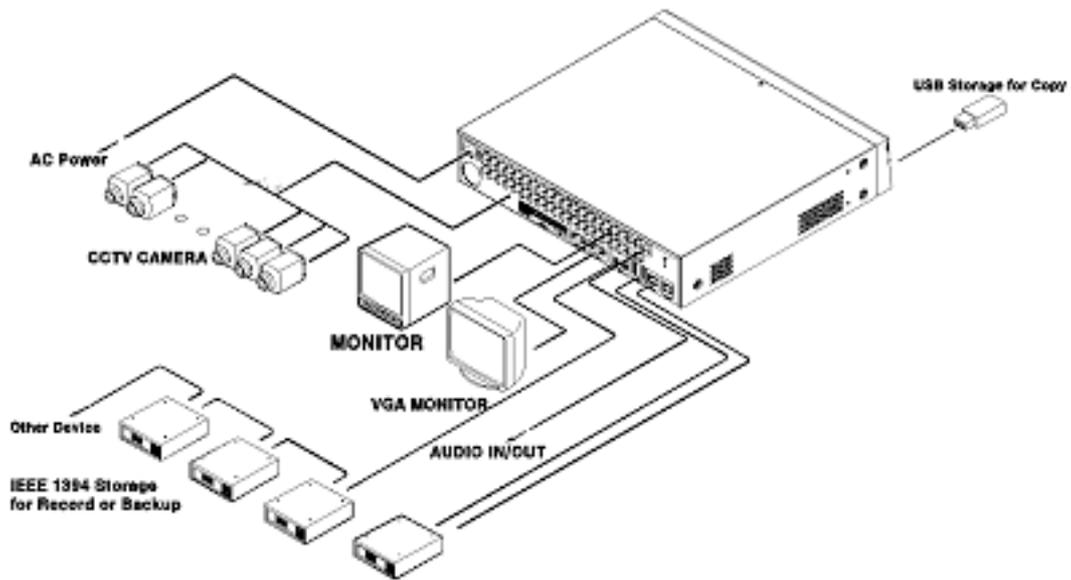

7.4. Internet/ Intranet configuration

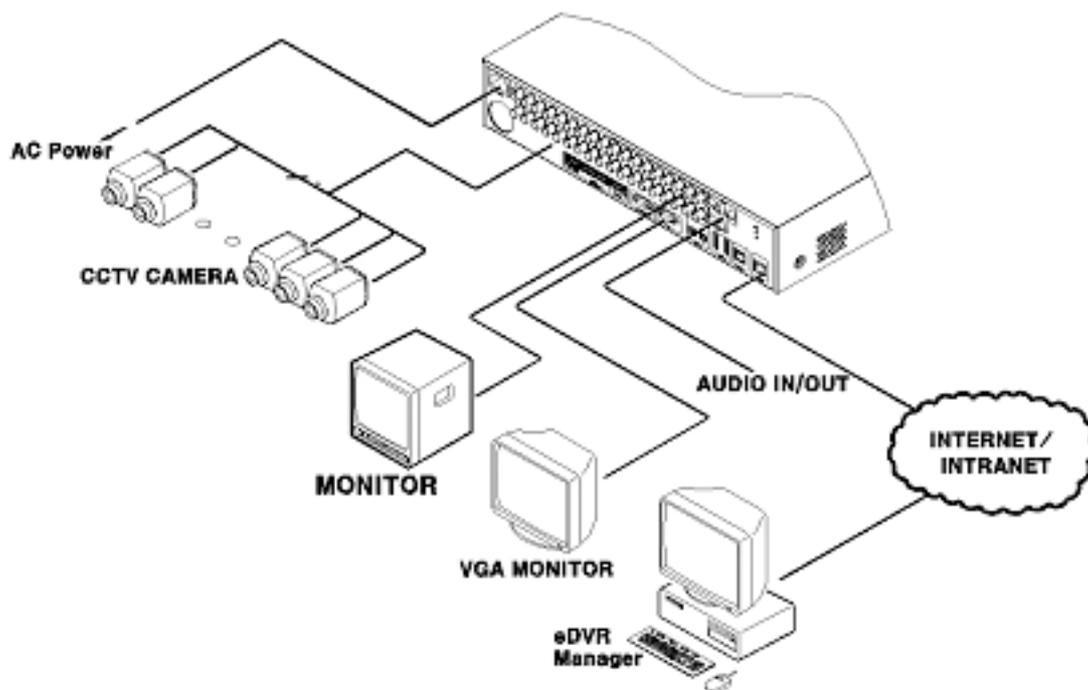


8. HVRM basic setting

8.1. Viewing Image


When power is on, HVRM starts automatically and images are displayed in basic 16ch-split screen after the booting.

<Note>

If user password is set, a prompt for entering the password will appear. Factory default is reserved as not responding key pad on HVRM front (It is not set from factory default)

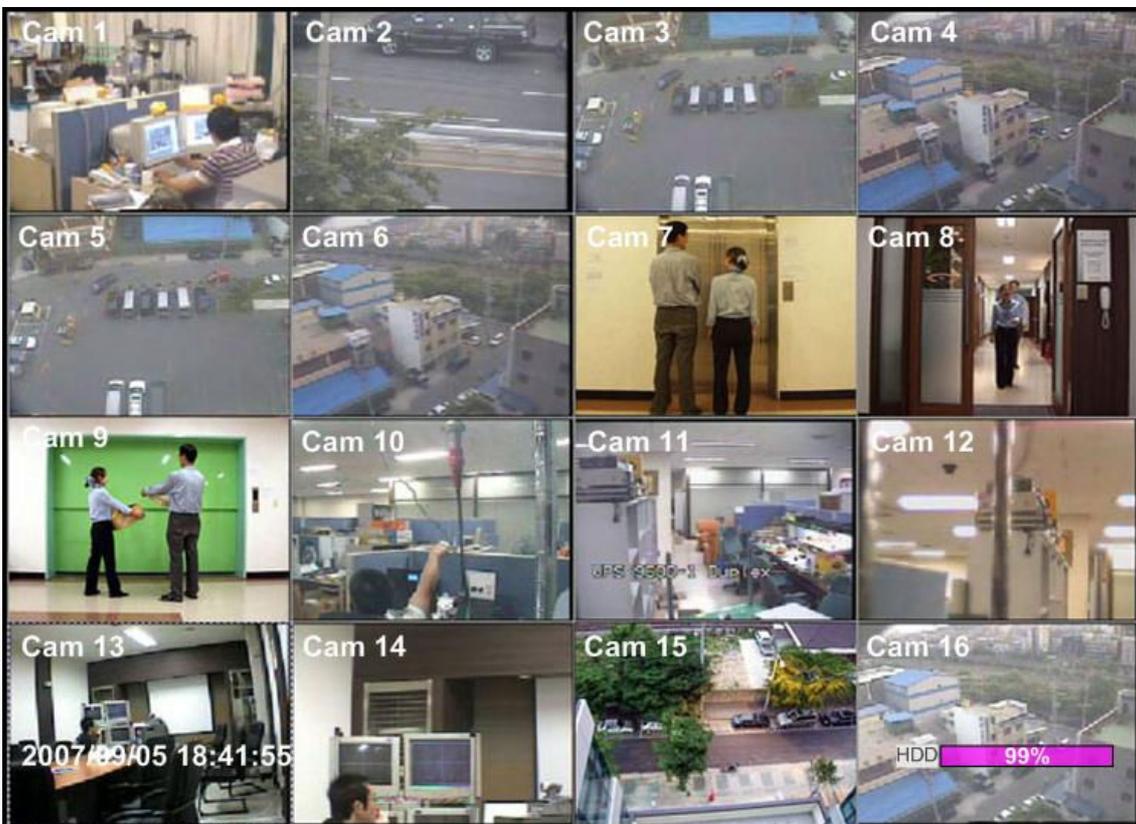

8.2. Setting Date & Time

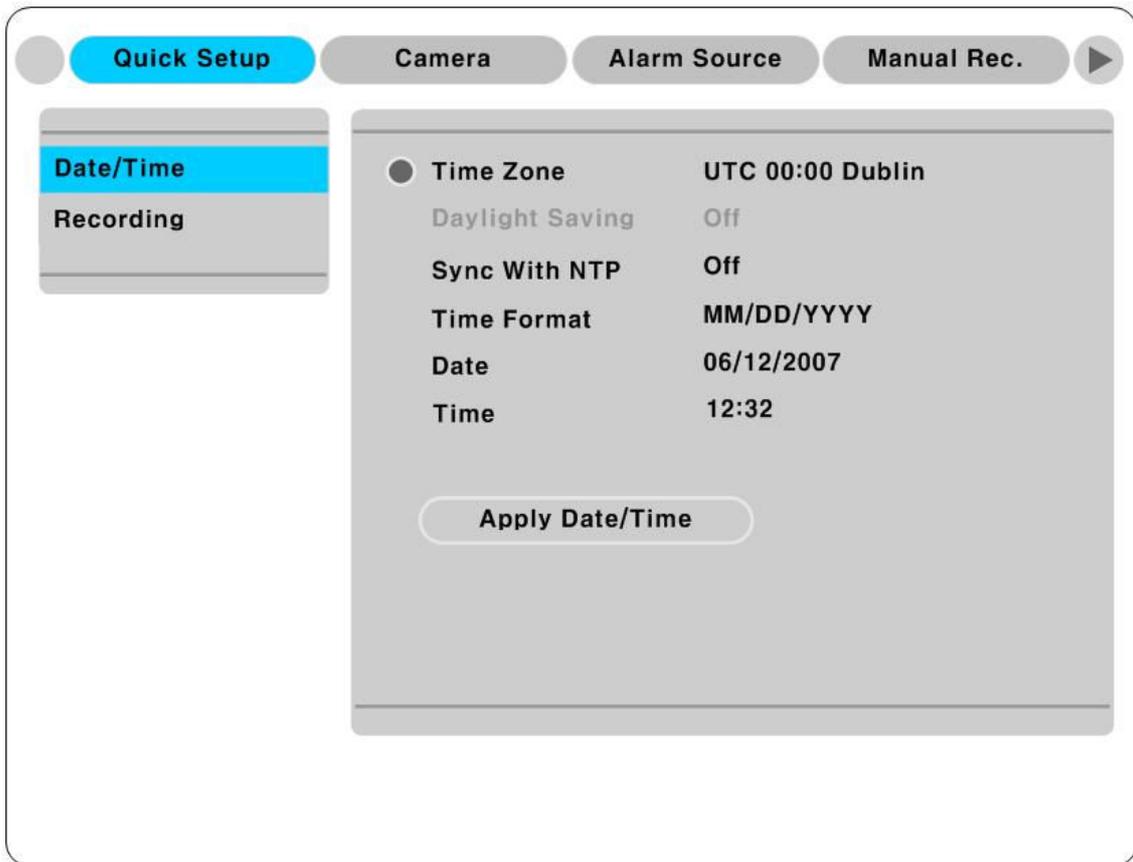

- (1) Press [MENU] button and select “Quick Setup” tab.
- (2) Select “Date/Time” using the [▷] or [▼] and press [EXIT] button.

8.2.1. Time Zone

- (1) Select “Time Zone” using the [◀/▶] or [▲/▼] button and press [▷] to configure.
- (2) Select Time Zone using the [◀/▶] button and press [EXIT].

8.2.2. Daylight Saving

- (1) Daylight Saving Time is only activated for Time Zone that uses Daylight Savings.
- (2) Select “Daylight Saving” using the [◀/▶] or [▲/▼] button and press [▷] button.
- (3) [◀/▶] Select On/Off using the [◀/▶] and press [EXIT].

8.2.3. Sync with NTP

In order to synchronize time with NTP (Network Time Protocol) server, select “on”.

- (1) Select “Sync with NTP” using the [◀/▶] or [▲/▼] button and press [▷] button.
- (2) Select On/Off using the [◀/▶] button and press the [EXIT] button.

8.2.4. Time Format

- (1) Select “Time Format” using the [◀/▶] or [▲/▼] button and press [▷] button..
- (2) Two time formats are available; ‘DD/MM/YYYY’, ‘MM/DD/YYYY’, ‘YYYY/MM/DD’; Select a value using [▲/▼] buttons and press the [EXIT] button when it is finished. (Factory default is set as ‘MM/DD/YYYY’)

8.2.5. Date

- (1) Select “Date” using the [◀/▶] or the [▲/▼] buttons and press [▷]. Select ‘MM’, ‘DD’, ‘YYYY’ using the [◀/▶] buttons.
- (2) Press the [EXIT] button when setting is finished.

8.2.6. Time

- (1) Select “Time” using the [◀/▶] or [▲/▼] buttons and press [▷].
- (2) Select ‘HH’, ‘MM’ using the [◀/▶] buttons, and select the value using the [▲/▼] button.
- (3) Press the [EXIT] button when setting is finished.

8.2.7. Apply Date/Time


Most setting values are applied automatically, when exiting from the related menu page. But “Date” & “Time” setting are not applied automatically because they may critically affect the file system of the recorded HDD. To apply Date/ Time settings confirm with [Apply Date/ Time] buttons.

- (1) Select “Apply Date/time” using the [◀/▶] or [▲/▼] buttons and press [▷]. A warning message will be appeared will be appeared as below;
- (2) Select “OK” using [◀/▶] or [▲/▼] buttons and press [ENTER] button. To cancel, press the [EXIT] button.



8.3. Setting recording condition

Recording conditions under “Quick Setup” menu tab apply the same values to all analog channels 1~16(1~32). All settings are applied for 24 hours/ day regardless of the value set for “Time Schedule” or “Alarm Rec.”

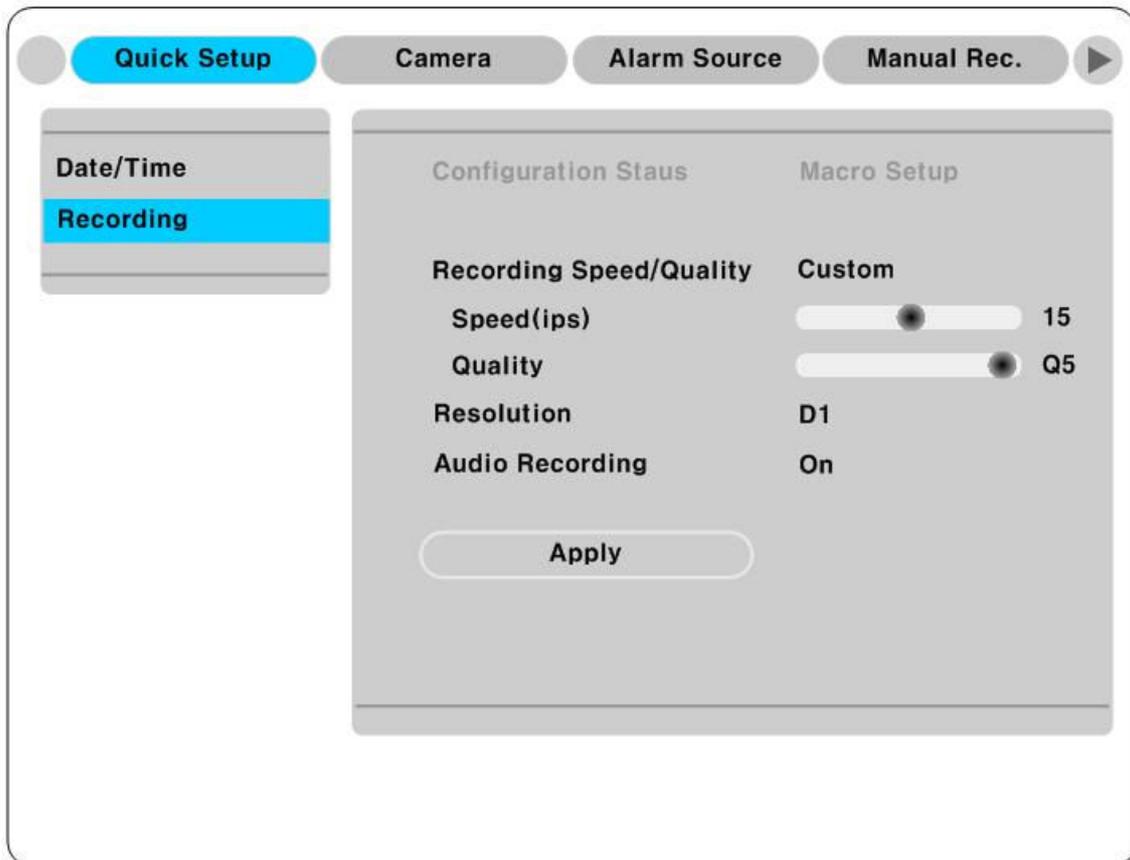

- (1) Press [MENU] button and select “Quick Setup” when OSD menu is shown.
- (2) Move to sub-menu by pressing [▷] or [▼] button.
- (3) Select “Recording” using the [▲/▼] buttons and press [▷].

8.3.1. Configuration Status

Displays the recording configuration status. When setting through the “Quick Setup” menu, “Quick Setup” will be shown. When setting up through “Normal Rec,” or “Alarm Rec,” “Custom Setup” will be shown.

<Note>

Only when normal recording of all channels are same, it is marked as ‘Macro Setup’.

8.3.2. Recording Speed/Quality

- (1) Select “Recording Speed/ Quality using [▲/▼] buttons and press [▷].
- (2) Select a value using the[◀/▶] button. Press the [EXIT] button when it is finished.

<Note> Recording Speed/Quality means

Low : Speed=7.5(6)ips and Quality=Q3 and Resolution=CIF

Standard. : Speed=15(12.5)ips and Quality=Q3 and Resolution=Half

High : Speed=30(25)ips and Quality=Q5 and Resolution=D1

Custom : Speed and Quality = Manually defined by user

8.3.3. Speed(ips)

When “Recording Speed/Quality” is set as” Custom”, values can be set manually.

- (1) Select “Speed” using the [▲/▼] button and press [▷].
- (2) Select a value using the [◀/▶] button. Press the [EXIT] button when it is finished.

8.3.4. Quality

When “Recording Speed/Quality” is set as “Custom”, values can be set normally.

- (1) Select “Quality” using the[▲/▼] button and press [▷].
- (2) Select a value using the [◀/▶] button. Press [EXIT] button when it is finished.

8.3.5. Audio Recording

- (1) Select “Audio Recording” using the[▲/▼] buttons and press [▷].
- (2) Select a value using the[◀/▶] button and press [EXIT] button when it is finished.

8.3.6. Alarm Recording

- (1) Select “Alarm Recording” using the[▲/▼] buttons and press [▷].
- (2) Select a value using the[◀/▶] button and press [EXIT] button when it is finished.

8.3.7. Apply


- (1) Select “Apply” using [▲/▼] buttons and press [▷].
- (2) Setting values are applied and the previous menu will be displayed.

9. Connecting and configuring DIO ports

<Note> Wire Handling

Trimming Wire

When connecting a wire to a terminal block, follow the instructions below. Note the different types of wire that can be used.

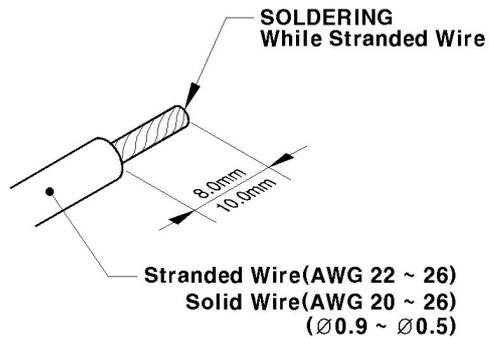


Standard Wire : Peel off the wiring, cover 8~10mm and solder it. Wire gage should be AWG 22~26.

Solid Wire : Peel off the wiring cover 8~10mm and solder it. Wire gage should be AWG 20~26

Inserting & removing wire

To insert & remove wire in TERMINAL BLOCK, use a screwdriver in the diagram to the right.

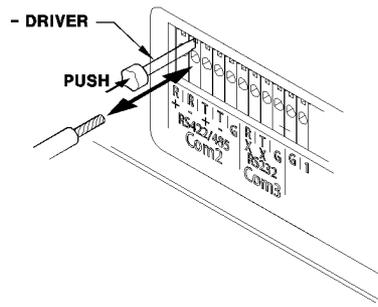

9.1. Connecting and configuring sensor



9.1.1. Specification

In order to run sensor input of HVRM Series normally, the following conditions are required.


Spec.	Input Ch.	16Ch Transister inputs
	Input type	N.C (Normal Close)/ N.O. (Normal Open) type.
	Supported sensor	Dry contact sensor
	Connecting	Connecting the trimmed wire to terminal block
Performance	Available input pulse range	Min. 500ms
	Output current	Typical DC 12mA

9.1.2. Connecting sensor input

Connect S1 ~ S16 with referring to the followings. It shows to connect a dry contact (Please refer to “<Note> *Wire Handling*” on page 27). When connecting a non-dry contact type of sensor (e.g. Open collector output) please contact HUNT ELECTRONIC’s customer Support team.

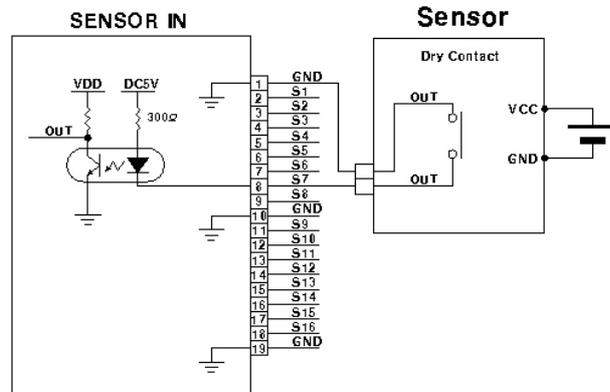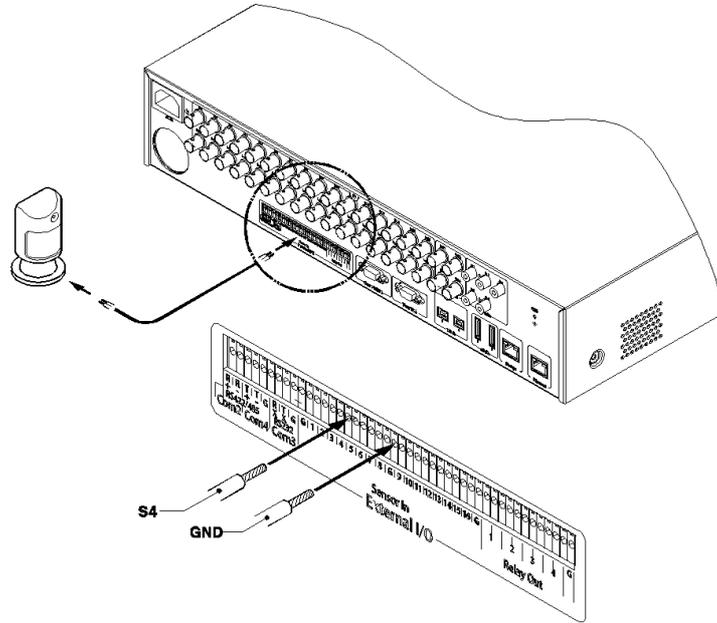

9.1.3. Configuring sensor at OSD menu

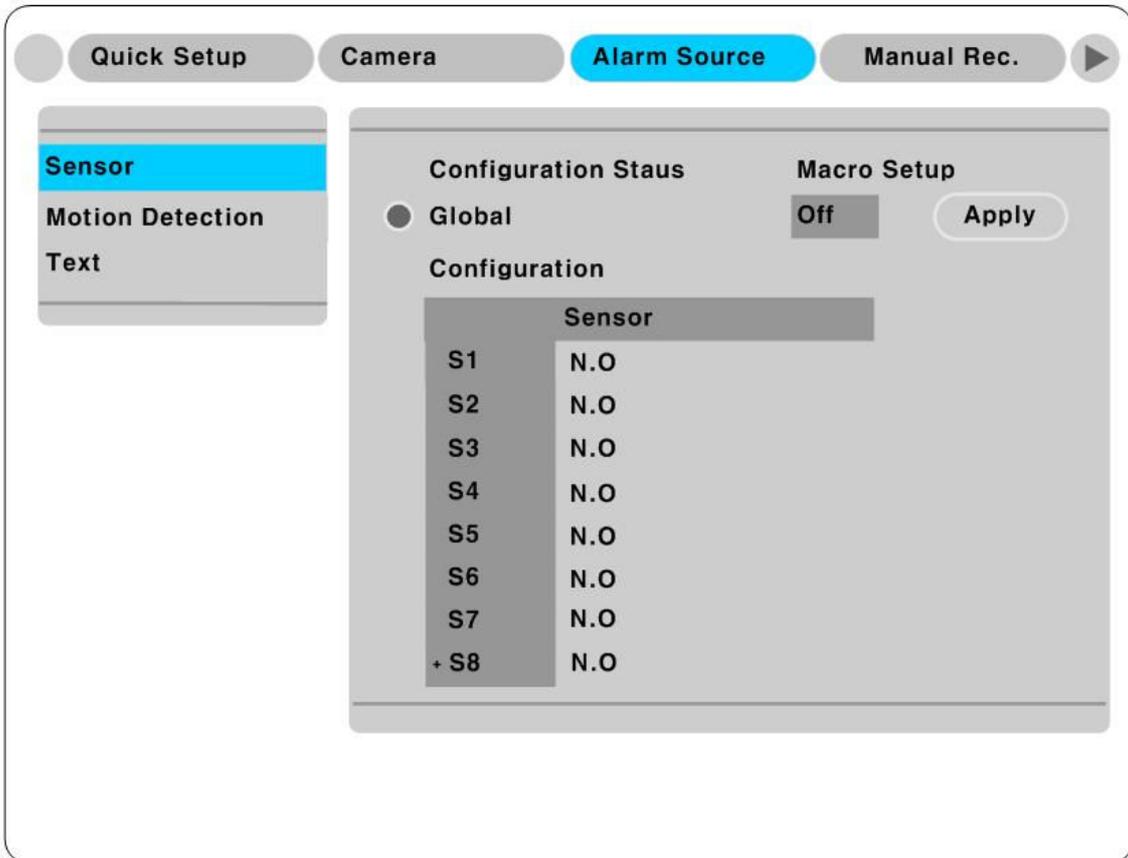

- (1) Press the [Menu] button and select “Alarm Source”.
- (2) Press [▷] or [▼] button to move to Sub-Menu, select “Sensor” and press [▷].

9.1.3.1. Global

Use when selecting all 16 sensors simultaneously, which can be selected as “Do not use”(Off). “Normal Open” (N.O), and “Normal Close” (N.C.).

- (1) Select a “Global” and set a type as Off, N.O. or N.C...
- (2) Press “Apply” to save a configuration

9.1.3.2. Configuration

Use when selecting each 16 sensor individually.

- (1) Select a “Configuration” and press [▷].
- (2) Select a sensor (S1 ~ S16) and set a type.
- (3) Press [Exit] to out from OSD Menu.

<Note>

1. Configuration a sensor is to set On/Off usage and type.
2. Please refer to “Alarm Rec” for saving and “Alarm Act” for relay-out on the “*User’s Guide*”

9.2. Connecting & configuring relay out


9.2.1. Specifications

In order to run relay output of HVRM normally, the following conditions are required.


Spec.	Output Ch.	4Ch relay differential outptus
	Output type	Dry Contact
	Connecting type	Connect the trimmed wire to terminal block
Performance	DC	30V 1A
	AC	125V 0.5A

9.2.2. Connecting relay out

Connect R1 ~ R4 with referring to the followings, It shows to connect a warming light. Please refer to “<Note> *Wire Handling*” on page 27.

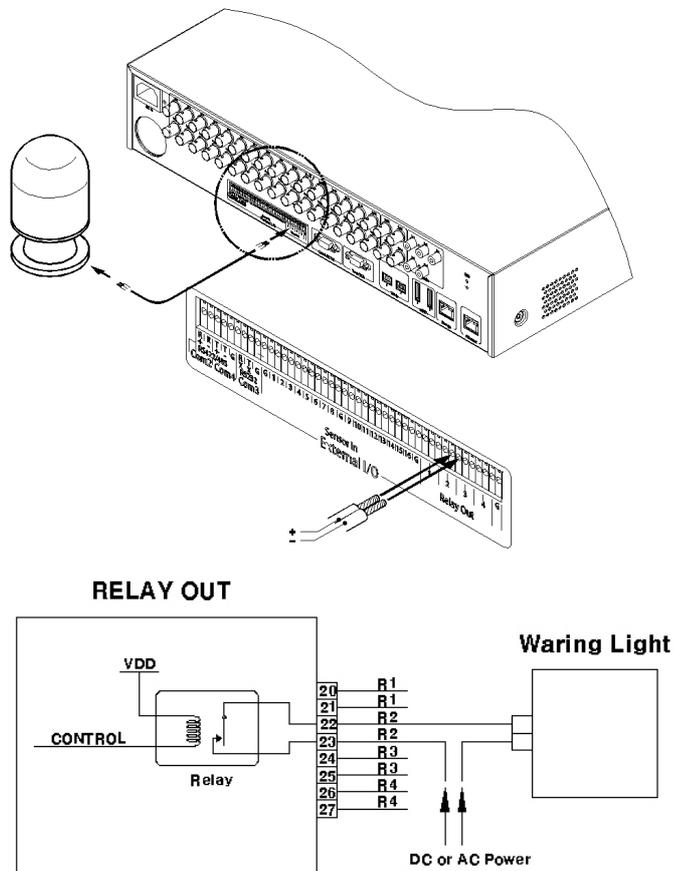

9.2.3. Configuring relay out as OSD menu.

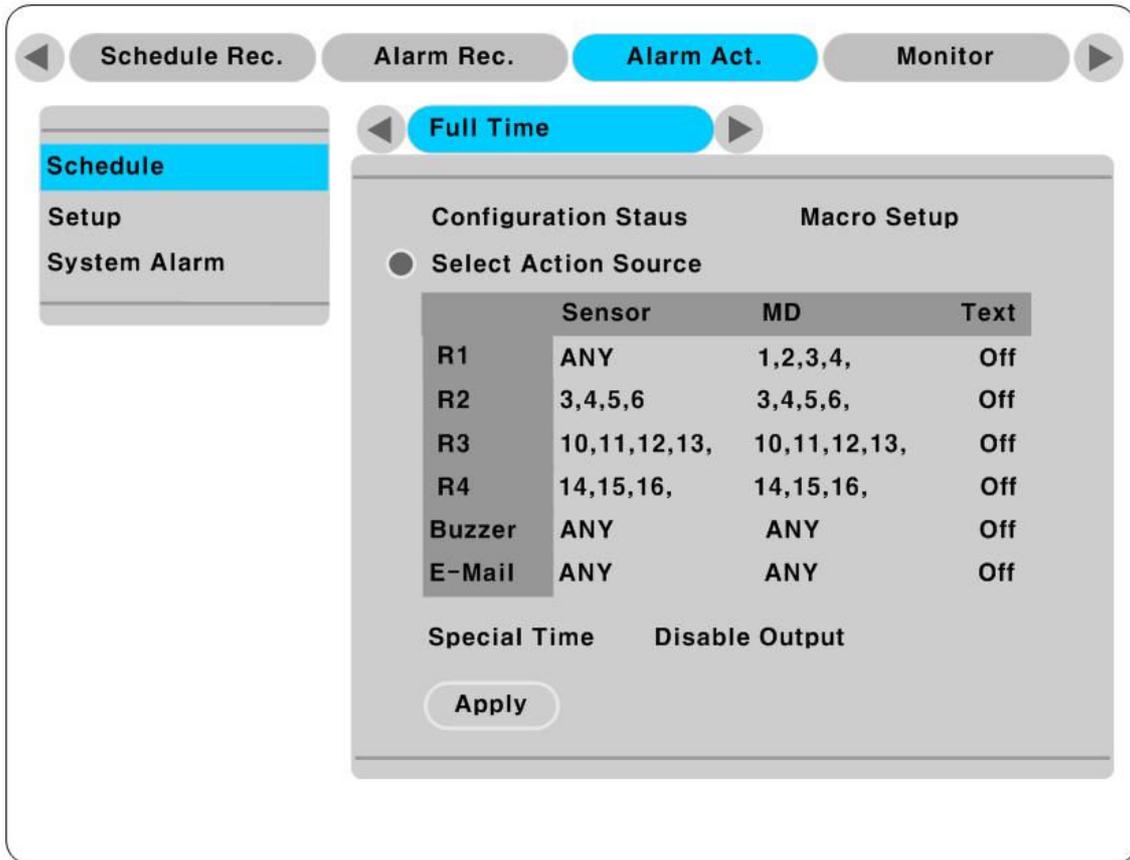

Relay can run by sensor or MD and its condition can be set differently according to schedule. When using the [Relay] button + [Number] button on the front panel or Control Center Lite-D S/W, relay can be operated from remote site.

<Note>

Please refer to the *“User’s Guide”* for more information.


9.3. Connecting serial port

9.3.1. Configuring serial ports for Pan/Tilt/Zoom

The HVRM have most major PTZ protocols already pre-programmed. Makes and models not supported can still be controlled using the Transparent Protocol. For a list of supported protocols, refer to the list on the OSD Configuration menu.


The following figure shows how to connect PTZ camera to RS485 (COM2). When using another serial port, connect it with referring to each connection diagram below.

Please refer to the “<Note> *Wire Handling*” on page 27.

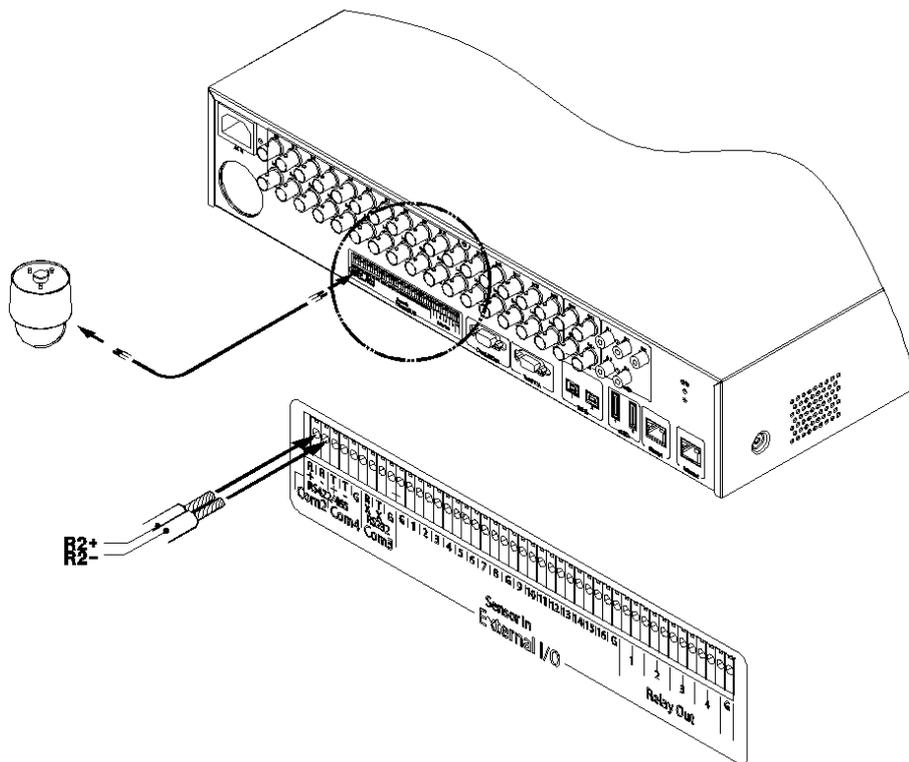


9.3.2. Diagram of serial ports


9.3.2.1. Diagram of COM1(RS232)

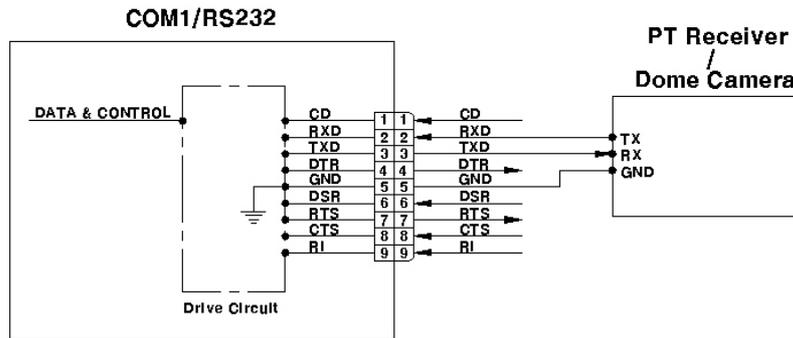

9.3.2.2. Diagram of COM2/COM4

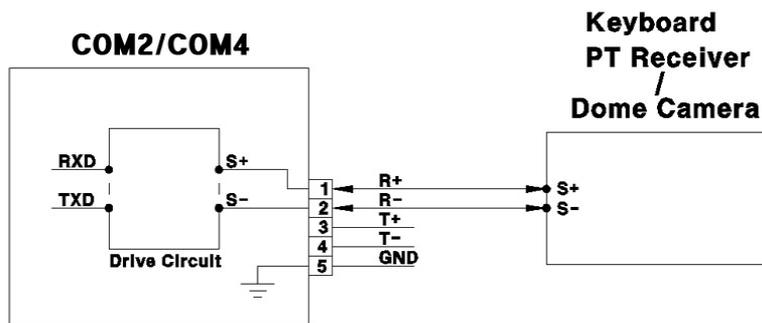


9.3.2.3. Diagram of COM3

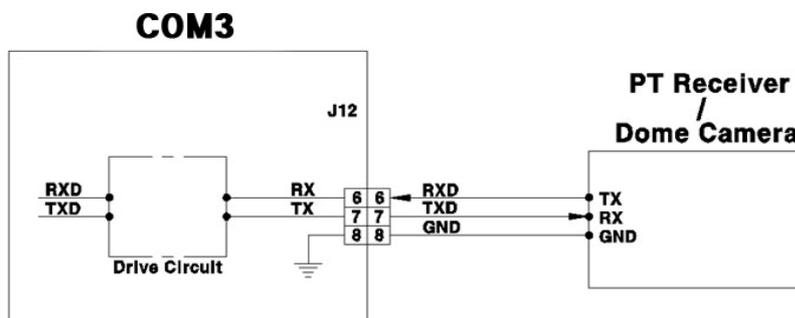


9.3.3. Configuring Serial

Configure PTZ COM ports and available models at “System/ Serial Setup” in HVRM..

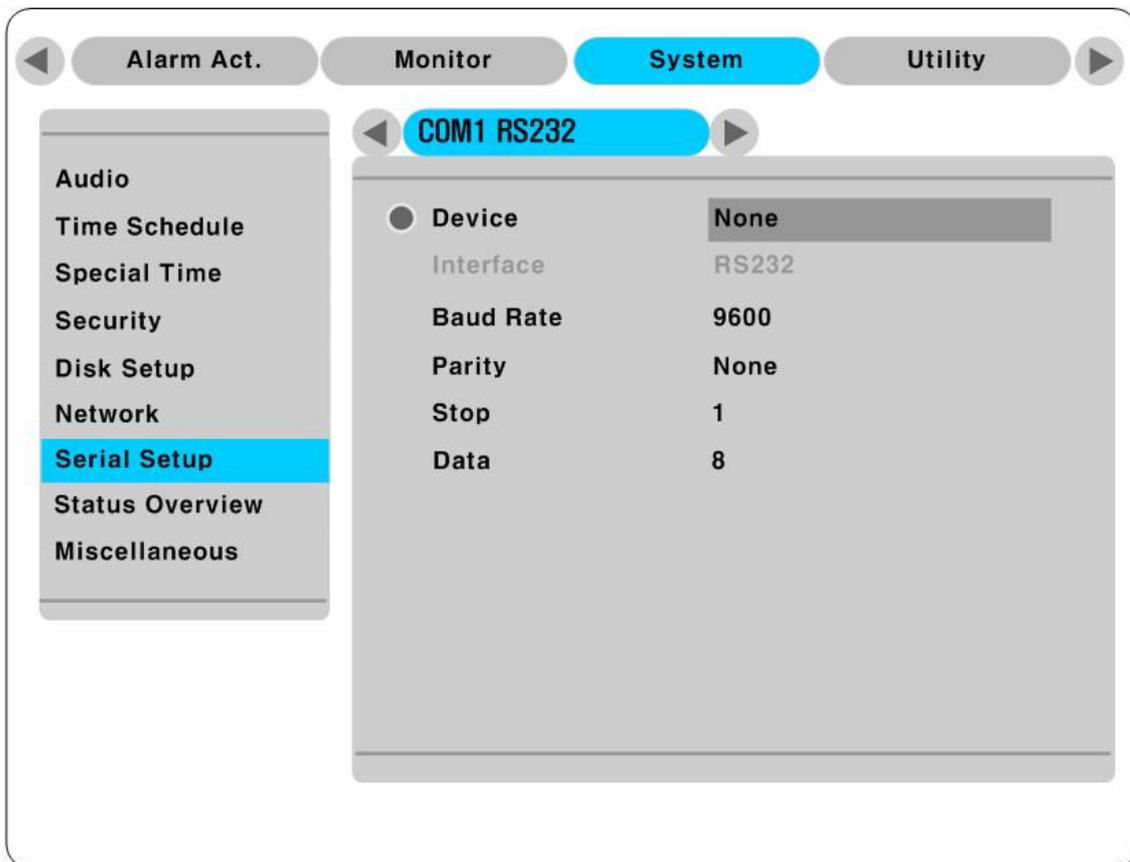


After completing serial setup, configure base address or port for each channel at “Camera menu” tab. When connecting PTZ devices to several cameras, be sure base address matches address for the camera.

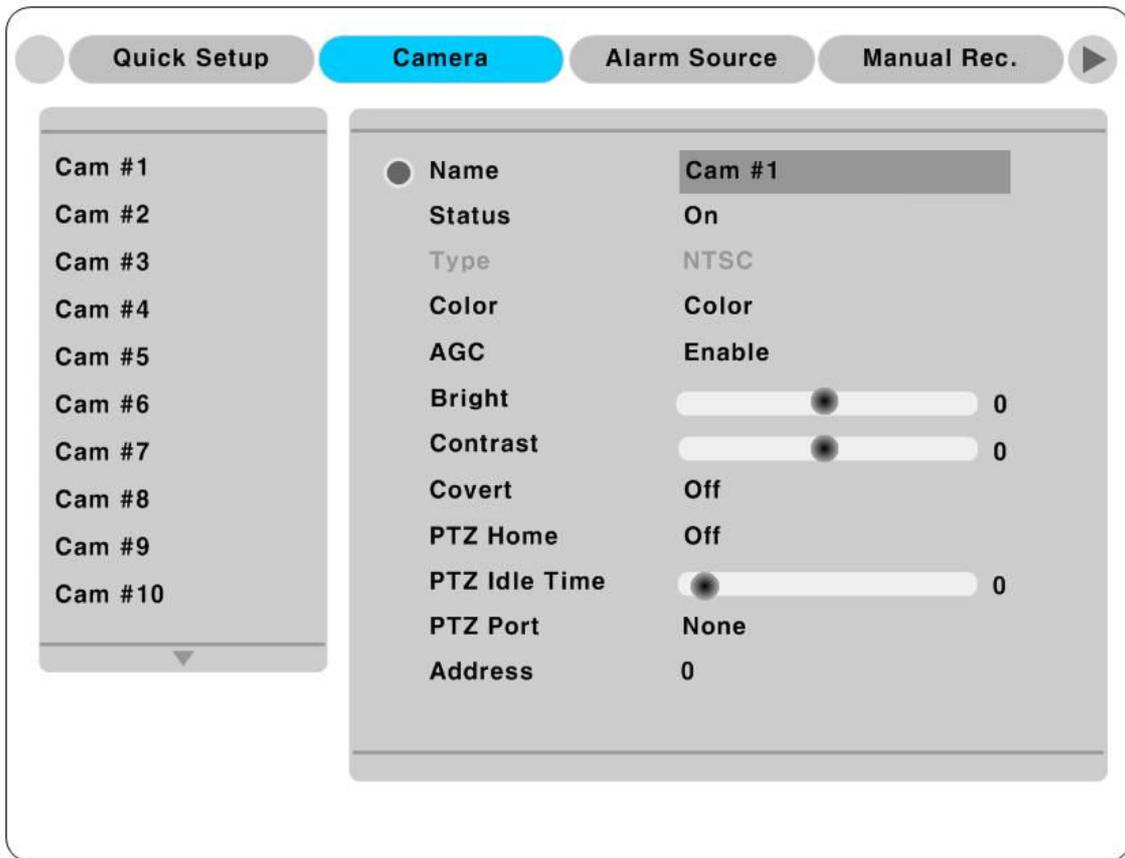

9.4. Connecting external device with serial port


9.4.1. Connecting text input device (ATM / POS / Access Control)

The HVRM can record text data received from POS/ATM through the COM/RS232 serial port.

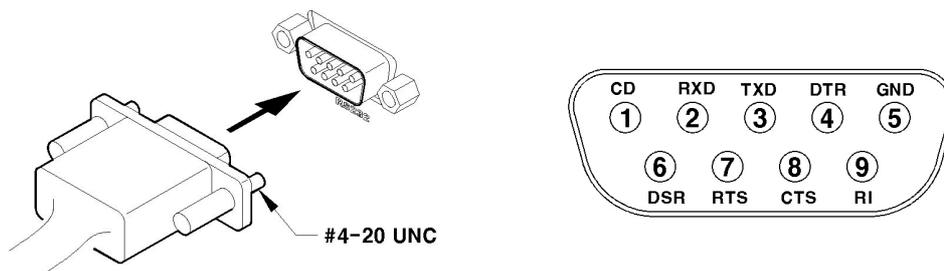


Connect to COM1/RS232 (9Pin D-Sub) of HVRM and configure the “Serial Setup” sub-menu under the “System” tab and “Text” sub-menu under the “Alarm Source” tab shown as above figure.

9.4.2. Configuring serial setup (COM1) at OSD menu

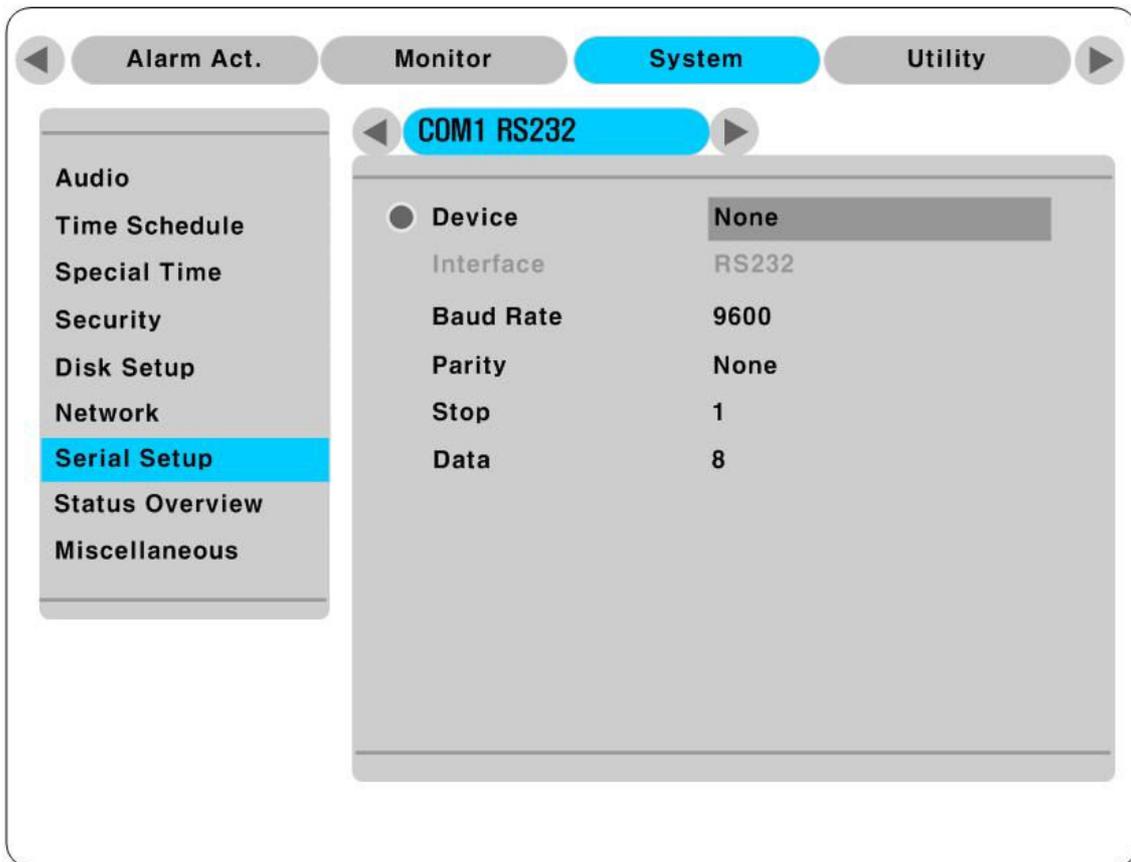

- (1) Set the “System” in OSD menu and move to “Serial Setup” menu.
- (2) Select COM in “Serial Setup”, set Devices as “Text”.
- (3) Set Baud Rate/ Parity/ Stop bit with referring to manual of the connected external device.

9.4.3. Configuring text

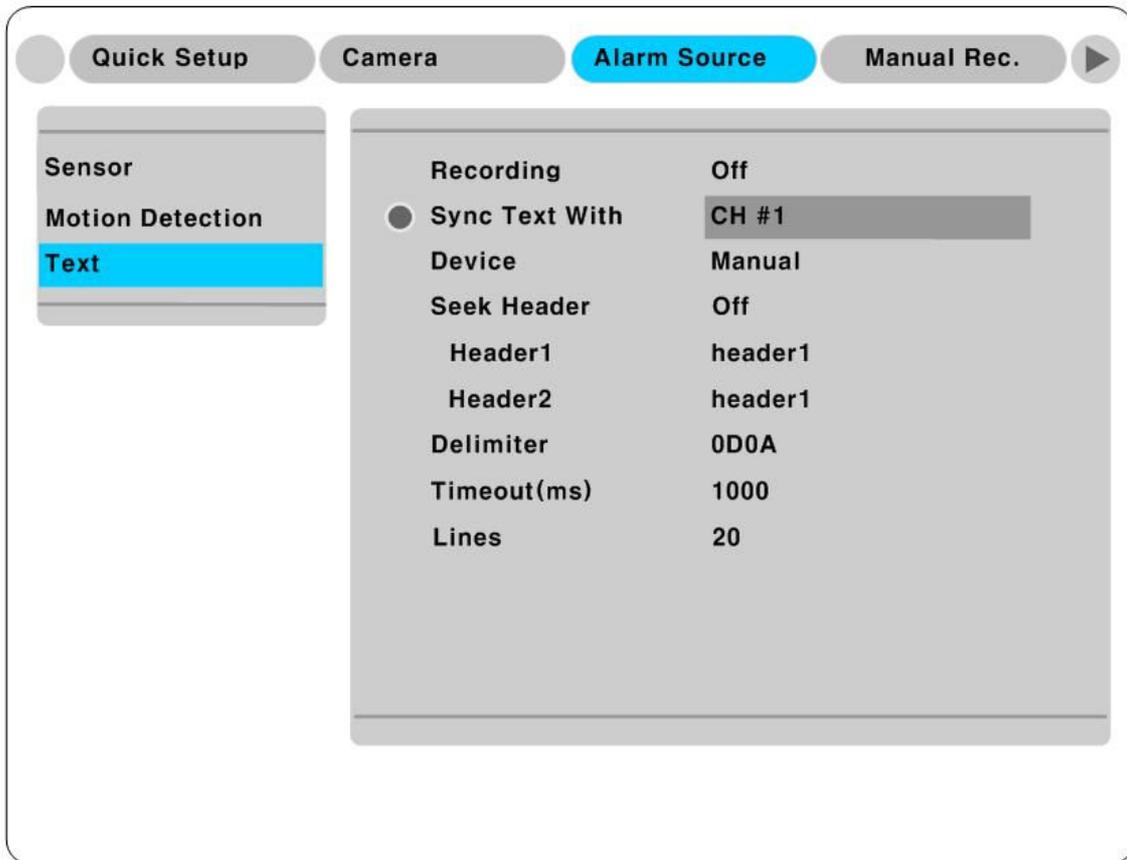

- (1) Select the “Alarm Source” menu among OSD menus.
- (2) Select the “Text” and set each value.


<Note>

Before installing any external device, consult with the local HUNT ELECTRONIC USA INC. distributor. Some external devices may not be compatible with the HVRM.

9.5. Connecting USB device

USB port can be used to copy up to 1 minute of images to a USB Flash memory disk. When connecting USB Device, do not exceed the rated values of USB device as below;


USB Spec.	Ver 2.0
Available Device	USB Memory Stick,
Output Voltage/Current	Max. 200mA per DC 5V/ Port

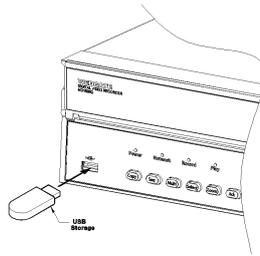

<Note>

The disk should be formatted with FAT32 type.

If properly connected the disk is recognized automatically as in the following picture. To copy images the process is as follows; Set copy range (up to 1 minute) → Select drive → Copy

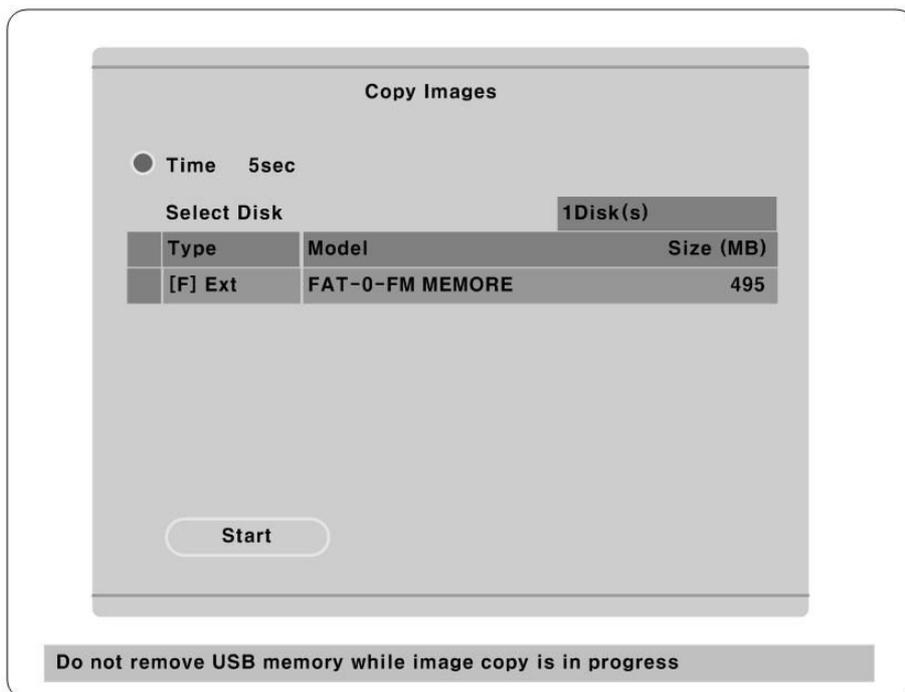


<Note>

1. USB Flash products that required a Windows program to operate may not be recognized by the HVRM
2. For more information about copy function, please refer to the "User's Guide"

9.6. Connecting video in/output

HVRM's video in/output is composed of Loop Through. HVRM recognizes the connection status and video impedance automatically.

For example, when HVRM is connected by only video input, the video impedance is set as 75Ω. And when video in/output is connected simultaneously, the video impedance is changed as Hi-z. So in this case, video impedance of external video input device(e.g. CCTV monitor) should be set as 75Ω.

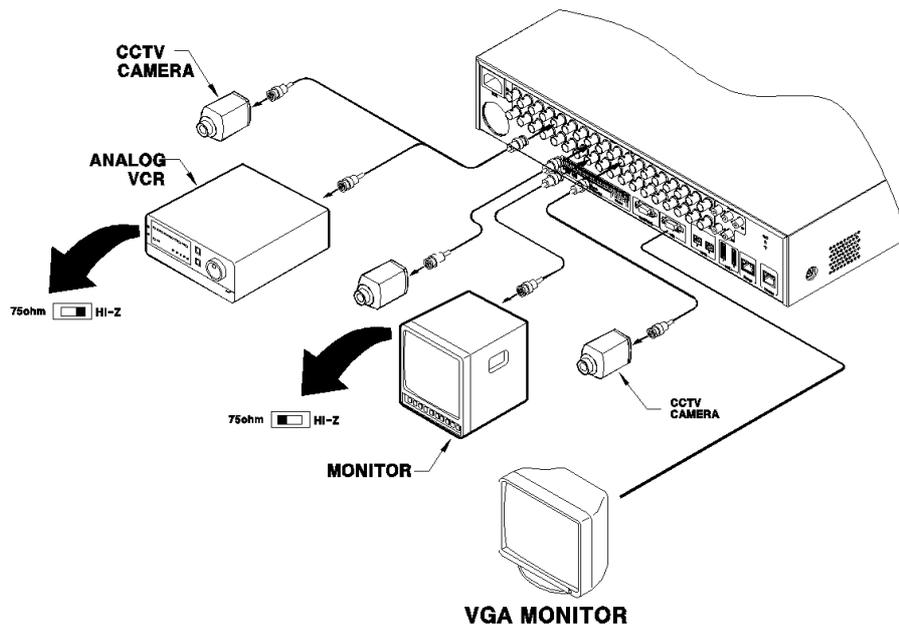

10. Connecting External Storage

<Note>

Extension through NVS04R, IEEE 1394b will be supported later.
For the details, please contact to local distributor.

10.1. IEEE1394 port


H1600 Series have two IEEE 1394 ports (Rear: 2-ports) for external storage device interface.

<Note>

Some IEEE 1394 Bay may not be recognized by the HVRM. Before purchasing consult the local HUNT ELECTRONIC's local distributor.

10.2. Connecting IEEE1394 Device

When using FireWire supported external HDD, hard drive bays can be connected to 2 ports in the rear panel. The HVRM do not supply power to the hard drive bay; therefore only bays that use external power can be used.

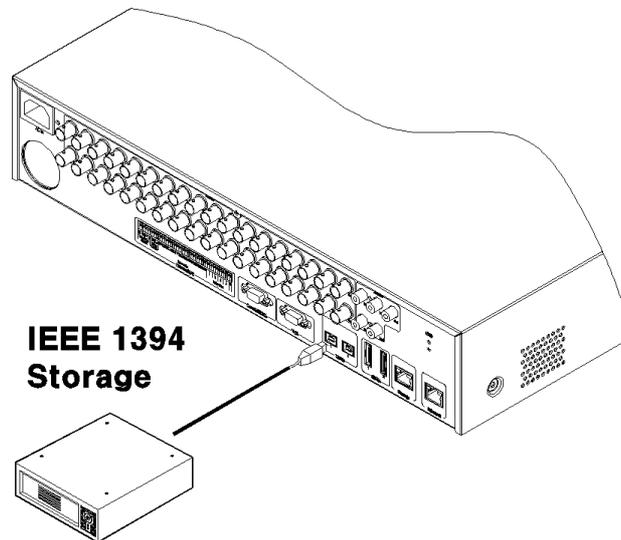

<Note>

HVRM detect external HDD, even though HVRM run. If not, it is recommended to connect as follows;

1. Power off HVRM
2. Connect external HDD to IEEE1394 port.
3. Power on external device
4. Power on HVRM


10.3. Available HDD

It is recommended to use following HDD models with the HVRM. If a non-recommended HDD is used, HUNT ELECTRONIC USA INC. will guarantee the warranty.

10.4. Registering & Formating HDD

“Disk Manager” will automatically run on start-up installing a HDD as below;

If “Disk Manager” deos not automatically run on start-up, make sure the HDD is properly installed.

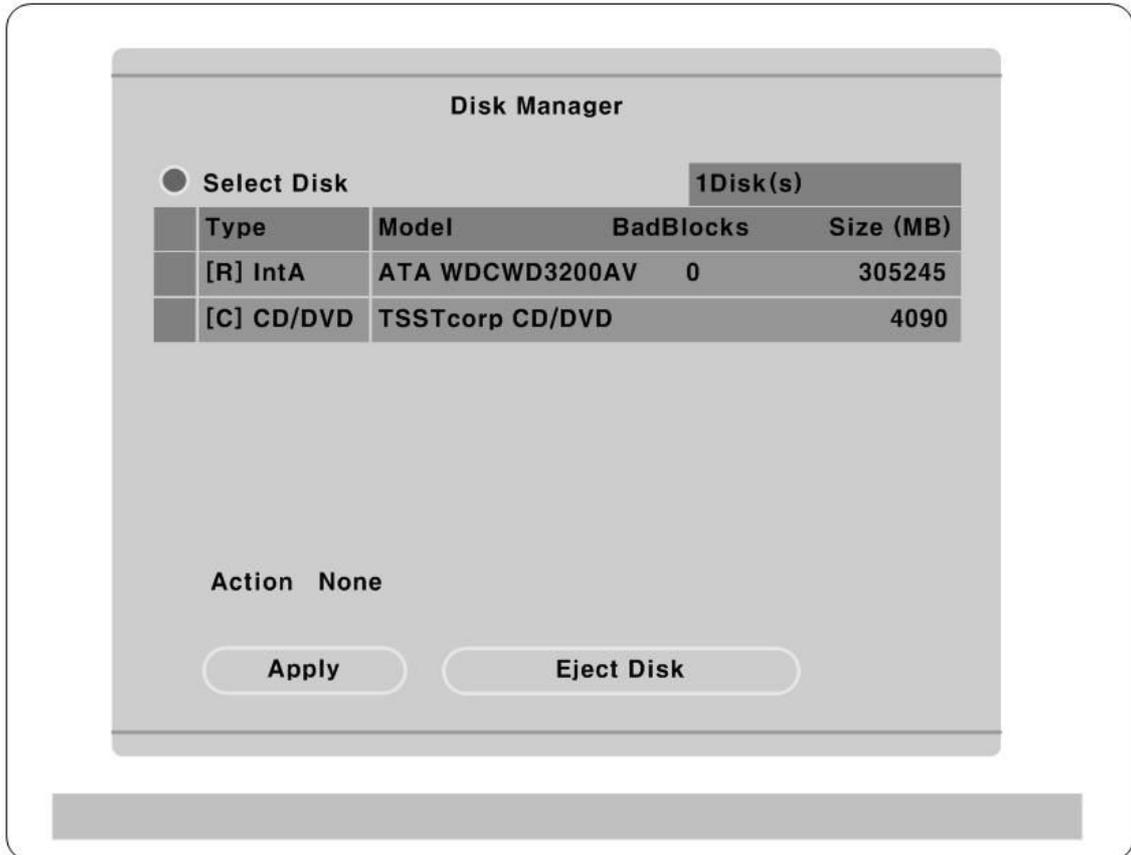


- (1) Press [▷] button marked at “Select Disk”.
- (2) Select new added HDD(indicated as “[F]”) using [▲/▼] button and press [EXIT].
- (3) Select “Action” using [▲/▼] button and press [▷].
- (4) Select “Add” using [◀/▶] button and press [EXIT].
- (5) Select “Apply” using [▲/▼] button and press [▷]. The HDD status is changed to “[R]”.
- (6) Shut down “Disk Manager” by pressing [EXIT] button.

11. Network monitoring & managing

HVRM can be accessed, controlled, and managed from remote site using PC via Internet/ Intranet, which is same way as local access for controlling & monitoring features.

11.1. Connecting Ethernet

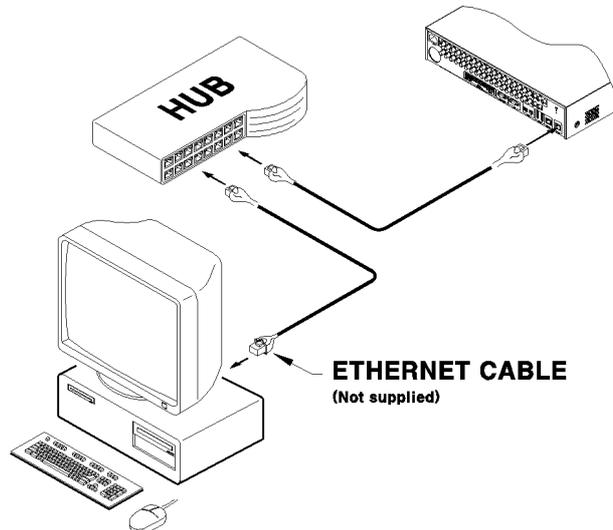


- (1) Turn off power switch of HVRM
- (2) Connect HVRM to hub with Ethernet cable
- (3) Turn on power switch of HVRM

<Note>

1. Supply power to HVRM after connecting Ethernet cable to protect against electrical damage to HVRM.
2. Check cable connection status.
3. Check LED on rear panel of HVRM after supplying power.

11.2. Configuring Network information of HVRM

The following description is based on Ethernet connection. For more detailed information on the Network setting page and way of using xDSL, please refer "*User's Guide*".

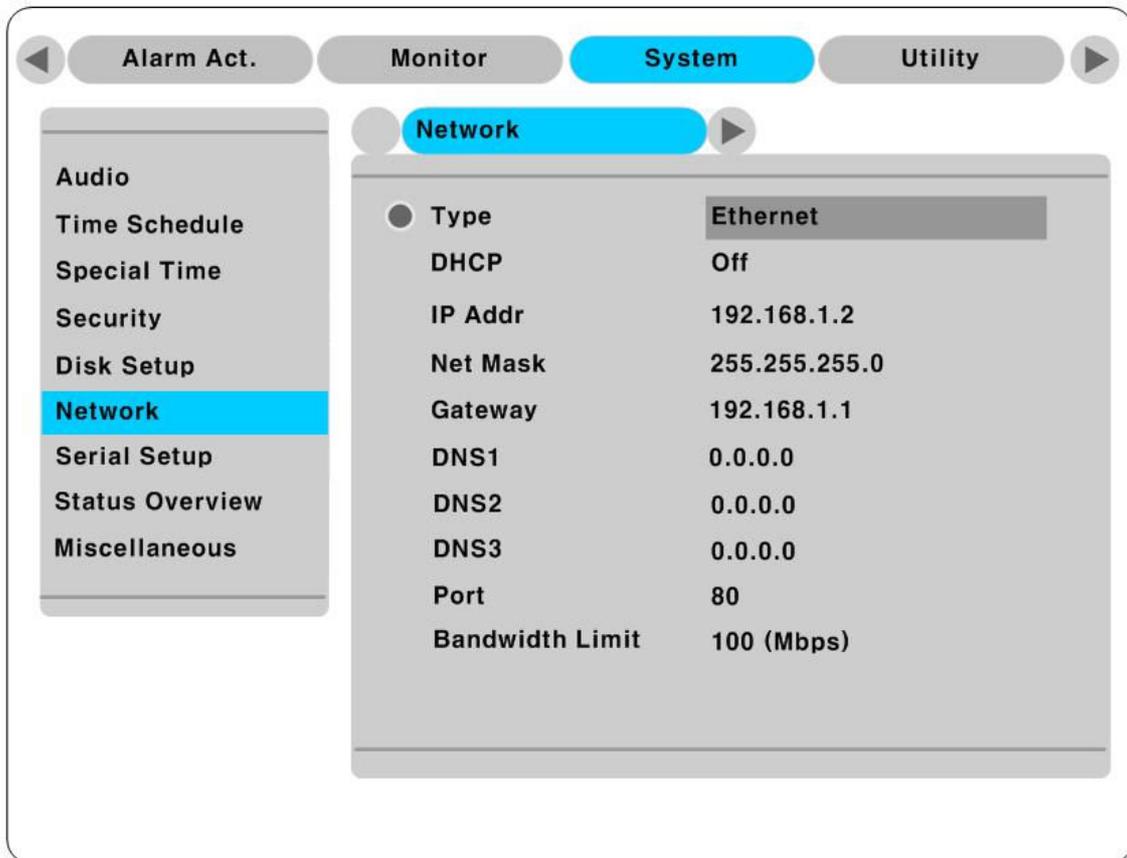

- (1) Press [MENU] button
- (2) Select "System" using the [◀/▶] buttons and press the [▷] button.
- (3) Select "Network" using the [▲/▼] buttons and press the [▷] button.
- (4) Select "IP Addr" using the [▲/▼] and press the [▷] button.
- (5) Press [EXIT] button after entering IP address in the dialogue box.
- (6) Select "Net Mask" using the [▲/▼] buttons and press the [▷] button.
- (7) Press [EXIT] button after entering Net Mask in the dialogue box.
- (8) Select "Gateway" using the [▲/▼] and press the [▷] button.
- (9) Press [EXIT] button after entering Gateway in the dialogue box.
- (10) Select "DNS" using the [▲/▼] buttons and press [▷] button.
- (11) Press [EXIT] button after entering DNS in the dialogue box.
- (12) Press [EXIT] button to exit to monitor mode

12. Using Control Center Lite

Control Center Lite is a DVR Management Software and it makes DVR installation & setting more easier through a PC which is connected with DVR in Network. All configuration could be handled in OSD menu of DVR without a PC, however, Control Center Lite makes the complete setting more simply.

12.1. Starting

To do setting DVR through Control Center Lite, PC and DVR should be connected via Network and installed Control Center Lite on the PC.


12.1.1. PC system requirements for running Control Center Lite

	Minimum Requirements	Recommended Requirements
CPU	Intel Pentium4 3Ghz (Hyper-Thread)	Intel Core™ 2 Duo 1.86Ghz (FSB 1.066Ghz)
Memory	512MB	2GB
Video Card	128MB	128MB
Resolution	1280 x 1024	1280 x 1024
HDD recording space	1GB or higher	1GB or higher
OS	Windows XP SP2	Windows XP SP2
Etc.	DirectX 8.1 or higher	DirectX 8.1 or higher


12.2. Installing Control Center Lite

1> Execute "1.x.x.x Setup.exe" file in Control Center Lite Set up CD.


To install Control Center Lite, user level of the PC should be Administrator mode.

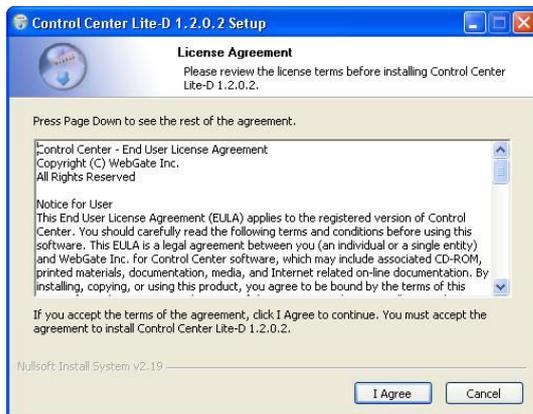

2> Click "I Agree" button to accept the license agreement

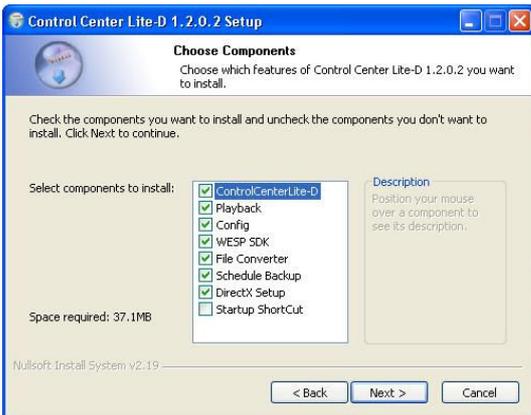

3> Select components which wish to install and press “Next” button.
 “WESP SDK” must be installed.

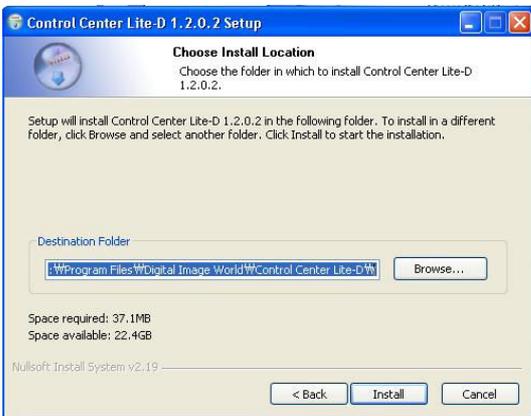

4>.Click the “Install” button after selecting a directory to be insatalled.

12.3. Log-In




Enter User Name, Password and press “Ok” button.

The factory default value : User Name:Administrator, Password:admin

12.4. Configuration Tool



Click the icon on the desk top to run “Control Center Lite Configuration Tool”.

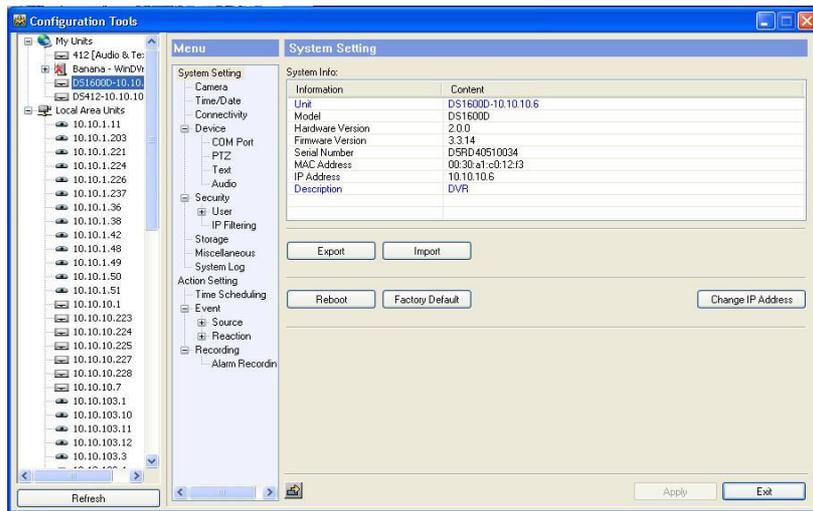


12.5. Monitor

* Max. 5 users could be connected simultaneously in one unit of HVRM.



Click the icon on the desk top to run “Control Center Lite Monitor”.

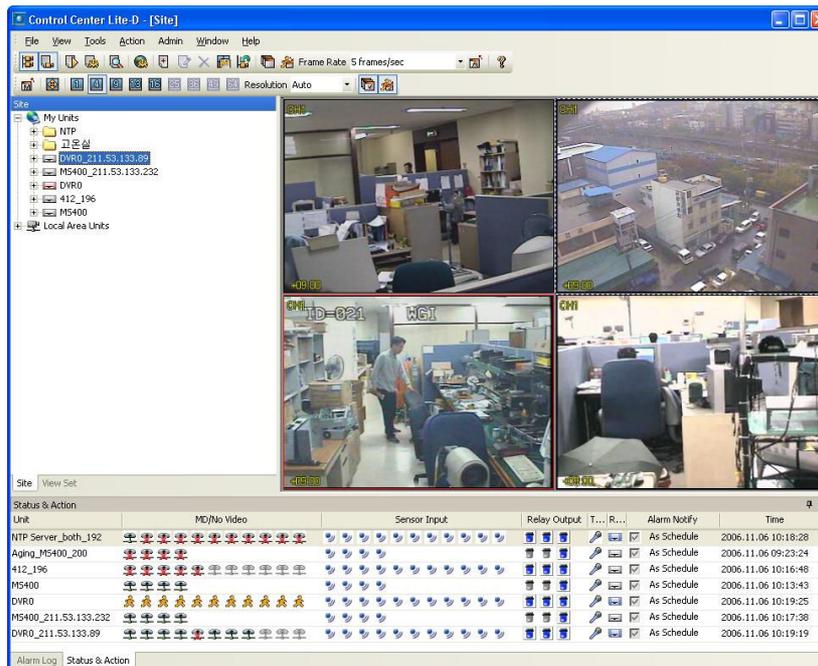


12.6. Playback

* Max. 2 user could be connected for playback in one unit of HVRM.




Click the icon on the desk top to run "Control Center Lite Playback".

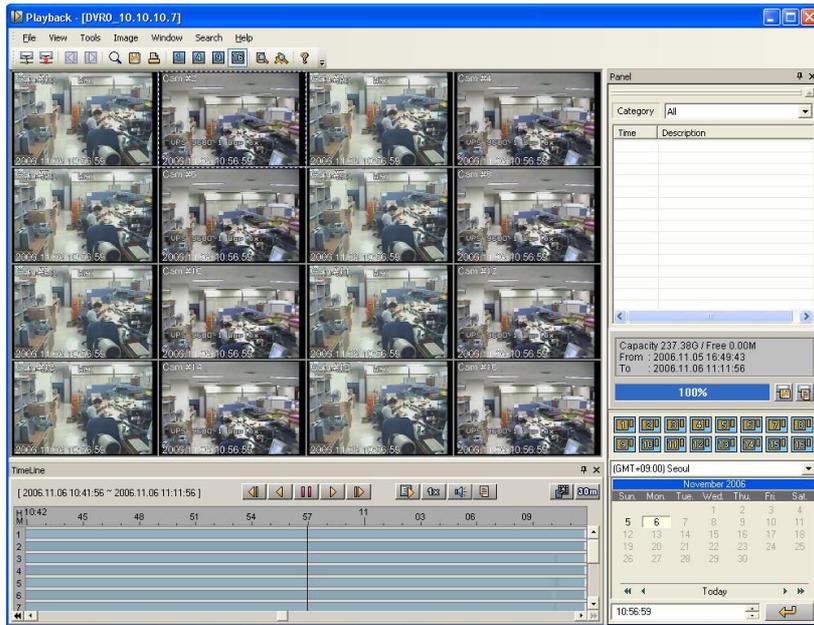

User's Guide

13. Description

13.1. Front Part

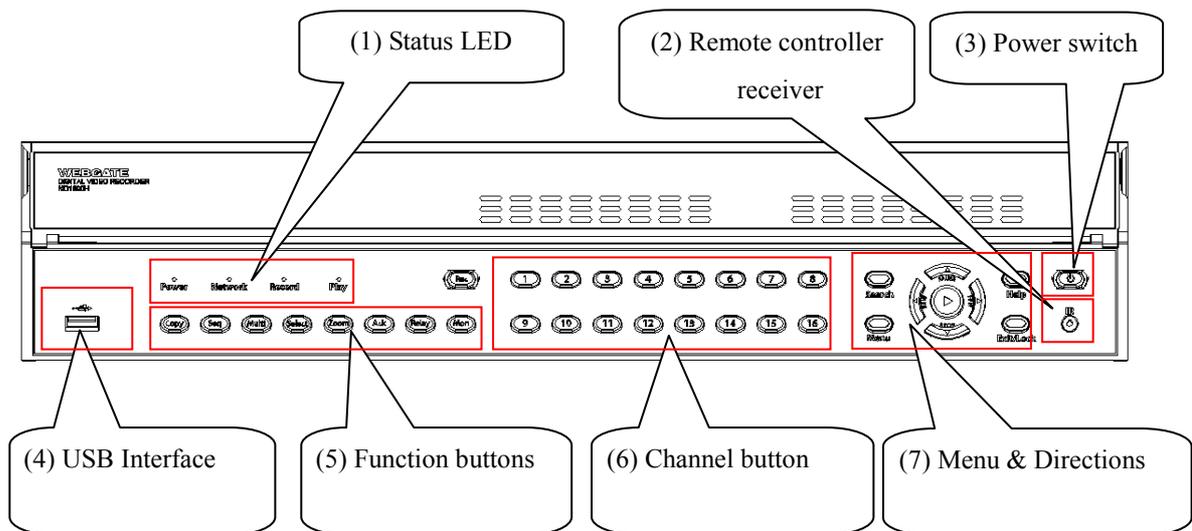

(1) Status LED

Power : It indicates Power input, and light on at Power in.

Network : Indicates Ethernet & communication status and twinkle as much as image delivery via Ethernet.

Record : Indicates video recording, and twinkle as much as image record

Play : Indicates Playback mode and twinkle as many as image played at playback mode. Also, twinkle as many as image delivered per second when it connects to Control Center Lite-D Playback.

(2) Remote controller receiver

(3) Power Switch

It is the switch to Power On/Off. While the system Off, press longer than 5 sec. to display admin/password input screen. Then input password to turn power off.

(4) USB Interface

Supply 1 USB port

(5) Function buttons

- COPY** : Function to copy recorded images
In single monitoring mode, press the button to activate COPY menu
- SEQ** : Function to display all video connected sequentially
Press more than 1 sec. to operate User Sequence mode
- MULTI** : Function to monitor multi video images in a screen((4/9/16 division channel)
- SELECT** : Function to select video channel to control PTZ in Monitor model.
And function to select video channel to Copy/Backup/Delete in Playback mode.
- ZOOM** : Zoom video image at 1 channel mode
- ACK** : Cancel alarm output that is set to Latched
- RELAY** : Relay On/Off in Monitoring mode and return to original status when alarm pop-up
- MON** : Function to select Monitor(1~4) to control
Press the button and monitor number to control relevant monitor
- REC** : Function to start/stop recording by user
Start/Stop user recording according to set in advance

(6) Channel Select button

Select video channel when monitoring & playback


Below color LED on each channel button indicates the following status

- LIGHT** : Indicates Monitoring
- BLINK** : indicates Alarming

(7) Menu & directional button

- SEARCH** : Search the recorded image data at Playback mode
- MENU** : PTZ Control or Setup Menu function
- HELP** : Indicate each video data(Date, Channel name, HDD status etc.)
- EXIT/LOCK** : Move upper menu at Setup or Screen Lock
- PALY** : Use as ENTER button during Menu operating, and use as PLAY button when playback the recorded video data
- Directonal Key** : Playback function at Playback mode, or else to move direction indicate
- REW** : Each press of the button will increase reverse playback speed gradually
(x1, x2, x4, x8, x16, x32, x64)
- FFW** : Each press of the button will increase playback speed gradually
(x1, x2, x4, x8, x16, x32, x64)
- PAUSE** : To pause Live/replaying
- STOP** : To stop replaying

13.2. Rear Part

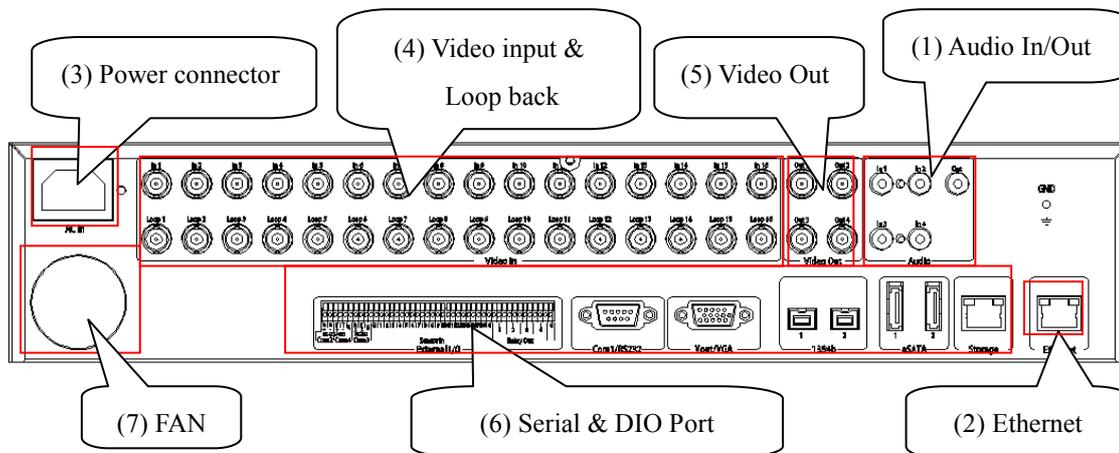

(1) Audio In/Out

4 Audio input & 1 output

(2) Ethernet

(3) Power connector

(4) Video Input & Loop back

16 video input & Loop back terminal (H1600L, H1600M)

32 video input (H3200M)

(5) Video Output

4 Video output, 1 VGA Output (H1600L, H3200M)

2 Video output, 1 VGA Output (H1600M)

(6) Serial & DIO port

Sensor In : 16 Sensor input terminal block

Relay Out : 4 Relay output terminal block

COM1 : RS232 9Pin D-Sub connector

COM2 : RS485 terminal block

STORAGE : RJ45 connector

IEE1394 : 2 connection port

eSATA : 2 connection port

(7) FAN

13.3. Summery of Installation

- Camera connection
- Monitor connection
- Ethernet connection (for remote connection)
- Audio connection
- Power connection & Operation

<Note>

Extension through NVS04R, IEEE 1394b will be supported later.

For the details, please contact to local distributor.

BASIC STRUCTURE

14. Monitoring

All analog video image channels connected to HVRM is displayed to screen by Power connection. It is to utilize all monitoring mode of HVRM series.

<Attention>

H1600L, H3200M support Quad monitor(1~4), and H1600M supports Dual monitor(1~2). And Monitor 1~4 support all functions as follow.

Therefore, the following functions explains base on all Monitor 1~4.

14.1. Basic Screen monitoring

- It turns on automatically when HVRM powered on.
- It boots with LED on.
- After booting, 16 channel screens are displayed.
- ※ If there is user password set, Password input window will be displayed.



14.2. Single full screen mode

- Press the channel number wanted.
- Press [MULTI] button to return divisional screen.



14.3. Multi screen mode

- Press [MULTI] for multi channel display.
- Press [MULTI] button every time, screen mode is changed to 4 / 9 / 16 division mode.

14.4. Manual Recording

By the press [REC] button for user recording, it records as long time as it set the time. It is prior to Normal Rec, Event Rec. And it records by user recording set in disregard for any recording setup when user recording starts.

14.5. Auto Switch mode


There are System Standard modes and User Defined mode in Auto Switch mode. And Users Sequence mode operates by the press [SEQ] button 1 sec longer.

<Attention>

System standard mode is capable to use when channel division is more than the number camera connected. Namely, single at 2 or more cameras, 4 division modes at more than 5 cameras should be connected. 16 division mode does not support auto switch function.

14.5.1. System Standard mode


- By [SEQ] button, it can monitor auto switching of all channels.
- Press [MENU] for the setting switching term.
- Move to “Monitor” from OSD menu.
- Press [▷] to move from “Monitor” to “Monitor 1”.
- Select “Seq. Switching(sec)” and set value from 1 sec. to 60 sec. At OFF set, auto switch mode does not operate.

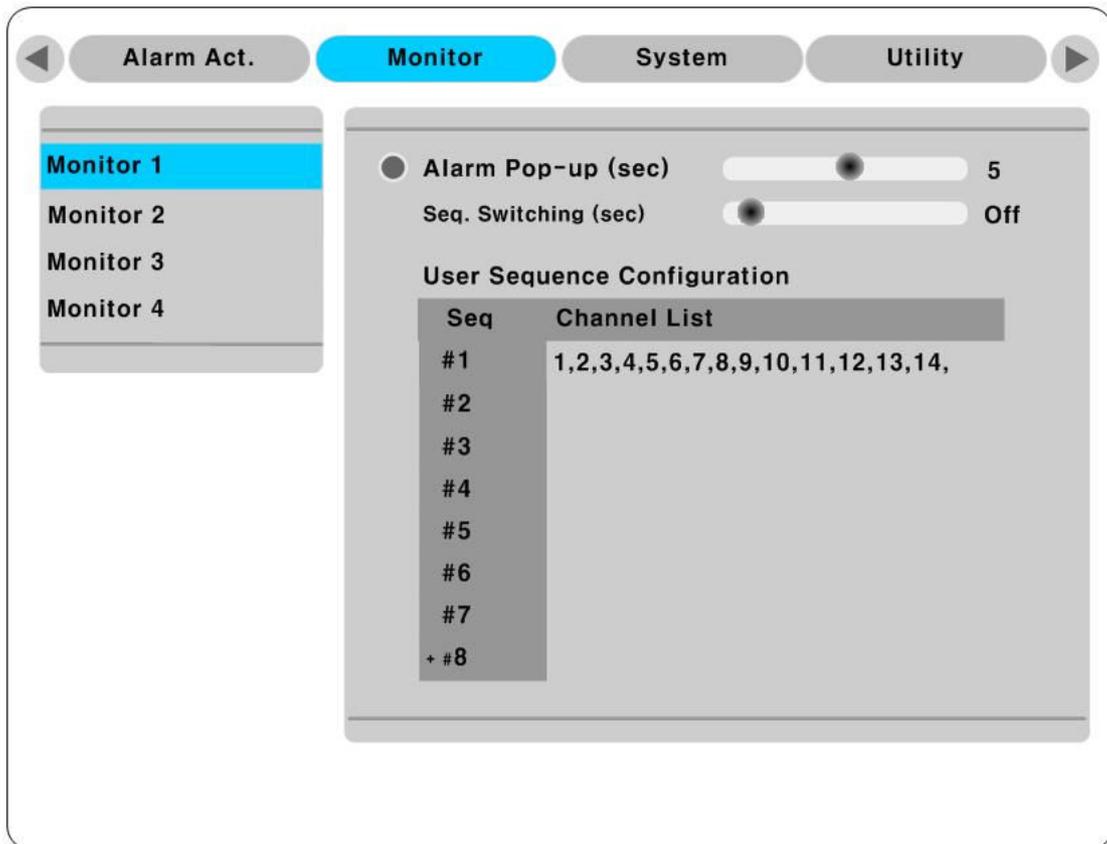

- Auto Switch mode can be set in every division mode by the press [SEQ] button.
- Press [SEQ] button once more to leave from Auto Switch mode.

14.5.2. User Sequence mode

- Press [SEQ] button longer than 1 sec.
- User Sequence is to set User Sequence Configuration from “Monitor 1” in OSD menu.

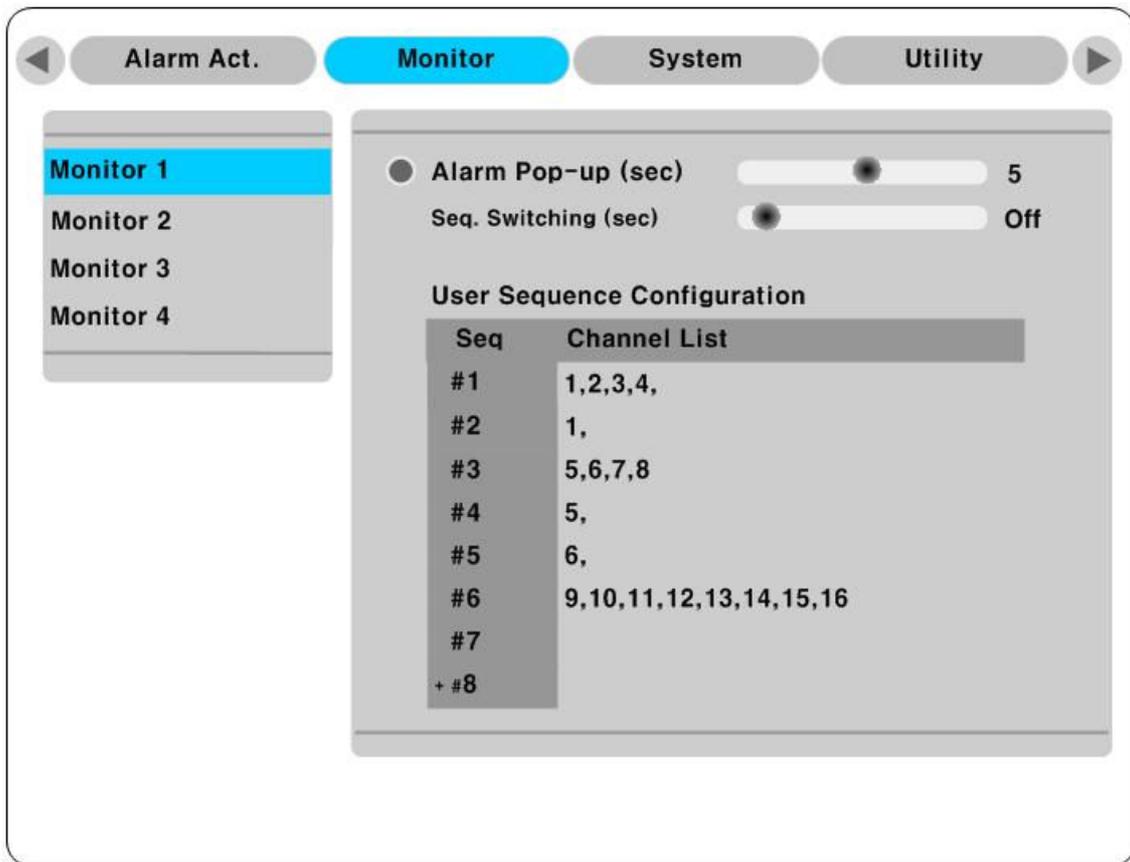

<Attention>

1. User mode can define max. 16 channels.
2. The above picture defines 6 Sequence, and it is displayed in order as 4 division(1,2,3,4) → Full screen(1) → 4 division(5,6,7,8) → Full screen(5) → Full screen(6) → 9 division(9,10,11,12,13,14,15,16).
3. Monitor 1, 3 can set channel 1~16, and Monitor 2, 4 sets channel 17-32. Channel area is divided by each Monitor.

14.6. Alarm mode

- It can be set to Pop-up automatically relevant screen when alarming.
- Set pop-up period can be set into “Alarm Pop-up (sec)” inferior to “Monitor” menu.
- At the simultaneous alarming in several channels, it displays the division as many channel as alarmed. For example, when 3 channels alarm, 4 divisions is displayed on screen. And press any button to return original channel.

<Attention>

1. If Alarm Pop-up Hold (sec) set to Off, Alarm Pop-up will not operate.
2. If Alarm Pop-up Hold (sec) set to Keep, it does not return to previous screen before press any button.

14.7. Zoom Screen mode


- At single full screen mode, press [ZOOM] to monitor 2x image size.
- Default zoom screen locates to main center when press [ZOOM] button. Zoom image can shift left-right in 18 steps and top-bottom in 12 steps.
- Use directional key button to screen move
- Press [ZOOM] one more to return to original screen.

14.8. Pause Live screen

- Live screen can pause like PlayBack.
- Press [PAUSE] to pause live screen and press [▷] to return live screen.

14.9. PTZ Control

Connect PTZ controller to HVRM and set relevant protocol from “Serial Setup” menu, then PTZ can operate while monitoring live images.

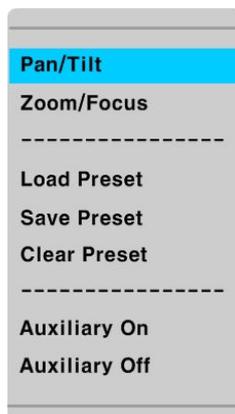

- Press [SELECT] button first.
- Channel select icon is on the screen,
- Shift to channel to control PTZ with directional key. (Press [SELECT] at single screen mode)
- Press [MENU] at channel selection icon displayed to view PTZ (Pan/Tilt, Zoom/Focus, Load Preset, Save Preset).
- Select any wanted menu from them and press [ENTER].

14.9.1. Pan/Tilt Control

This menu is used to control Pan & Tilt function at real-time monitoring mode.

- Press [SELECT] button and select Channel.

- Press [MENU], then select 'Pan/Tilt' from OSD.
- Control Pan/Tilt through directional key at front part.

14.9.2. Zoom/Focus Control

This menu is used to control Zoom & Focus function at real-time monitoring mode.

- Press [SELECT] button and select Channel.
- Press [MENU], then select 'Zoom/ Focus' from OSD.
- Control Zoom/Focus through directional key at front part.

14.9.3. Utilizing Load Preset

This menu is used to shift to Preset Set at real-time monitoring mode.

- Press [SELECT] button and select Channel.
- Press [MENU], then select 'Load Preset' from OSD.
- Press relevant Number button of Preset set.

14.9.4. Utilizing Save Preset

This menu is used to set new Preset at real-time monitoring mode.

- Control camera location using 'Pan/Tilt' and 'Zoom/Focus' menu.
- Press [SELECT] button and select Channel.
- Press [MENU], then select 'Save Preset' from OSD.
- Press relevant Number button to set in Preset.

14.9.5. Utilizing Clear Preset

This menu is used to initialize Preset at real-time monitoring mode.

- Press [SELECT] button and select Channel.
- Press [MENU], then select 'Clear Preset' from OSD
- Press relevant Number button to initialize Preset.

14.9.6. Utilizing Auxiliary On

This menu is used to utilize specific function in PTZ device at real-time monitoring mode.

- Press [SELECT] button and select Channel.
- Press [MENU], then select "Auxiliary On" from OSD
- Press relevant Number button of specific function (Aux function is available to max 16 functions.)

14.9.7. Utilizing Auxiliary Off

This menu is used to stop operation of specific function of PTZ device.

14.10. Relay control


The function to Relay On/Off. (H1600L supports 4 Relay Output.)

- Press [RELAY] button to display “Relay On” icon on screen.
- Then Relay Out signal is out by pressing the relevant number of Relay among 1~4 number button.
- Press [RELAY] to Relay Off.
- Display “Relay On” icon while Relay On is working.
- Then “Relay Off” icon is displayed on when press [RELAY] button once more.
- Press relevant Relay button to Relay Off.

14.11. Screen Lock control

The function to prevent unauthorized user operating the menu at will.

Set “User Password” first to use this function.

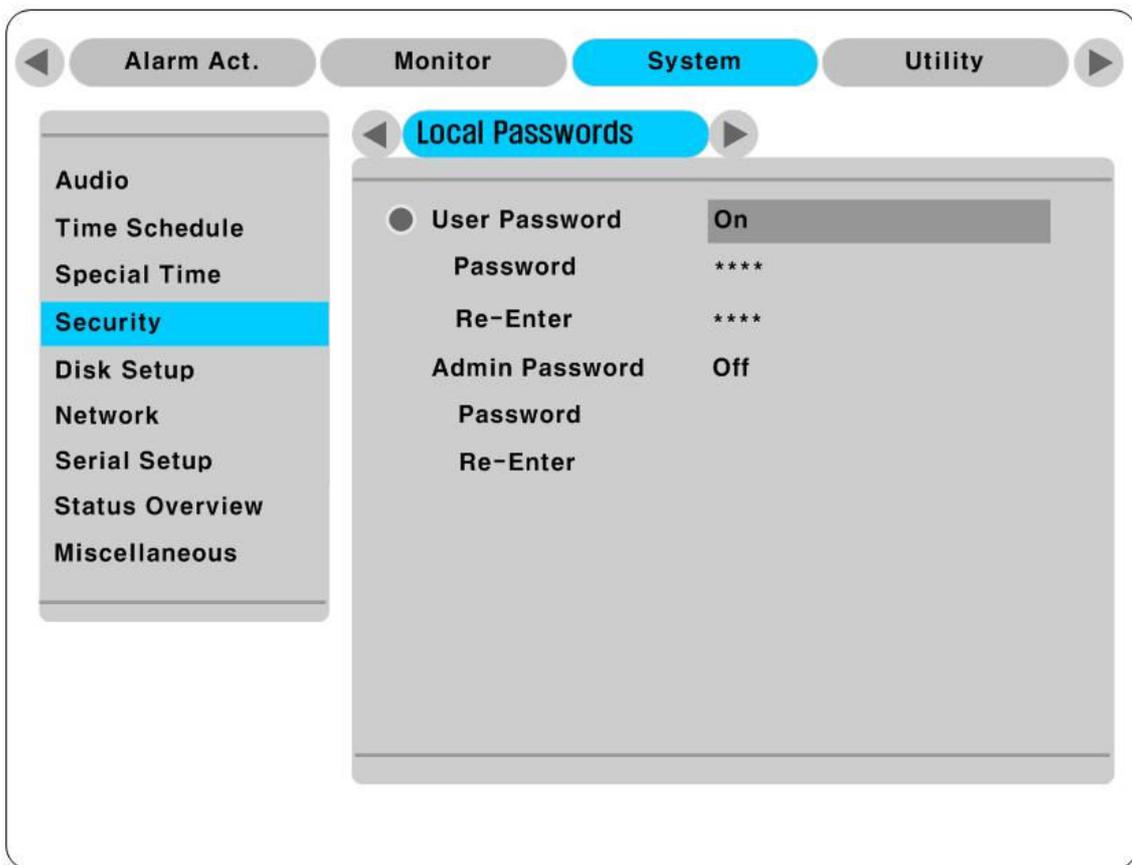


Press [EXIT/LOCK] button over 3 sec. to operate Lock mode with message “Screen Locked” on the bottom of screen. When “User Password” is Off, the message “Enable user password first” is on the screen.

At the Lock mode, any button does not work. It must release to operate function button. At Lock mode,

window for user password input will be displayed at any button press. And Lock mode will be released with correct password input.

14.12. Utilizing Quad monitor


14.12.1. H1600L Monitoring

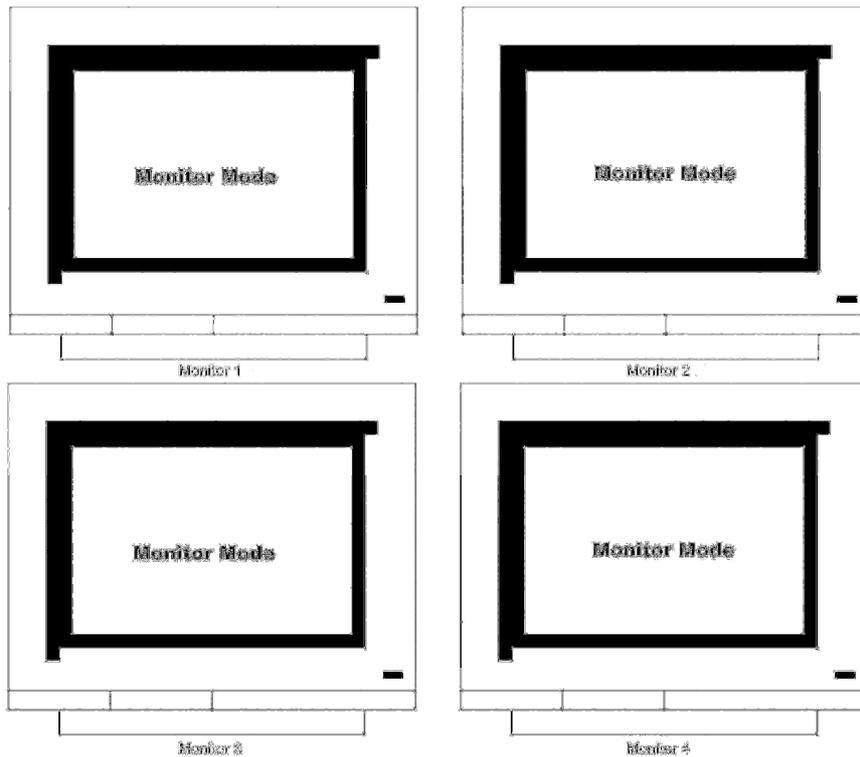

Monitor 1 monitors several video channels, and Monitor 2 is for bigger screen of channel 1. Also Monitor 3 for Sequence mode and Monitor 4 is capable of monitoring Alarm Pop-up images. Every Monitor 1~4 can be set in following conditions separately.


Monitor 1	Monitor 2	Monitor 3	Monitor 4
Multi Monitor	Single Monitor	Sequence Monitor	Alarm Pop-up Monitor
Single Monitor	Sequence Monitor	Alarm Pop-up Monitor	Sequence Monitor
Sequence Monitor	Alarm Pop-up Monitor	Multi Monitor	Single Monitor
Alarm Pop-up Monitor	Multi Monitor	Single Monitor	Sequence Monitor

14.12.2. H1600L Monitoring & Playback

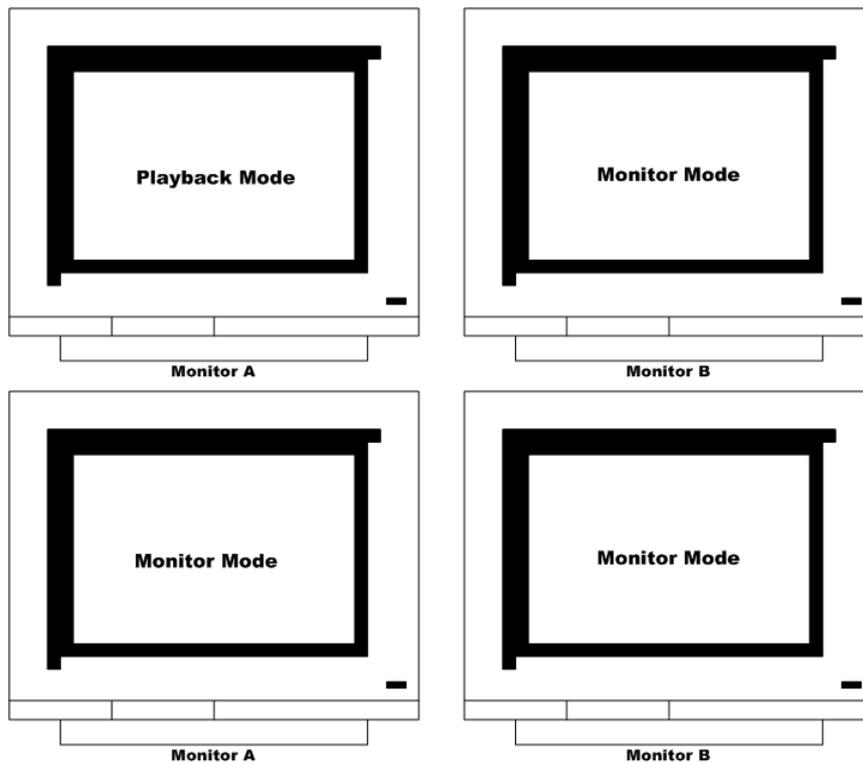

Monitor 1~4 are capable of searching several video/playback in single & divided screen. Namely, several channels can be monitored and playback separately and simultaneously. But Playback can be monitored in 1 monitor among Monitor 1~4, and the rest 3 monitors for monitoring.

14.12.3. H1600M Monitoring

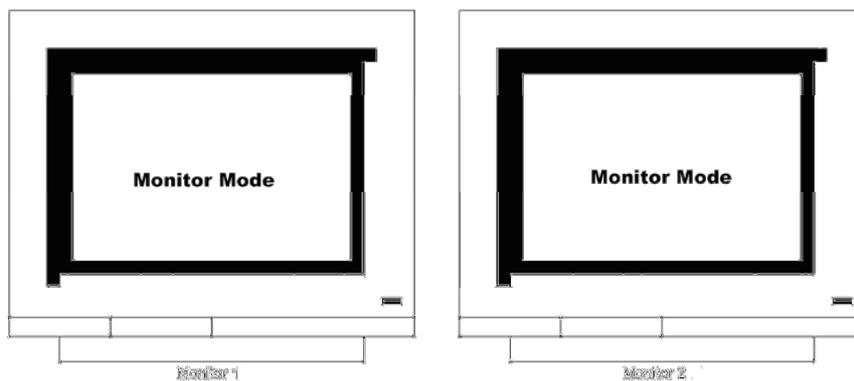


Monitor 1 is for multichannel videos, Monitor 2 is use for full screen of 1 channel and also monitoring Alarm pop-up & Sequence image.

Following conditions can monitor in various combination. Monitor 1, 2 can be set under every conditions below individually.

Monitor 1	Monitor 2
Multi Monitor	Single Monitor
Single Monitor	Sequence Monitor
Sequence Monitor	Alarm Pop-up Monitor
Alarm Pop-up Monitor	Multi Monitor


14.12.4. H1600M Monitoring & Playback

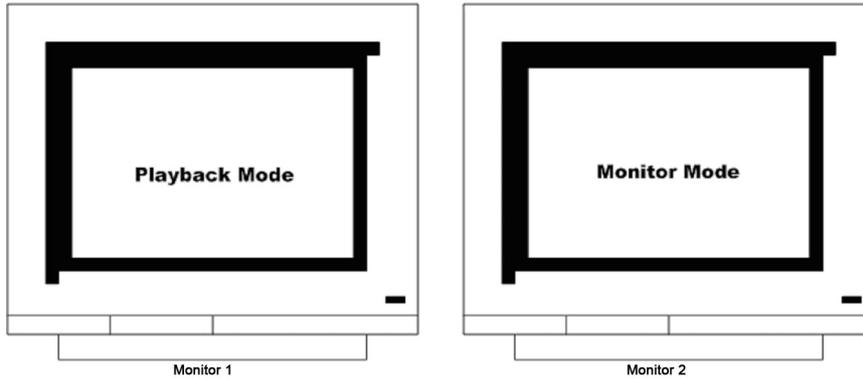

Monitor 1, 2 can search/playback every images in Single or multi divisions. Namely, Monitoring and Playback is possible simultaneously.

But Playback is available in 1 monitor only among Monitor 1, 2. The other monitor is available for monitoring.


14.12.5. H3200M Monitoring

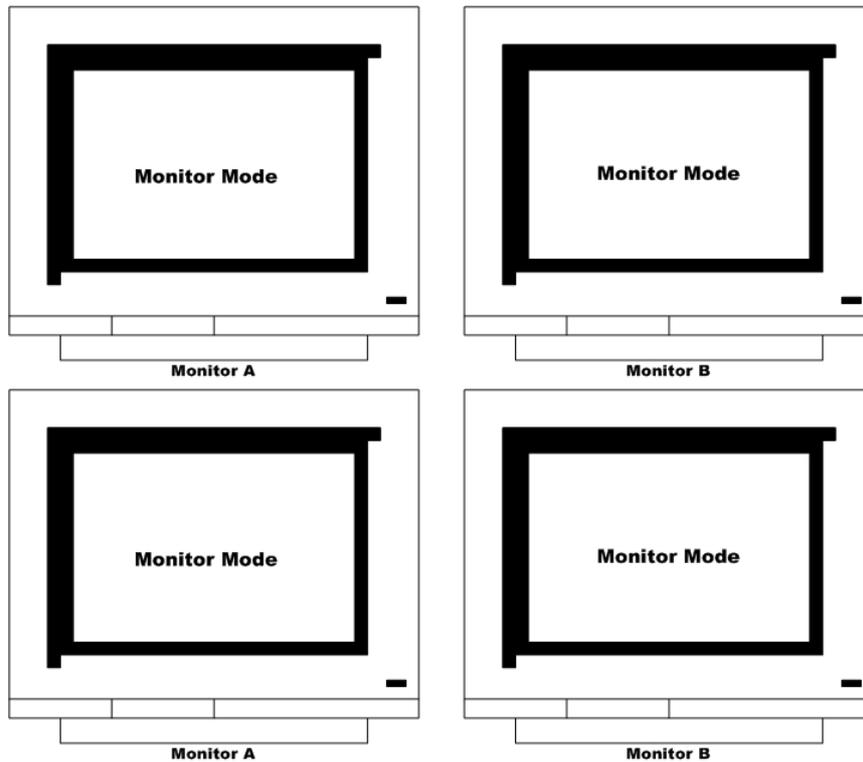

H3200M can only display and setup channel 1 to 16 to Monitor 1 & Monitor 3, and channel 17 ~ 32 to Monitor 2 & Monitor 4. Every Monitor 1~4 can be set in following conditions separately..

Monitor 1	Monitor 2	Monitor 3	Monitor 4
Multi Monitor	Single Monitor	Sequence Monitor	Alarm Pop-up Monitor
Single Monitor	Sequence Monitor	Alarm Pop-up Monitor	Sequence Monitor
Sequence Monitor	Alarm Pop-up Monitor	Multi Monitor	Single Monitor
Alarm Pop-up Monitor	Multi Monitor	Single Monitor	Sequence Monitor

14.12.6. M3200M Monitoring & Playback

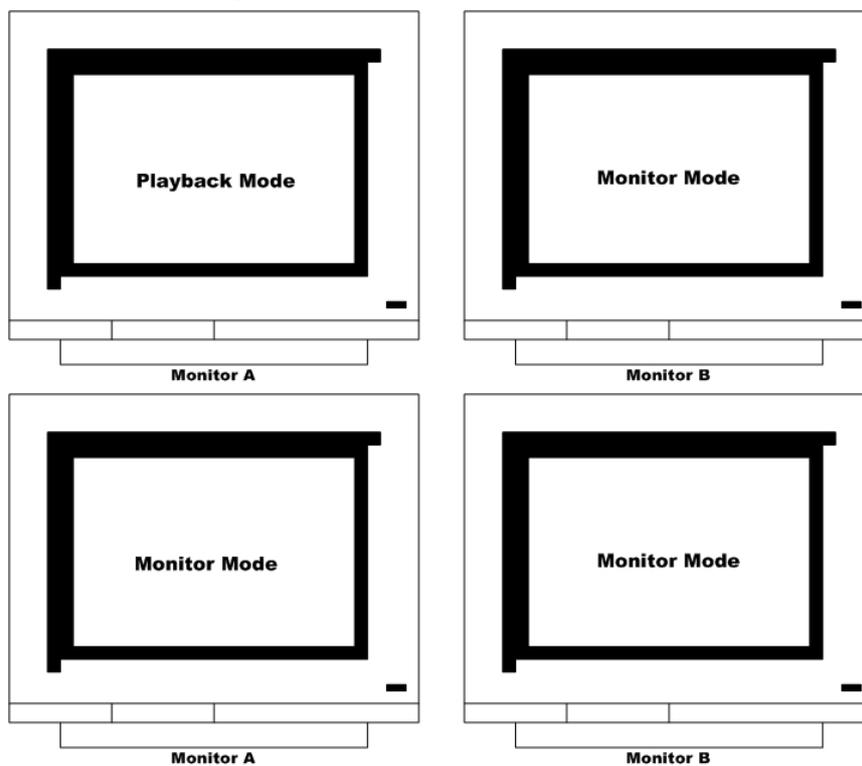

Monitor 1~4 are capable of searching several video/playback in single & divided screen. Namely, several channels can be monitored and playback separately and simultaneously. But Playback can be monitored in 1 monitor among Monitor 1~4, and the rest 3 monitors for monitoring.

15. Playback

15.1. Various Playback mode(Playback)

15.1.1. Playback on standard monitor (16 division)

- Press Playback button [▷] at Monitoring mode.
- It playback images with initial 1x speed.

<Attention>

At Monitor mode, Playback button will play the recorded image from Channel 1.

Namely, it will always start playback of channel 1 from 30sec. ago.

At the time, the data of image will be shown at the bottom of screen. And the one on top indicates images for 30 min. and the bottom indicates 12hrs.

It also playback video images of the channel that input the wanted channel number.

15.1.2. Playback to divided Channel(4/9/16)

- Press [MULTI] button at single playback screen mode. (Pressing [MULTI] button every time, it is changed 4, 9 16 channel division.)
- Channel 1~4 images is playback in 4 channel division.
- Select channel number to playback single channel playback mode.

15.1.3. Playback channel no. 5~16 at 4/9 channel division

Press [SEQ] button or playback the wanted channel on divisional channel.

- Press [SELECT] button at 4/9 divisional channel.
- Select divisional channel by direction key.
- Playback the images to the location appoint for selected channel number.

15.1.4. Zoon Playback screen

- Press [ZOOM] button at single screen playback mode to displays 2x zoom playback image.
- Pressing [ZOOM] button will locate zoomed images to the center of screen. Zoomed image can shift left-right & top-bottom at 10 and 7 grades.
- Screen shift is carried by direction key button.
- Press [ZOOM] one more to return original screen mode.

15.1.5. Various Playback functions

- ▷ (PLAY)** : Playback 1x speed.
Press [▷] playback button at single monitor mode will playback recorded images of monitoring channel.
Press [▷] playback button at multi monitor mode will always playback recorded images of no. 1 channel.
When the execute playback by pressing [▷] playback button, it playback from the time when user connects to playback lately.
- STOP** : Stop Playback.
- PAUSE** : Pause Playback.
- FFW** : Change Playback speed at every button pressing.(x1, x2, x4, x8, x16, x32, x64)
- REW** : Reverse playback speed at every button pressing. (x1, x2, x4, x8, x16, x32, x64)
If press REW button at Monitor mode, it will reverse playback from the last recorded section, and it will forward play from 1 min. previous if press FFW button.
- STEP FORWARD** : Playback by each frame with [▷, PLAY] or [▶▶, FAST FORWARD] button at PAUSE. Press [■, STOP] and then [▷, PLAY] or [▶▶, FAST FORWARD] to return normal playback.
- STEP REWIND** : At PAUSE, press [◀◀, FAST REWIND] to playback one by one fram in reverse. To return to normal playback, press [■, STOP] and then [▷, PLAY] or [▶▶, FAST FORWARD].

15.2. Search mode

This menu is to playback specific time data from the time frame and searching log at Playback mode.

The screenshot shows a menu interface for the Search mode. It includes fields for 'From' (2007/01/01 10:00:00), 'To' (2007/01/05 11:30:55), 'Date' (2007/01/02), and 'Time' (09:00:00), along with a 'Go' button. Below this is a 'Log Browser' section with a '1 of 2' indicator and a table of log entries.

Time	Log Code
2007/01/01 10:15:30	Rec. Stopped
2007/01/01 11:20:10	Rec. Started

From for the time to start recorded data, To indicates the last time. Select From/To and press [ENTER] to move to the relevant time.

<Order of Button Input>


- Press [SEARCH] at Playback mode.
- Input Date/Time or select relevant Log from Log Browser.
- Press [▷] button.
- Playback searched image.
- Press [EXIT] to exit from Search mode.

<Note> How to use Log Browser

1. Shift each page with Left/Right key.
2. Shift to previous Log block by Up key at first page and first log.
3. Shift next Log block with Down key at last page and last Log.

15.3. Copy / Backup / Delete


This menu describes how to copy/backup/delete recorded images.

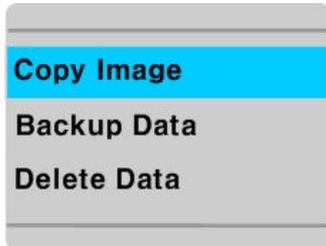

- Press [SELECT] and [MENU] in order and Playback mode.

15.3.1. Copy Image

Use USB Memory Stick etc to copy selected channel images in some part.

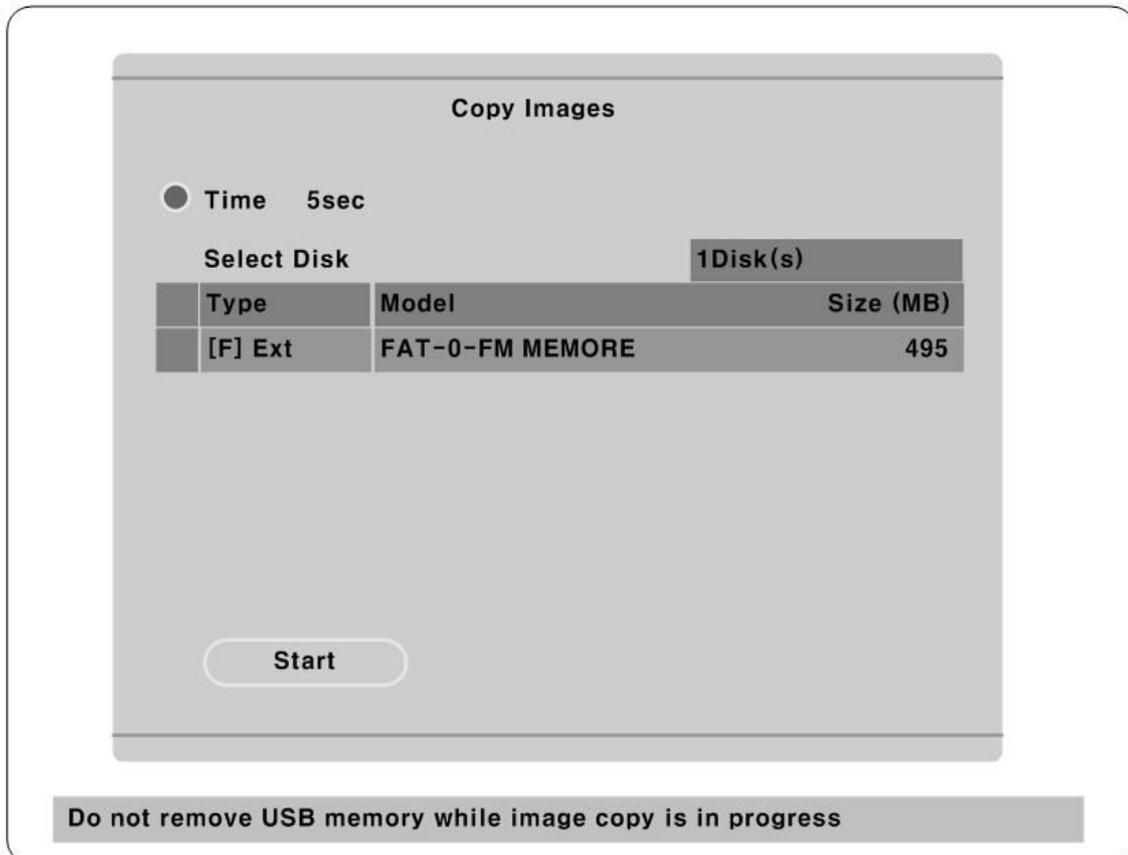


Time

Select the range of Copy. Range of image can set 1sec.~1hrs. from present playback location.

Select Disk

Select the target of Copy.

15.3.2. Backup Data

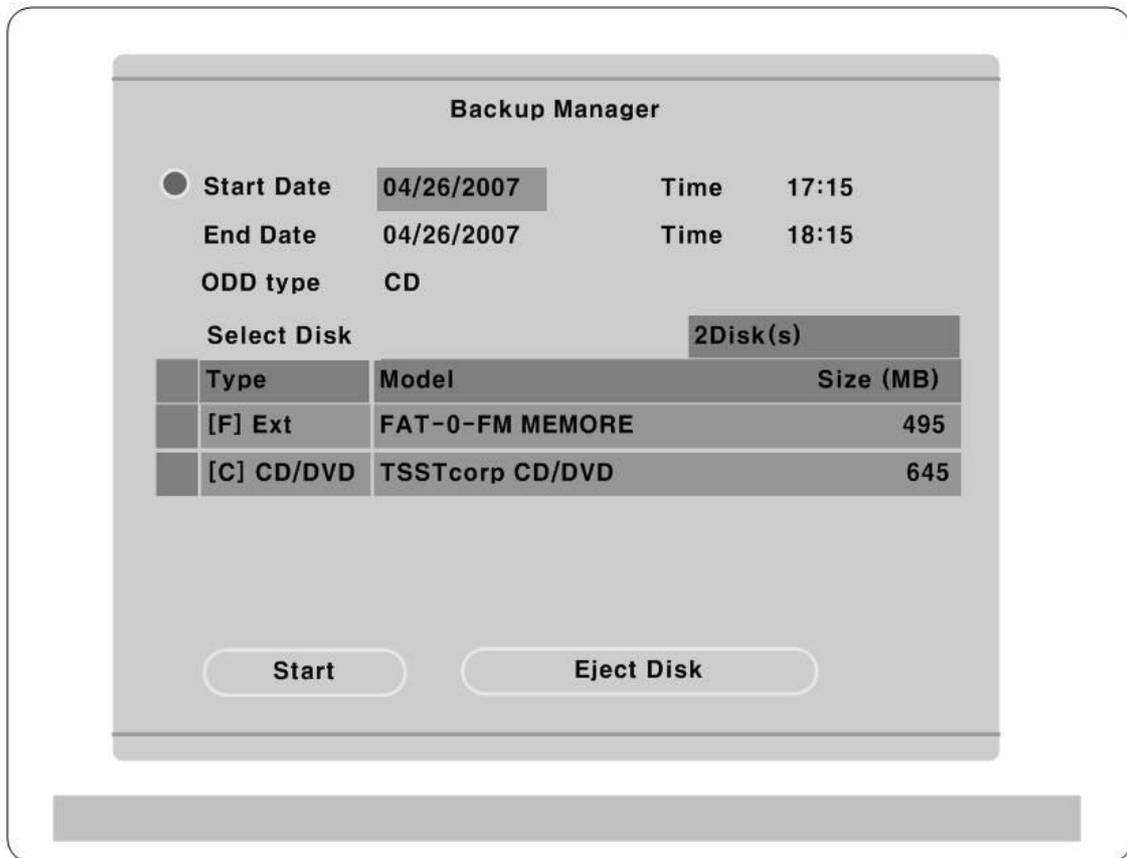

Start Date & Time / End Date & Time

Select the range of backup.

Select Disk

Select the disk to use backup device.

<Note>

Uncompleted backup file 100% can not be played normally in PC

<Note>

It does not support USB device as backup.


It supports CD-R/DVD-R, and over (CD-R Media 700MB / DVD-R Media 4G) in CD-R Media.

It creates re4 in HDD re4, in CD-R vfs4.

<Note>

It supports only DVD backup. CD backup will be supported later.
For the details, please contact to local distributor.

15.3.3. Delete Data

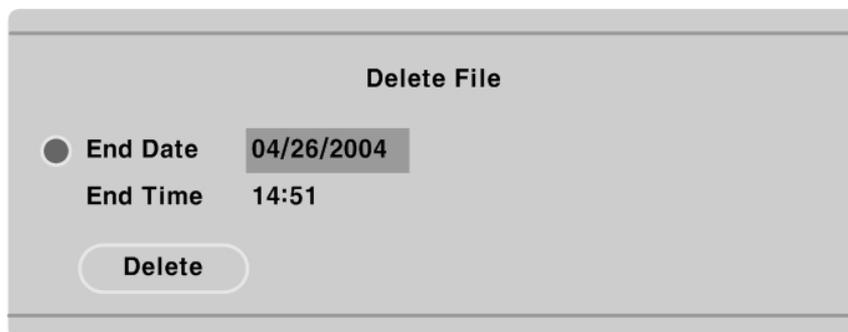

The menu to delete specific range of data in present HDD recorded. Deleted data is limited to present HDD used, and it does not affect to backup disk.

The range of delete data is from oldest data to the data that the time selected.

<Note>

The size of block in HVRM file system is 64MB and delete data is carried in block. So Delete data does not define the accurate time data.

16. Configuration

16.1. Quick Setup

There are 3 methods in Video recording setup - Quick Setup, Recording, Alarm Recording menu. Quick Setup is the menu to set recording easily in same condition of all analog channels. Recording is to set recording in more various conditions by time period or channel. Alarm Recording is to set the recording with alarm. Also, Quick Setup includes Time Set menu.

16.1.1. Time Set(Date/Time)


Factory set of HVRM comes to "UTC 00:00 Dublin" as Time set.

First set in HVRM setup is to set time of relevant area. Time Set is very important to protect recorded data. Change of the time of HVRM[Date/Time] can influence to images recording. And it could make the HDD format.

<Button Input order>

- Press [MENU] at the front of HVRM

- Shift to “Quick Setup” menu
- Shift to “Date/Time” of “Quick Setup” using direction key at Front panel, and press [ENTER] button.
- Normal operation of button in order will make the display following screen.
- Press [ENTER] to shift to each inferior menu after select menu with direction key.

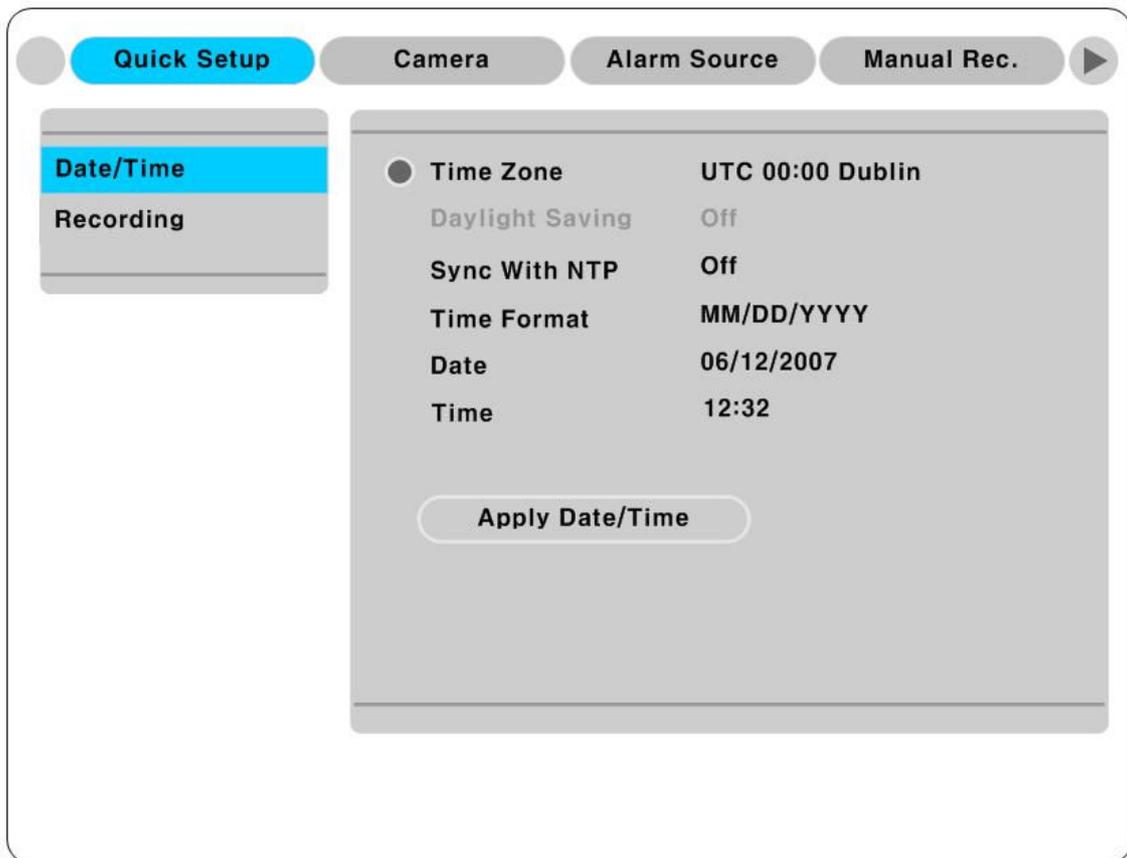

Time Zone

Select the times using left-right directional key from HVRM front. Every time pressing direction changes the time zone. (Press [EXIT] to return to previous menu. It is as same as OSD menu.)

Daylight Saving(Summer Time applied)

This menu is linked to Time zone set menu. Namely, it is activated when selected summer time zone is set from Tim Zone set menu. Summer Time Zone is programmed to apply the time zone from existing MS Windows. At these stages, when HVRM is installed to DST area apply, set Left & Right key whether it applies relevant Summer Time.

Sync with NTP

Select whether synchronize NTP(Network Time Protocol) and Time.

<Note>

Refer to **“NTP Settings”** from **Network Setup** in detail relate to NTP.

Time Format

Select the method of Time Format. Using Left-Right key set Time Formate “MM/DD/YYYY” or “YYYY/MM/DD”.

Date/Time

Using Left, Right key will shift Year, Month, Date menu, and select each menu with Upper & Lower button.

Apply Date/Time

To apply Date/Time value, press “Apply Date/Time” button to display the following window.




<Note>

Other setup can be saved automatically by closing setup menu completely, but “Date” & “Time” does not because it can affect HDD recording File System critically. To save and apply changed data, it must press **[Apply Date/Time]** button manually..

16.1.2. Recording Setup

Quick Setup is to set same conditions to all analog channels in every hour.

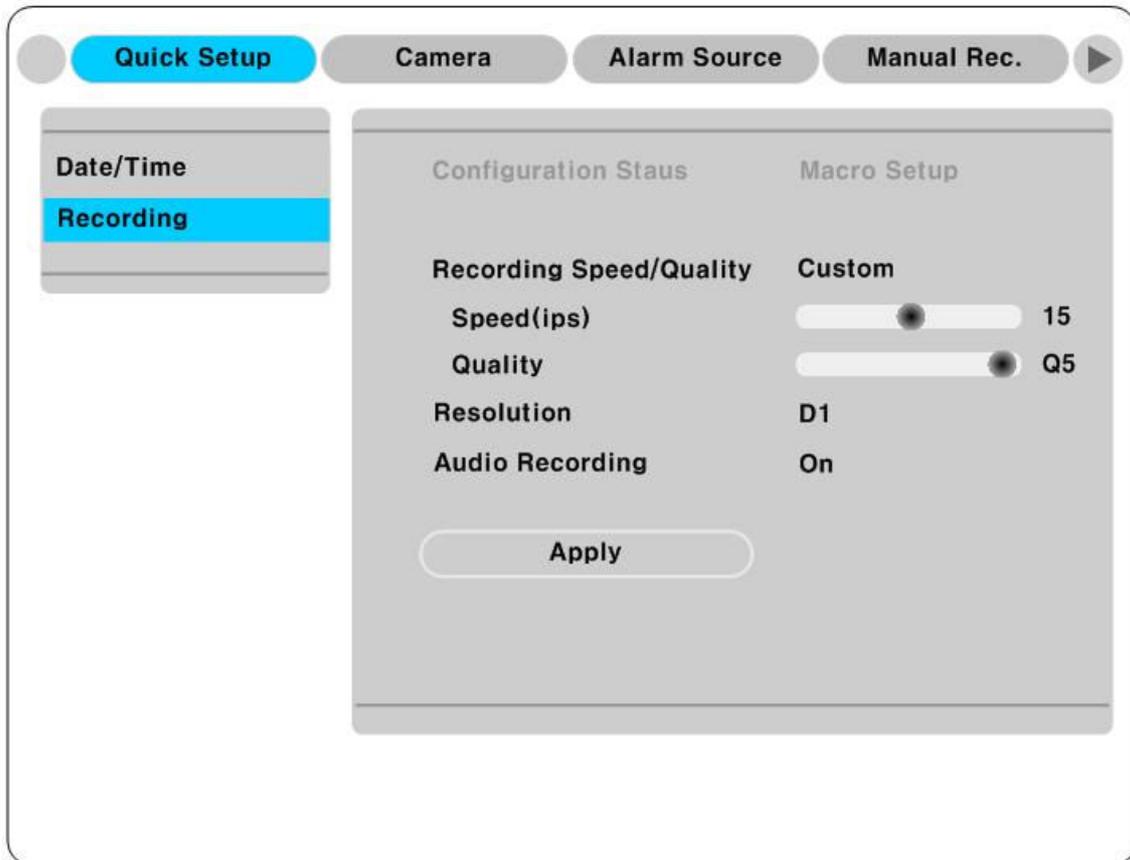

<Button Input>

- Select "Recording" menu inferior to "Quick Setup".

Configuration Status

It just indicates the setup status of recording only. If user sets recording condition to Quick Setup, it is indicated to "Macro Setup" and "Custom Setup" when any set has changed from Recording menu.

<Note>

"Macro Setup" indicates the same of schedule recording of all channels.

Channel Status

Set whether it activates all analog channels. Default value is “On”.

Recording Speed/Quality

There are all 5 setup conditions. (No Rec./Low/Standard/High/Custom).

The conditional Setup except “Custom” comes to auto synchronize with “Speed(ips)”and “Quality”, Quality can set the each separately. At the setup condition of “Alarm Recording”, “Standard”와 “Pre/Post Alarm” is set to each 1 second.

Resolution

recording resolution of all cameras [CIF /Half D1/ Full D1].

Audio Recording

It sets Audio recording. In case of Audion recording set to “On”, “Audio Synch with” is set to “All” and it synchronizes all channels when playback.


Apply

To apply Setup, press “Apply” button, and move to previous menu pressing [EXIT] to start HVRM recording based on the setup condition of recording.

16.2. Camera Setup

This is to setup the condition of every camera. At Quick Setup menu, it sets every camera to the same condition.

Set values are applied in same at monitoring & recording mode.

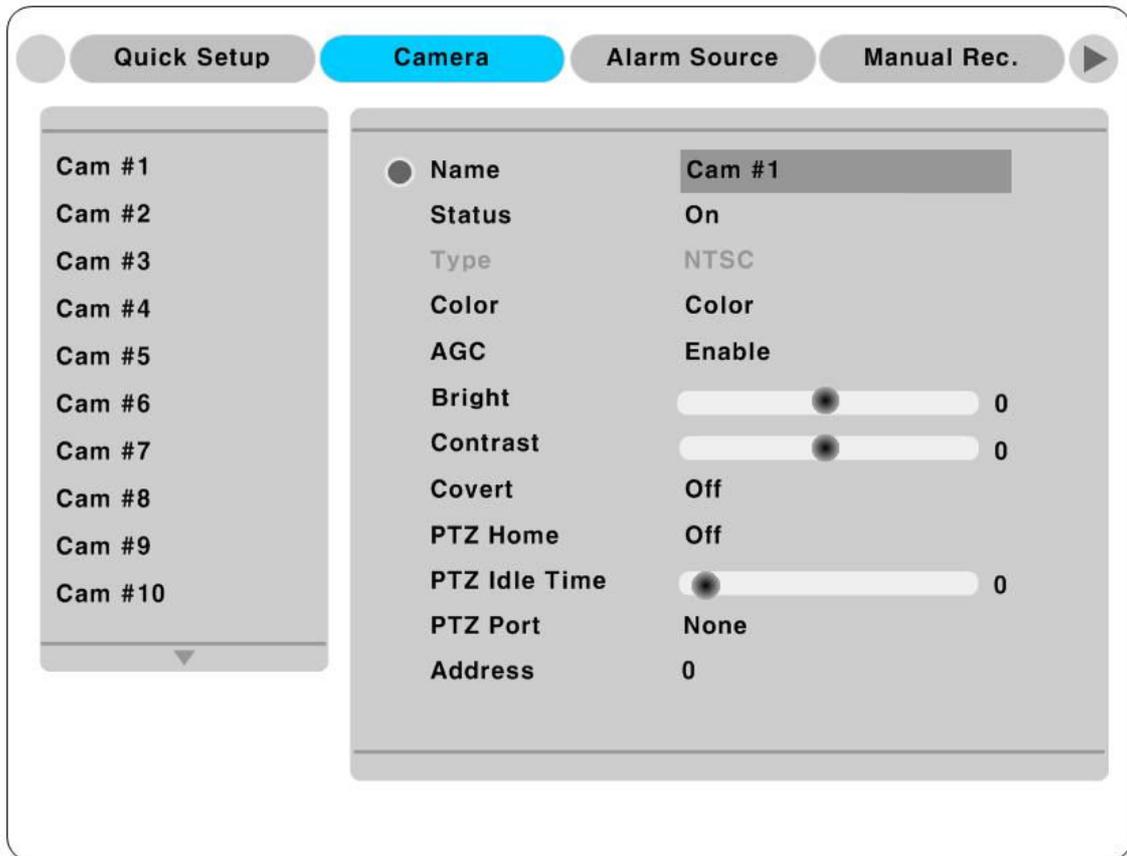

<Button Input order>

- After pressing [MENU], shift to "Cam # 1~Cam #16" inferior menu of "Camera".

Name


Set Camera name.

Press [ENTER] to display the letter set menu.

<TIP>

Display Letter input window to input characters.

According to menu, letter input window can be different, but Set is the same.

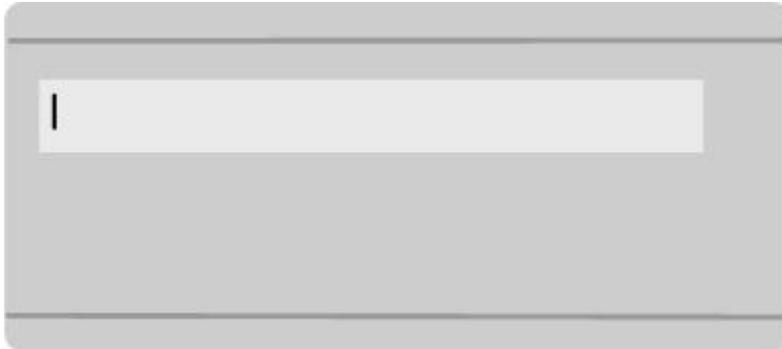

- Use direction key for letter input.
- Select letter using [▲/▼] button.
- Press [▶] to input after select the input letter.
- Press [◀] to Shift back and delete.
- Available letters
 - Digit : 1 2 3 4 5 6 7 8 9 0
 - Capital letter : A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
 - Small letter : a b c d e f g h i j k l m n o p q r s t u v w x y z
 - Special letter : () - . \$ # @

Status

Press “On/Off” using [◀] or [▶] button after pressing [ENTER] button. To raise frame rate while recording or network monitoring, turn off the unusing channels, Refer to Recording section.

Type

This is shown the video signal(NTSC/PAL) input only, and its setup is carried through Jumper in H1600L. When booting H1600L, it will automatically recognize video signal from first recognized video signal set by examing from ch 1 to 16. If there is no video input connection, it will follow Jumper set.

Color

Set “Color / B/W” using [◀] or [▶] button after pressing [ENTER] button.

AGC (Auto Gain Control)

Set “Enable/Disable” using [◀] or [▶] buttong after pressing [ENTER].

Brightness/Contrast

Select the value from “-9” and “+9” using [◀] or [▶] button after pressing [ENTER].

Covert

Covert On will hide the channel at Monitoring mode.

Select “A / B / Both / Off” using [◀] or [▶] button after pressing [ENTER].

PTZ Home/PTZ Idle Time

Shift to Preset assigned if it has no movement in certain time while PTZ control

Set Preset number and Time using [◀] or [▶] button after pressing [ENTER].

PTZ Port


Set PTZ port connected to relevant channel by using [◀] or [▶] button after pressing [ENTER].

Address

When press [ENTER], Letter Input window will be displayed to set base address of PTZ device.

16.3. Manual Recording setup

This menu is to set video recording condition by user when pressing [REC] button. If manual recording starts, Normal Rec & Event Rec is ignored and it records based on user recording setup.

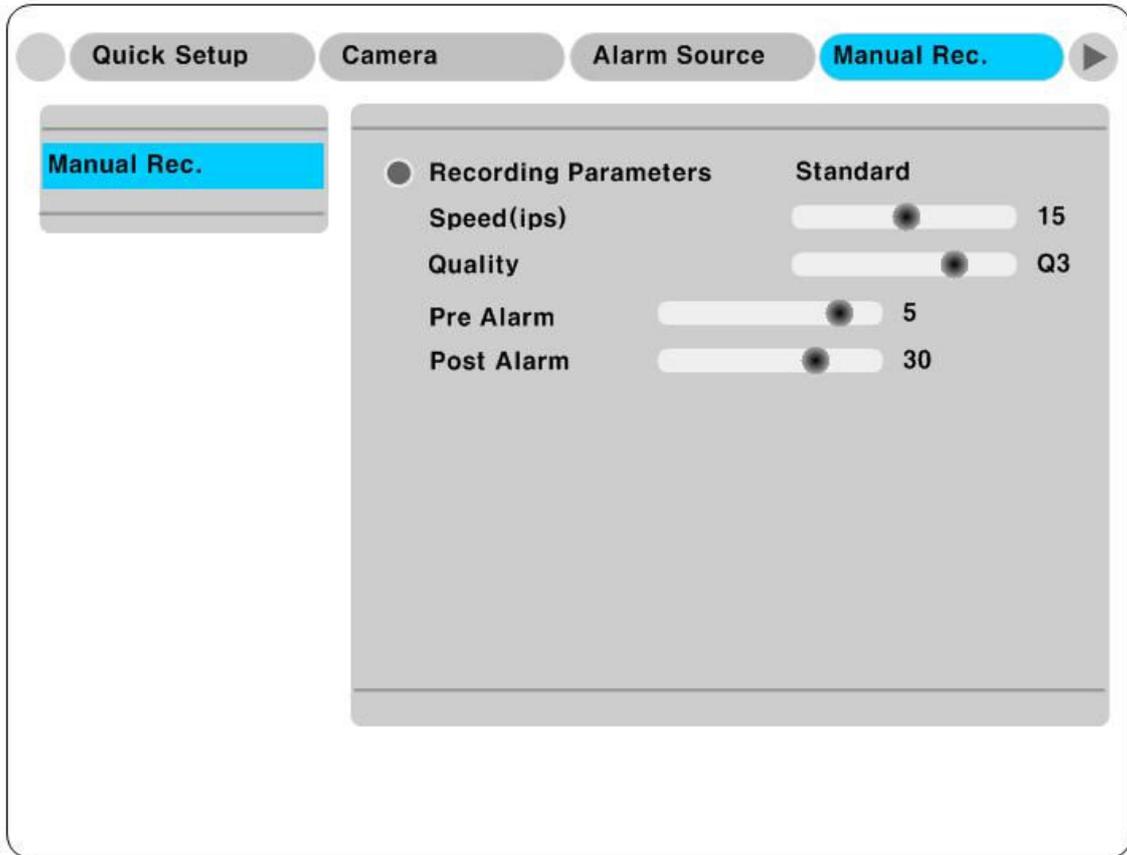

Recording Speed/Quality

There are all 4 setup conditions. (No Rec/Low/Standard/High/Custom). Setup condition except “Custom” will synchronize “Speed(ips)” and “Quality” automatically, Speed(ips) and Quality can be set each separately.

Pre Alarm (sec)

It can set max. 5 seconds.

Post Alarm (sec)

It can set Continuous or maximum 60 seconds.

<Note>


1. In case of set 'No Rec.' in Schedule Rec., it records as a set of Pre Alarm. While Schedule Recording, it records Pre Alarm section in speed(ips) of a set Schedule Rec.
2. When Post Alarm is set to Latched, it maintains user recording continuously till the stop pressing [REC] button by user.

16.4. Schedule Recording Setup

This recording is to set the recording conditions by Channel and Time schedule. After "Quick Setup" set, it is changed to new set value from previous value set if the set is changed at this manu.

16.4.1. Global Setup


It is similar to Quick Setup recording, and it set to same conditions of all analog channels at every hours.

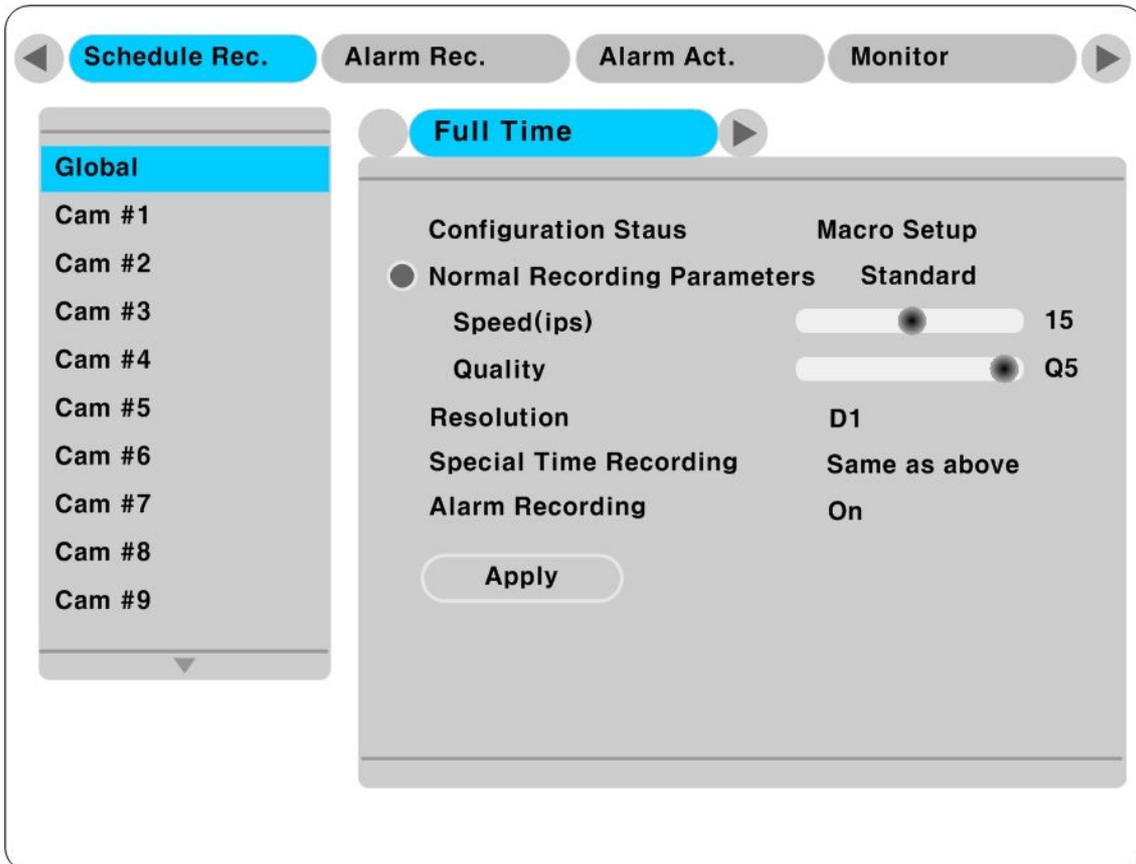

<Note>

1. The difference of recording setup in Quick Setup is that there is no audio recording setup, and sets whether Special Time Recording & Event Recording sets or not.
2. What Alarm Recording Off is set, Alarm Rec. menu is not available. To set Alarm Rec. menu, Alarm Recording of Recording menu should be set to “On” and press “Apply” to complete setup.
4. Refer to the following **Setup by Channel** how to set in detail.

16.4.2. Setup by Channel

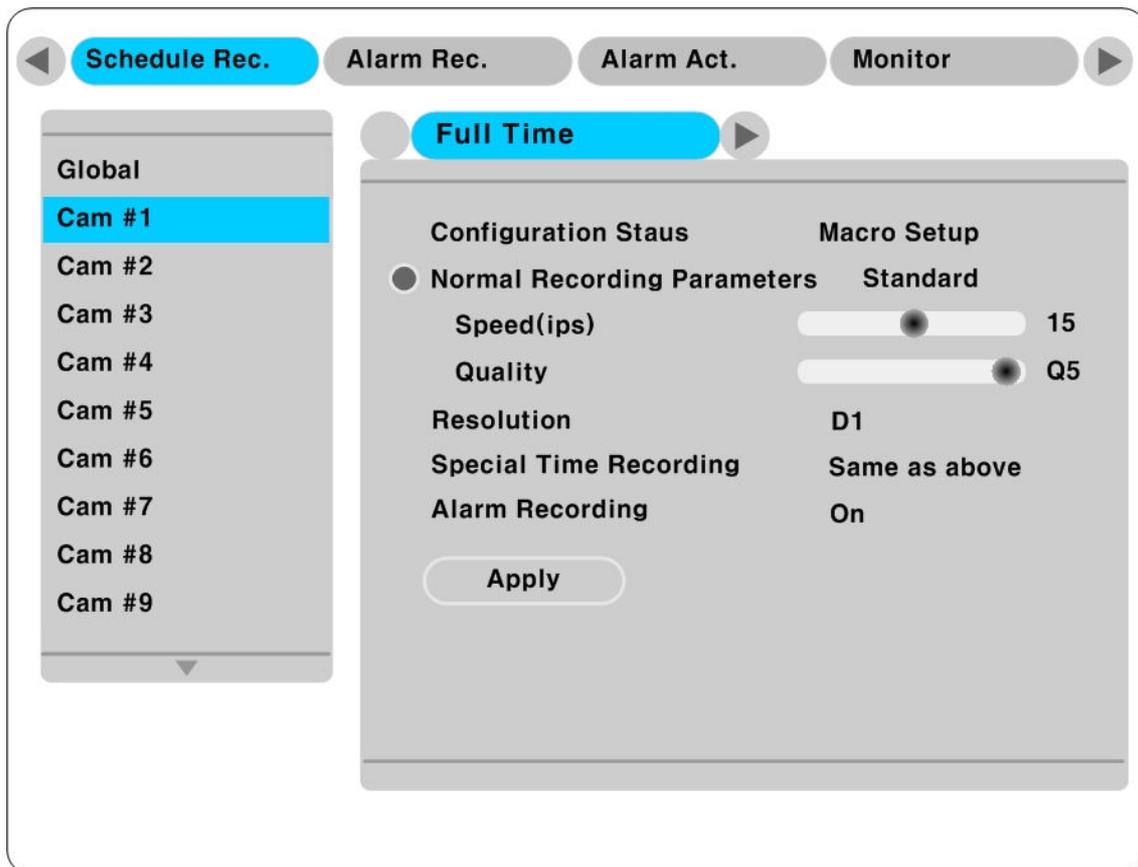


Time Schedule

It sets recording condition based on every time schedule. Time period can be set 4 districted areas, Full Time, Weekday (Day)/Weekday (Night)/Weekend (Day)/Weekend (Night). Day & Night, Weekday & Weekend can be set from “System” menu.

<Time Schedule Setup>

Shift to "System" menu to set Time Schedule.

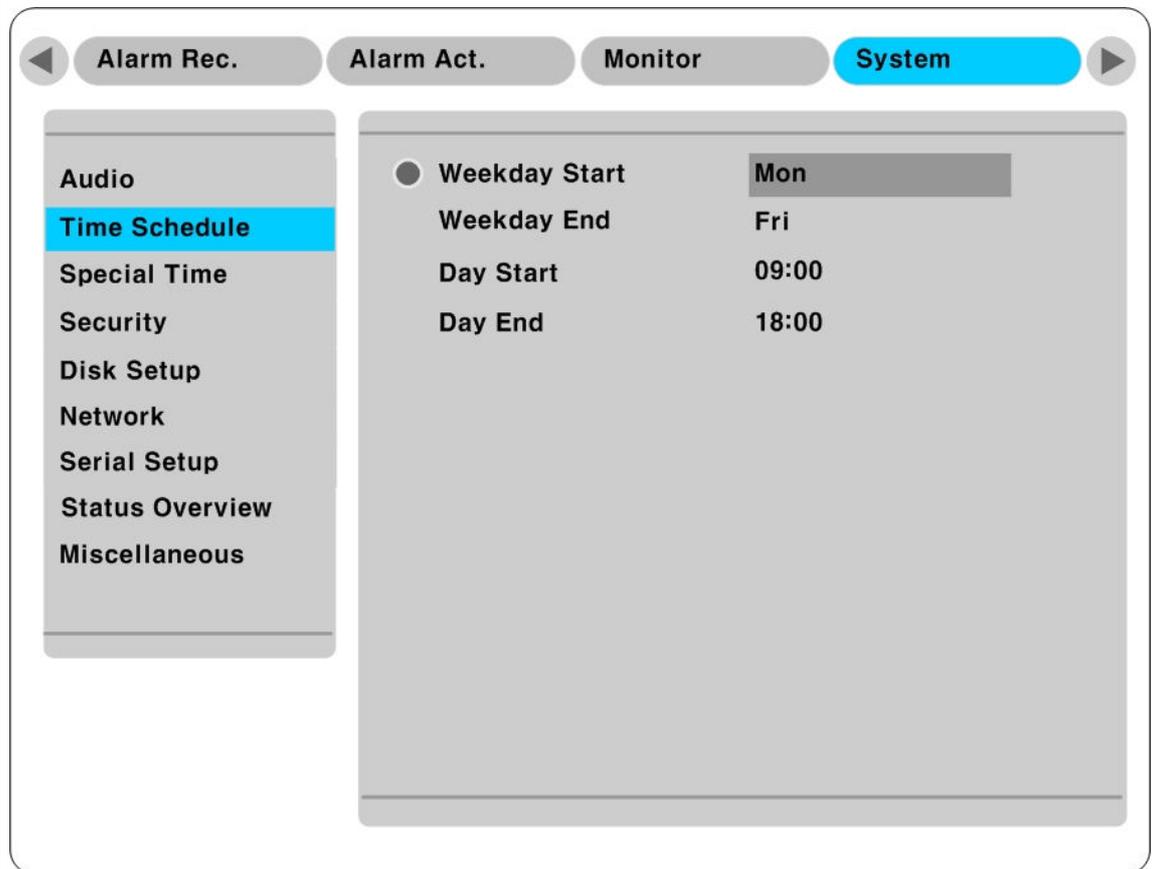

Weekday Start/End

Set Time zone from Monday to Sunday using Left, Right key button. The unset zoon can be set to Weekend time zone.

Day Start/End

Set Day time zone using Up, Down button. The unset zoon can be set to Night time zone.

Recording Speed/Quality

There are all 5 setup conditions. (No Rec./Low/Standard/High/Custom).

Setup condition except "Custom" will synchronize "Speed(ips)" and "Quality" automatically,Speed(ips) and Quality can be set each separately.

Resolution

There are all 3 conditions. (CIF/HALF/D1).

At this menu, resolution set is applied to every User recording, Event recording.

- CIF : 360x240 @ NTSC, 360x288 @ PAL
- HALF : 720x240 @ NTSC, 720x288 @ PAL (HALF D1)
- D1 : 720x480 @ NTSC, 720x576 @ PAL (FULL D1)

Special Time Recording

This menu is to differentiate recording conditions by setup of specific time zone. Namely, if it sets to day time in workday, it can record according to 2 type setup condition. Specific time sets from 'System' menu.

There are 5 setup conditions; No Rec./Low/Standard/High/Same as above(Apply same value with "Recording Speed/Quality" value.).

< Specific Time Zone Setup >

Shift to "System" menu to set Specific Time zone.

Zone	Start Time	End Time
Zone 1	00:00	00:00
Zone 2	00:00	00:00
Zone 3	00:00	00:00
Zone 4	00:00	00:00

Exception Days

	Start Date&Time	Duration	Profile
1	01/01 00:00	01:00	WKD
2			
3			
4			
5			
6			
7			
+ 8			

Max. 4 specific time zones can be set.

Event Recording


After pressing [ENTER] button, set “On/Off” using [◀] or [▶] button. Detailed Alarm recording conditions sets from “Alarm Recording” menu. Here only can set recording according to alarm recording setup.

16.5. Alarm Recording Setup

This menu is to set Alarm Recording condition. After setup Recording condition, “Event recording” menu from “Recording” must be “On” to setup Alarm recording in HVRM. Also, before setup Alarm recording, “Alarm Source” must be set.

16.5.1. Sensor Setup

This menu is to set existence of sensor and type of sensor. It support 2 type sensors, Normal Open(N.O.) and Normal Close(N.C.)

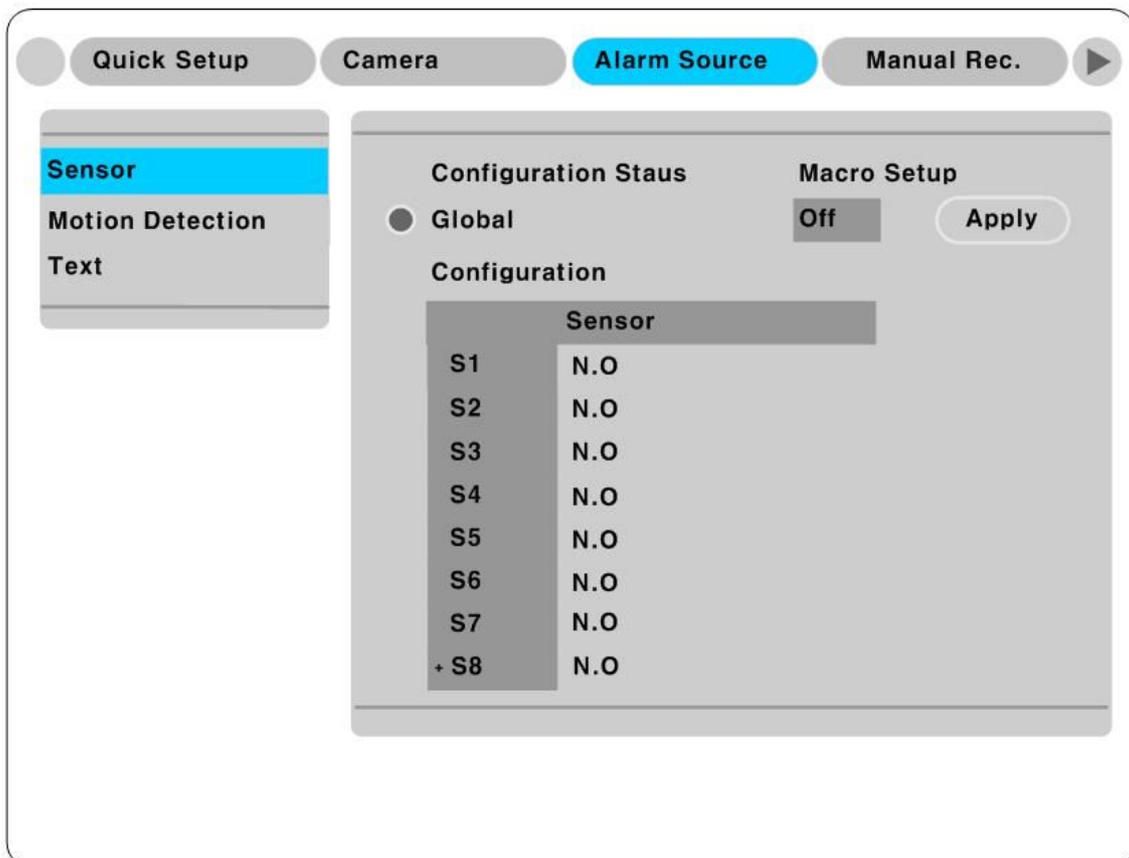

Global

It set all sensors same together. After select among Off/N.O./N.C., and press “Apply” to activate.

Configuration

It can set 16 sensors (S1~S16) separately.

16.5.2. Motion Detection Setup

This menu is to set MD of each channel. Global sets all channels (Cam #1~Cam#16) in the same together, and setup can differ separately.



Motion Detection

It sets 4 different sensitivity of MD; Off, Lowest, Low, Std, High, Highest.

MD Area


It sets MD zone. 330(width 22 x height 15) zone is selected by “Set All” and release it with “Clear All”.

<Note>

To set Global, press “Apply”. Other will be not applied.

16.5.2.1. Motion Detection Setup by Channel

MD setup by channel is same as Global setup. And it can set MD zone additionally when MD sets by channel.

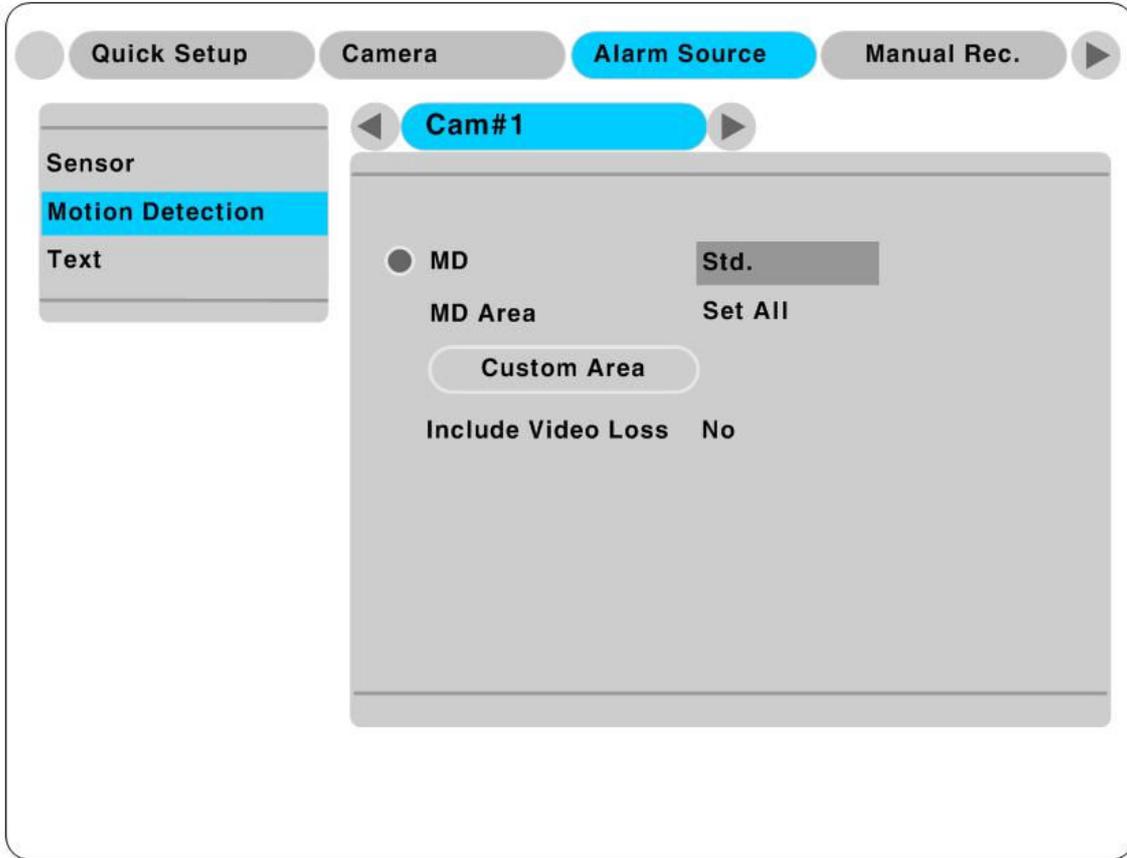


Custom Area

It sets MD zone by user **NTSC 22x15, PAL 22x18**

First default value is set to "Select All". If "Custom Area" pressed, Window for MD zone setup is opened.

< MD Zone Setup >


It can set MD zone by user directly.

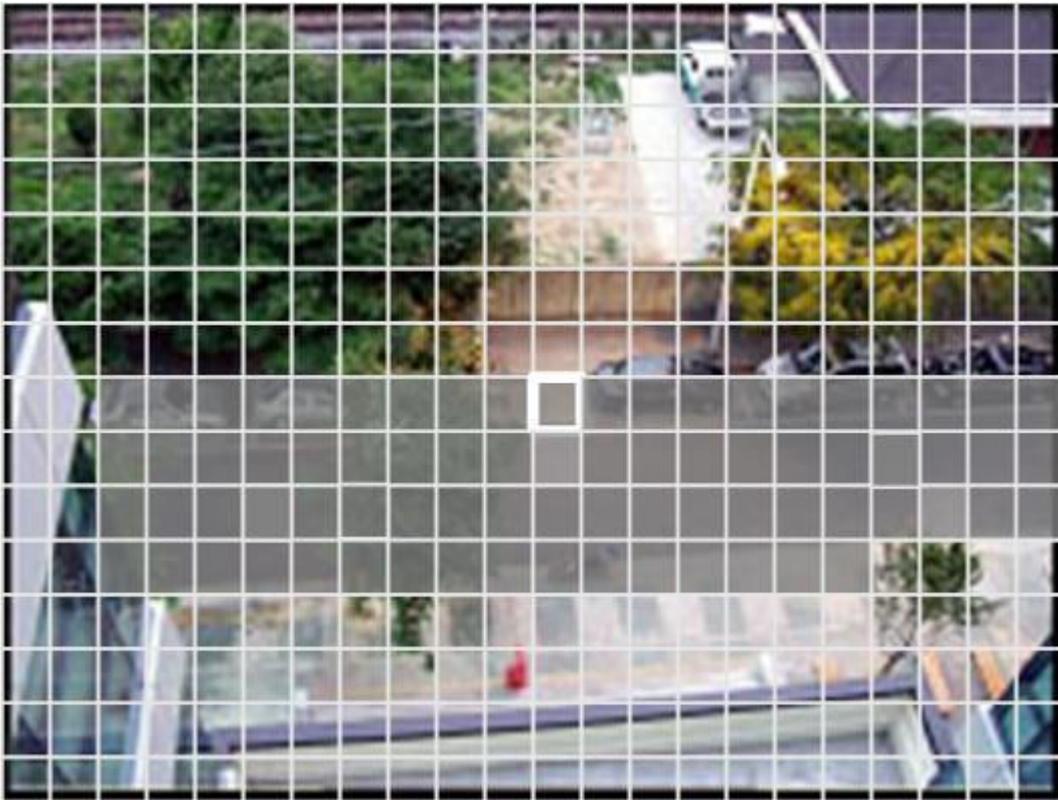

If "Custom Area" is pressed, sell **NTSC 22x15, PAL 22x18** for setup is displayed. Selected MD zone is in grey color. To select MD zone, use direction key for the wanted zone and press "ENTER" to apply. After selection, press "EXIT" to return previous menu.

16.5.3. Text Setup

This menu is to set text data input. It has to be set COM1 part from “System -> Serial Setup” menu on OSD.

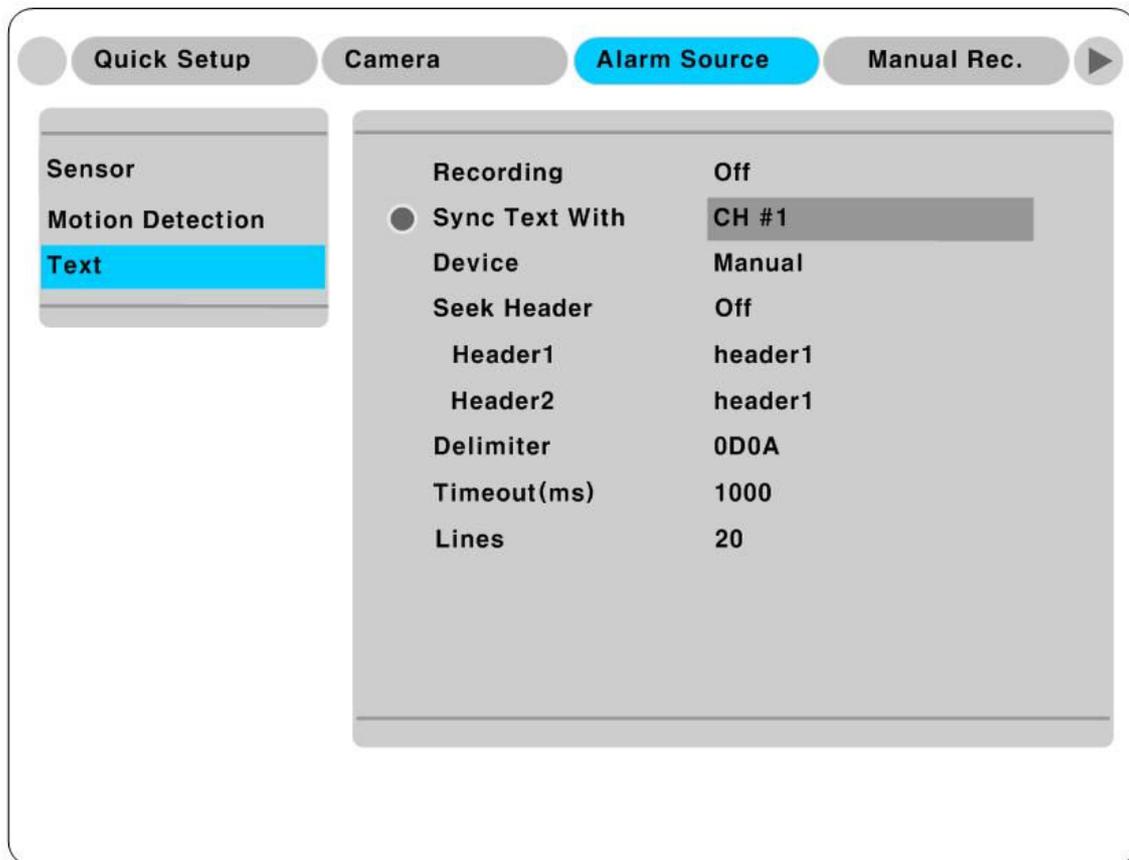

Recording

It is On or Off to save the Text input.

Sync Text With

Select the channel synchronize with Text data.

Seek Header

It has the various type of data input from the external device (Access Control, POS, ATM etc). Like Star Finger 007, it is not needed when the protocol of these device have implemented on the device. If not, this is the parameter to analyze how the one of data is constructed from the text data that is input continuously. Namely, all data has the first and the end. Header indicates the information that already inserts to inform its starting. Therefore, Header information is defined here to acknowledge its starting of a data. The reason of 2 Header is to detect maximum 2 data out because each device can output various datas.

Delimiter

Value of Delimiter can be different according to every device. Refer to their manual or inquire it to purchasing stores of its model.

Timeout(ms)


Following lines defined here means maximum number of text line from one data. Even if there is standized data, there can be a short and long data. For example, there are 3 lines to write names on ATM. But some may need only First name & Last name to register. Which it means requires only 1 shorter than other ATM users. It is to decide the last line of the one data register as final complete data to save after an hour's consideration of register later because HVRM can not recognize it automatically.

Lines

It defines how maximum many lines is structed by a data.

16.5.4. Global Alarm Recording

Set all analogue channels in same condition.

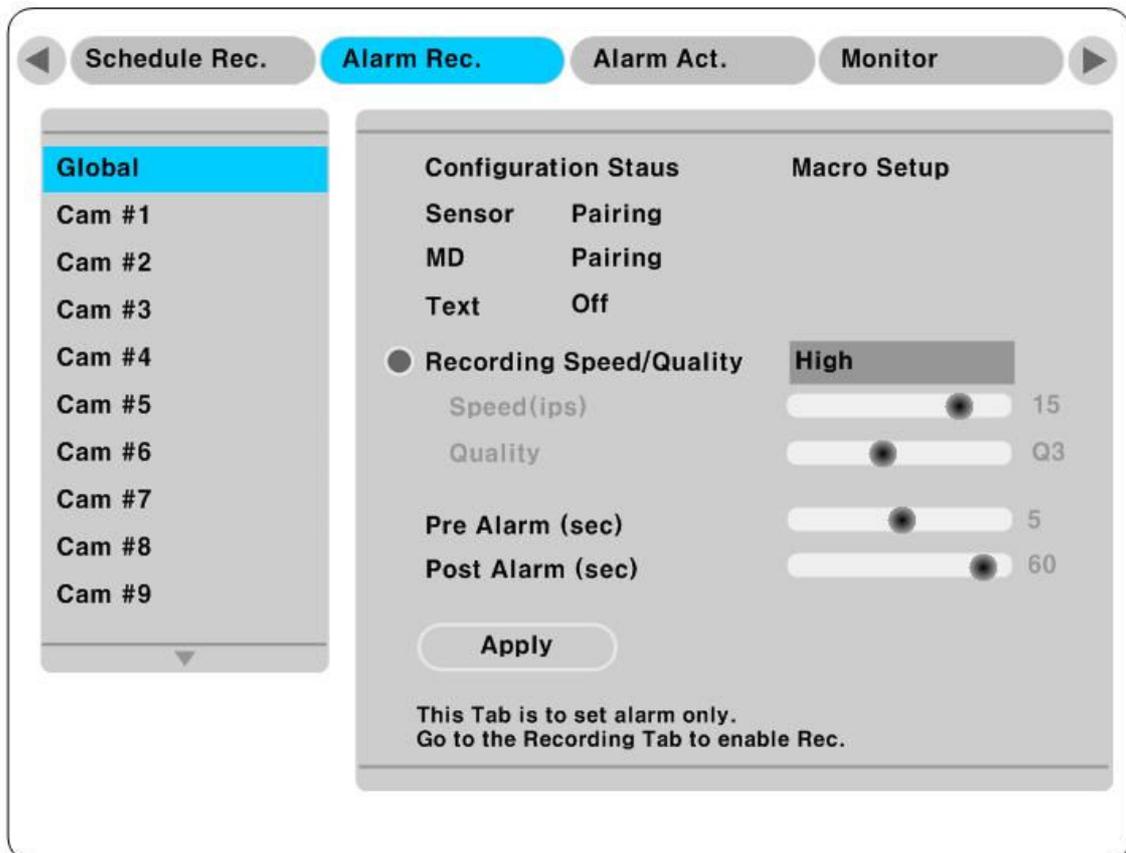

Sensor/MD

Set synchronizing with Sensor/MD.

Pairing means 1:1 synchronization between the channel and Sensor/MD.


Text

When set “On”, it deals text input of relevant channel as Alarm Event and is saved.

<Note>

1. To apply Global setup, press “Apply” button.
2. In case of H3200M, it synchronizes 1:1 till channel number 16 when sensor is set to Pairing.
3. Refer to following Setup by channel for the details.

16.5.5. Setup by Channel

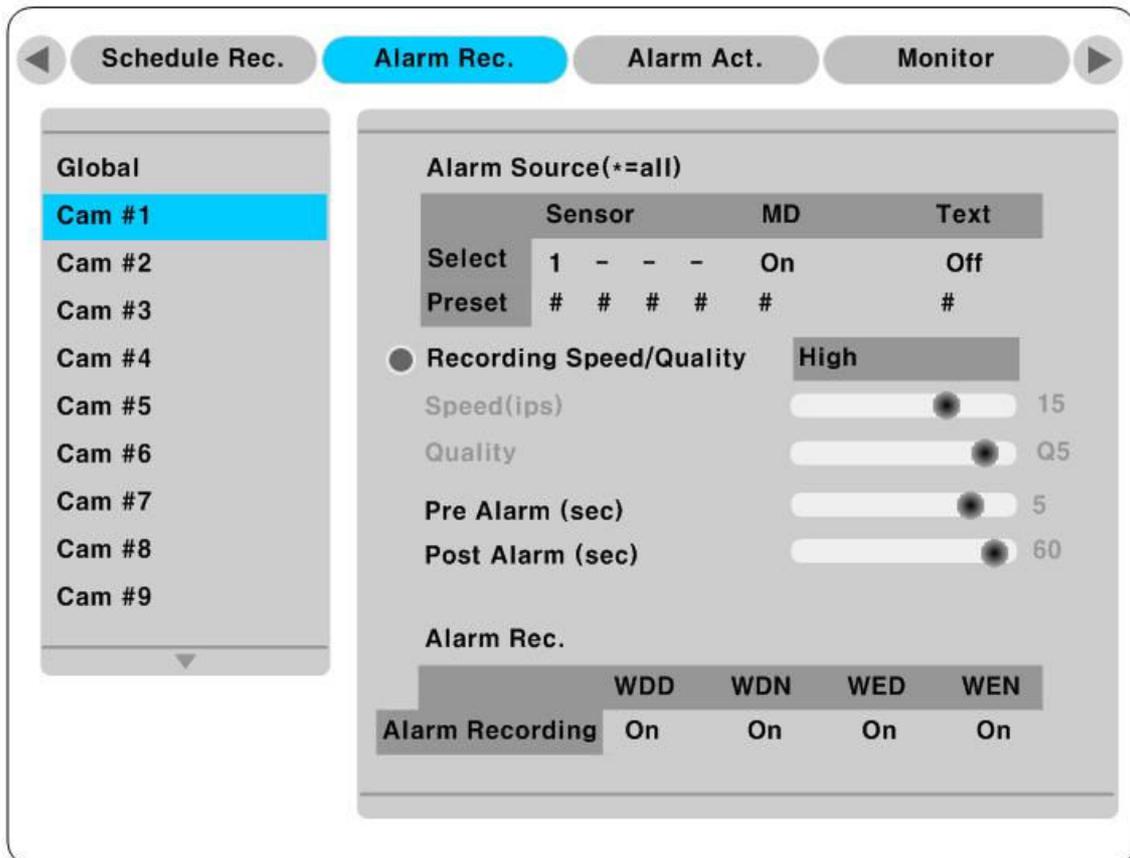

Alarm Source (*=All)

- Through Alarm Source, 4 Sensors and 1 MD, Text input is selectable.
- Selection of Sensor is set by pressing relevant number button.
- Selection of MD, Text can be On/Off by directional key.
- Select Preset of PTZ by relevant Alarm input.

<Note>

1. * : Press ▷ button.
2. – or # : Press number 0 button.

Recording Speed/Quality

There are all 4 conditional setup (No Rec/Low/Standard/High/Custom).

Except “Custom”, Setup condition will synchronize “Speed(ips)” and “Quality” automatically, Speed(ips) and Quality can be set each separately.

Pre Alarm (sec)

It can set max. 5 second.

Post Alarm (sec)

It can set max. 60 seconds.

<Note>

1. In case of set ‘No Rec.’ in Schedule Rec., it records as a set of Pre Alarm. While Schedule Recording, it records Pre Alarm section in speed(ips) of a set Schedule Rec.
2. When Post Alarm is set to Latched, it maintains user recording continuously till the stop pressing [REC] button by user.


Alarm Recording Status

It can check ON/OFF of Alarm Recording menu in Schedule Recording setup.

16.6. Alarm Action Setup

According each Time schedule, it sets Relay action. It sets to 5 different time period, Full Time, Weekday(Day), Weekday(Night), Weekend(Day), Weekend(Night). After Schedule setup, it sets Relay, Buzzer, Email etc to operate Alarm action.

16.6.1. Schedule

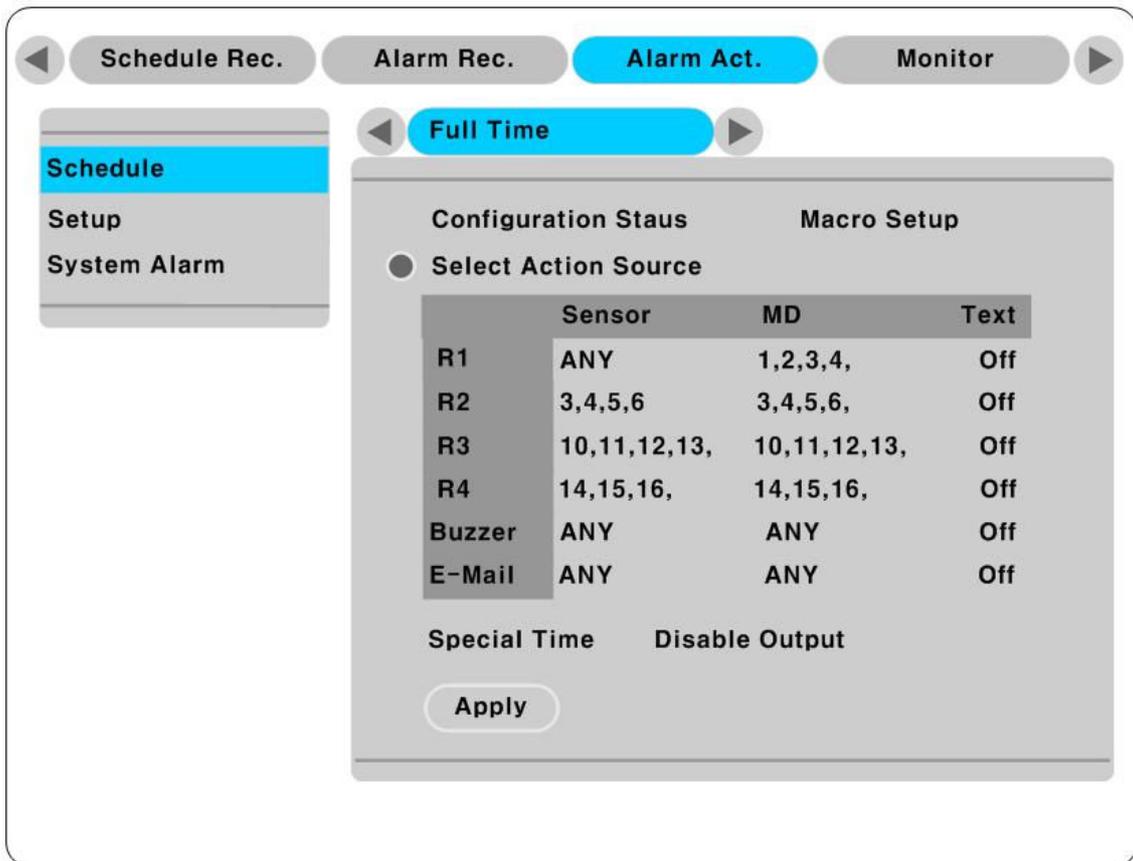

Select Action Source

Sensor and MD can be set max 4 or ANY for Relay1~Relay4, Buzzer, E-mail. Video Loss and Text can be set On/Off. Selection of Sensor/MD is done by pressing relevant number button.

<Note>

1. ANY : Press ▷ button.

Special Time

It selects whether it apply specific time period that is set.

<Note>

1. Global Setup is to apply Time Schedule to all at same.
2. Press “Apply” to apply Global setup.

16.6.2. Setup

The screenshot shows a web interface for configuring alarm settings. At the top, there are four tabs: "Schedule Rec.", "Alarm Rec.", "Alarm Act." (which is selected and highlighted in blue), and "Monitor". On the left side, there is a sidebar menu with three items: "Schedule", "Setup" (which is highlighted in blue), and "System Alarm". The main content area is titled "Relay Configuration (Sec)" and contains the following settings:

<input type="radio"/> R1	Off	R2	10
R3	10	R4	10
Buzzer	10		
E-Mail Addr.	sales@webgateinc.com		
Sender Addr.	sales@webgateinc.com		
Sending Interval(min)	Off		

Relay Configuration

Set the use or not for R1~R4.

Buzzer

Set the use of Buzzer or not.

E-mail Addr.

Input E-mail address to inform Alarm.

Sender Addr.

Input "Sender" address in the typr of who@where.

Mail Duration (min)

E-mail notification is to send message in terms of Mail Duration set, but not every time that Alarm is occurred. It can be set from 1 to 30 minutes.

<Note>

Network setup is set to DNS for E-mail notification.

16.6.3. System Alarm

16.6.3.1. System Alarm Setup

It is to set ON/OFF of Alarm for the notification of system faulty.

Send Alarm	
HDD Fail	Off
HDD Almost Full	Off
Fan Fail	Off
+ Password Fail	Off

Alarm Method	
Select	
Warning Message	On
Buzzer	Off
Send E-Mail	Off
Relay-4 On	Off

HDD Fail

Alarm action is operated when HDD disconnected or abnormal action.

HDD Almost Full

It operates alarm action when connected HDD is almost full.

Fan Fail

It operates Alarm action when malfunction of FAN connected to HVRM.

Password Fail

It operates Alarm when wrong User or Admin password input.

WRS Reg. Fail

It operates Alarm when disconnection of WRS.

16.6.3.2. Alarm Method Setup

It is to set ON/OFF of Alarm when system alarm is occurred.

Warning Message

When setup this menu, it display warning message through pop-up.

Warning Message remains On always..

Beep

When set this menu, it sounds Beep.

Send E-Mail

When this menu is set, it sends email to the address input.

Select Relay


It operates Relay selected from 1~4 relay.

16.7. Monitor Setup

It sets the monitor for the display of video from monitor 1 to 4. Available menu for monitor 1~4 are all same.

<Note>

H3200M can only display and setup channel 1 to 16 to Monitor 1 & Monitor 3, and channel 17 ~ 32 to Monitor 2 & Monitor 4.

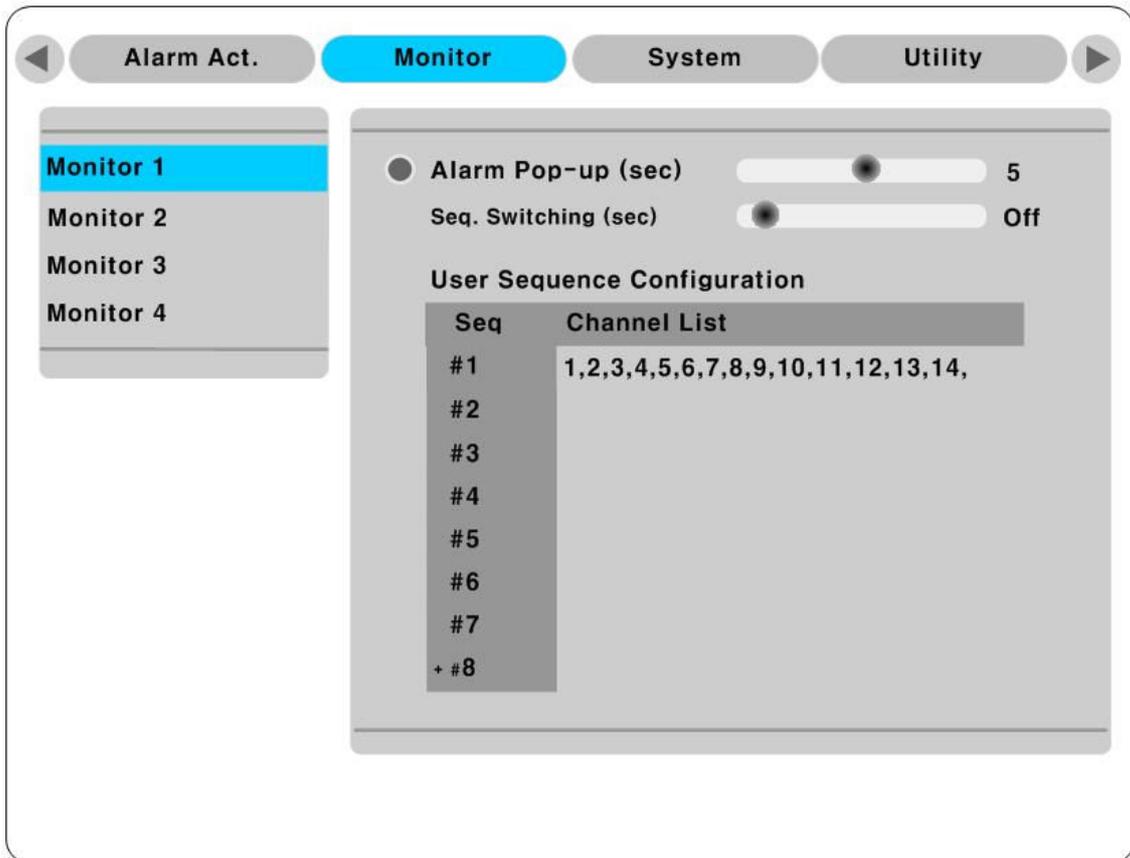

Alarm Pop-up (sec)

It sets auto Pop-up display for the alarm. Pop-up display time can be set from 5~10 second. If it sets to “Keep”, it keeps to display Pop-up image and press any button to release Keep mode.

Seq. Switching(sec)

It sets auto switching from 1 to 60 seconds.

Anti-Flicker OSD

It can On/Off Anti-Flicker OSD menu. When it is On, it softens Menu and Text on screen and has no trembling. But when it is Off, the letter will be cleared and trembles. Set On/Off based on the condition of the user's monitor.

<Note>

If no. 2 channel pop-up again within a few time passed after no. 1 channel pop-up, it is changed to 4 division and shows 1, 2 channels. And the holding time from the last pop-up time is extended automatically. (Max. 8channels)

User Sequence Configuration

It can edit Auto transmit function for user mode.


<Attention>

1. It can define all 16 user mode.
2. The picture for example defines 6 Sequences in order as shown 4 division(1,2,3,4) → Full mode(1) → 4 divisions(5,6,7,8) → Full mode(5) → Full mode(8) → 9 divisions(9,10,11,12,13,14,15,16).

16.8. System Setup

16.8.1. Audio Setup

HVRM supports 4channel Audio recording. But it operates with any channel when video playback.

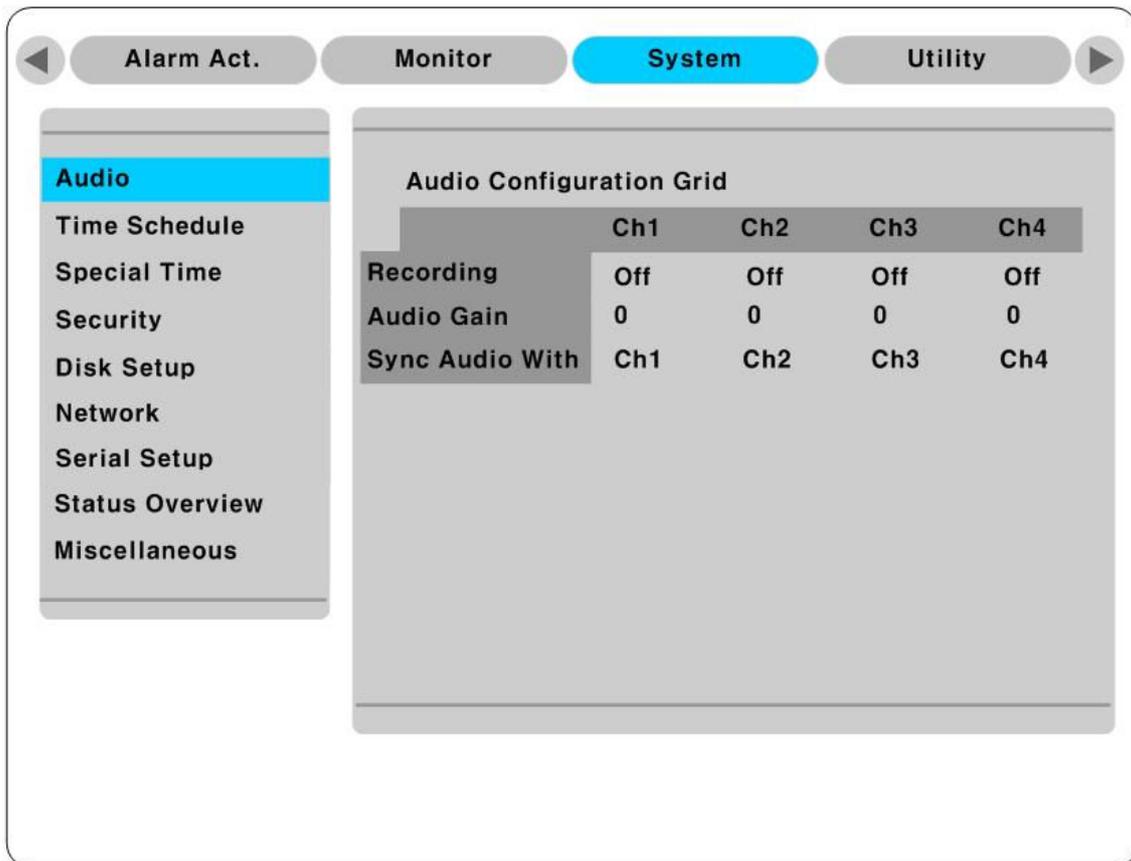

Recording

It sets whether Audio records or not.

Audio Gain


It is possible to set from -7 to +8.

Sync Audio with

When playback recorded image, it sets which it works together.

16.8.2. Time Schedule Setup

It sets the time period from Week & Weekend, Day and Night.

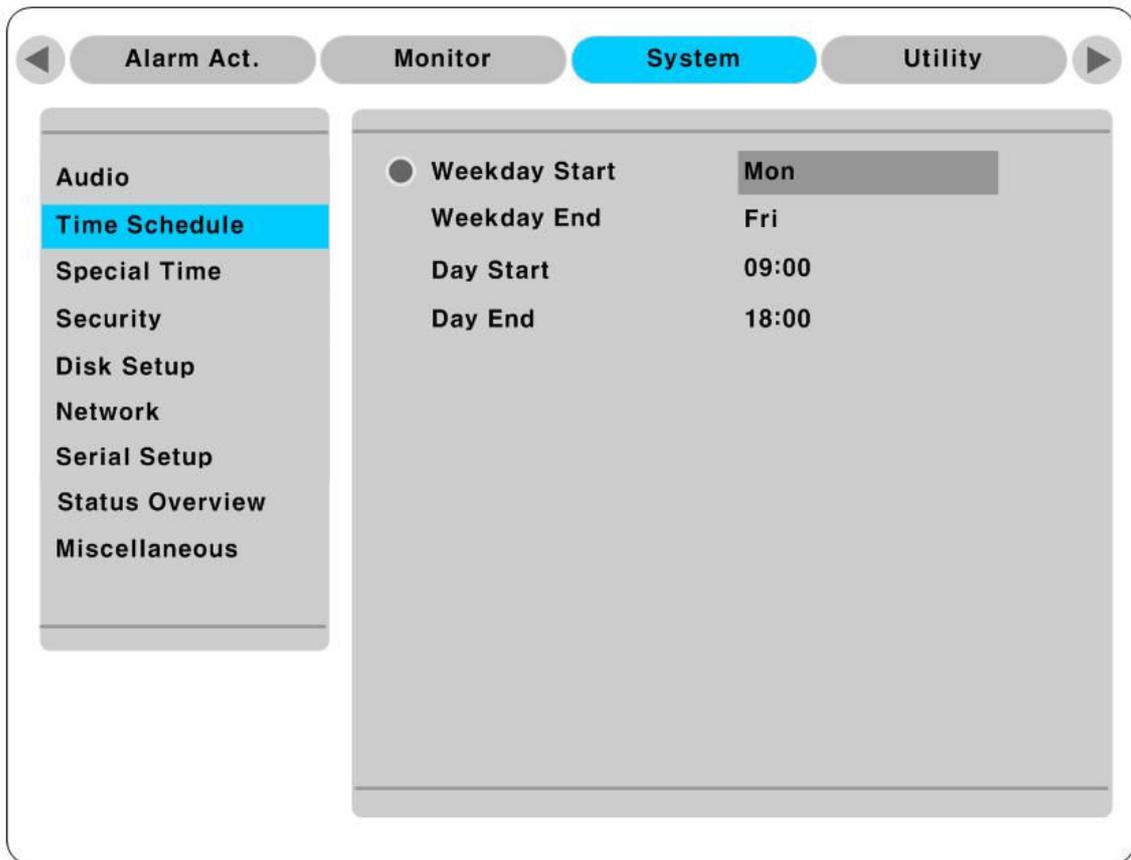

Weekday Start/End


Using Left, Right key sets the time period from Weekday. Other unassigned time is for the Weekend.

Day Start/End

Using Up, Down button sets Day time period. Other time is applicable to the Night time.

16.8.3. Special Time

It can set another specific time zone in each time zone(Week day, Week night, Weekend day and night), For example, various conditions setting separately such as mealtime or meeting time is applicable.

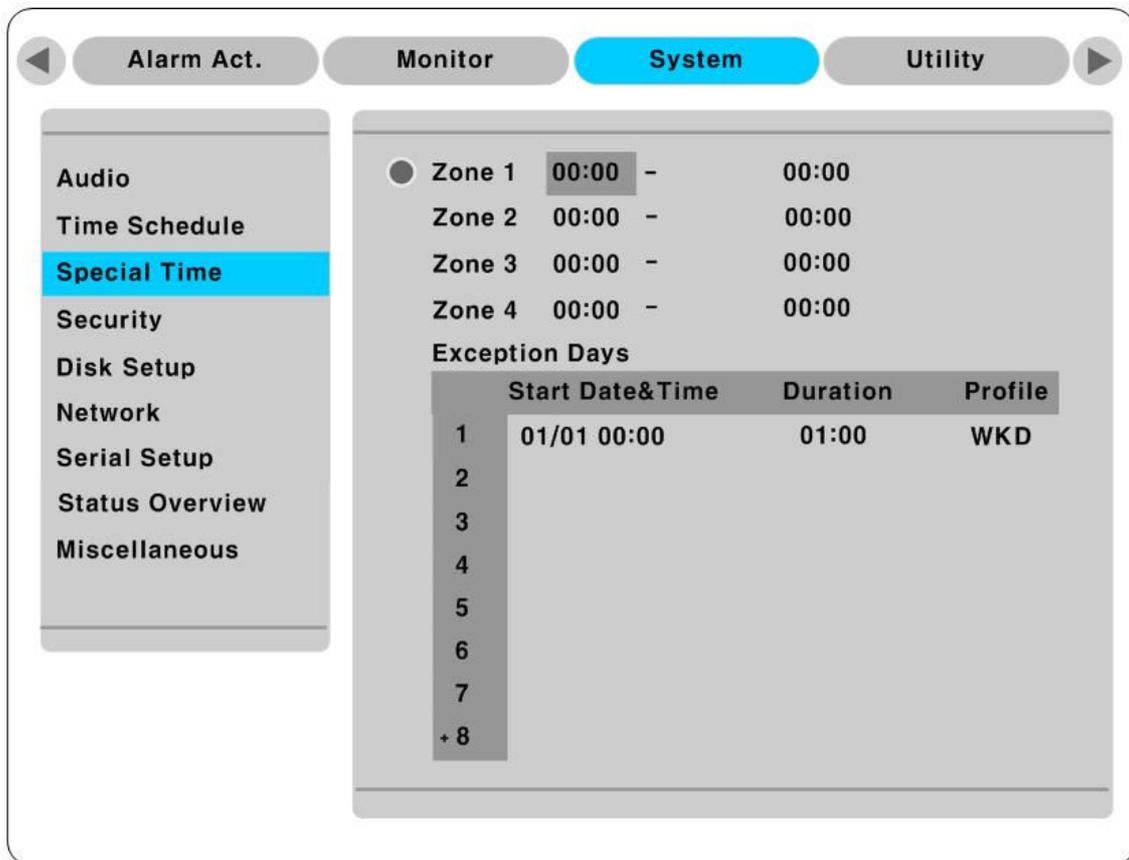

It used for the set of regular exceptional time. Max. 4 different specific time can set.


Exception Days

It used for the setup of irregular exceptional time, max. 30 time zones.

- Start Date&Time : Set Starting time.
- Duration : Set an interval of Exceptional time.
- Profile : Set the value of exceptional time zone.
(No Rec, Week day & night, Weekend day & night)

16.8.4. Security Setup

16.8.4.1. Local Password

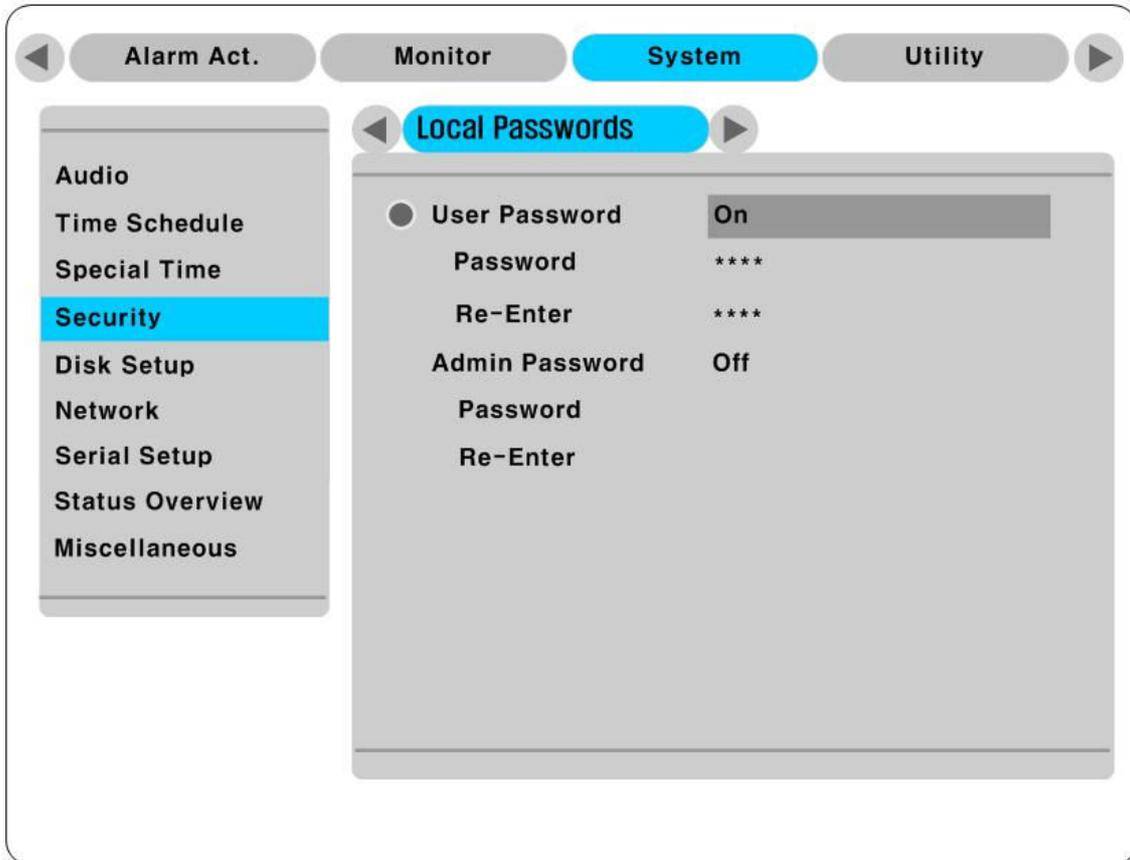


User Password

It is only capable of monitoring and playback only with user registry. Default set is "1111".

Admin Password

Authorized administrator can control every function. Default set is "9999".

16.8.4.2. Remote Users

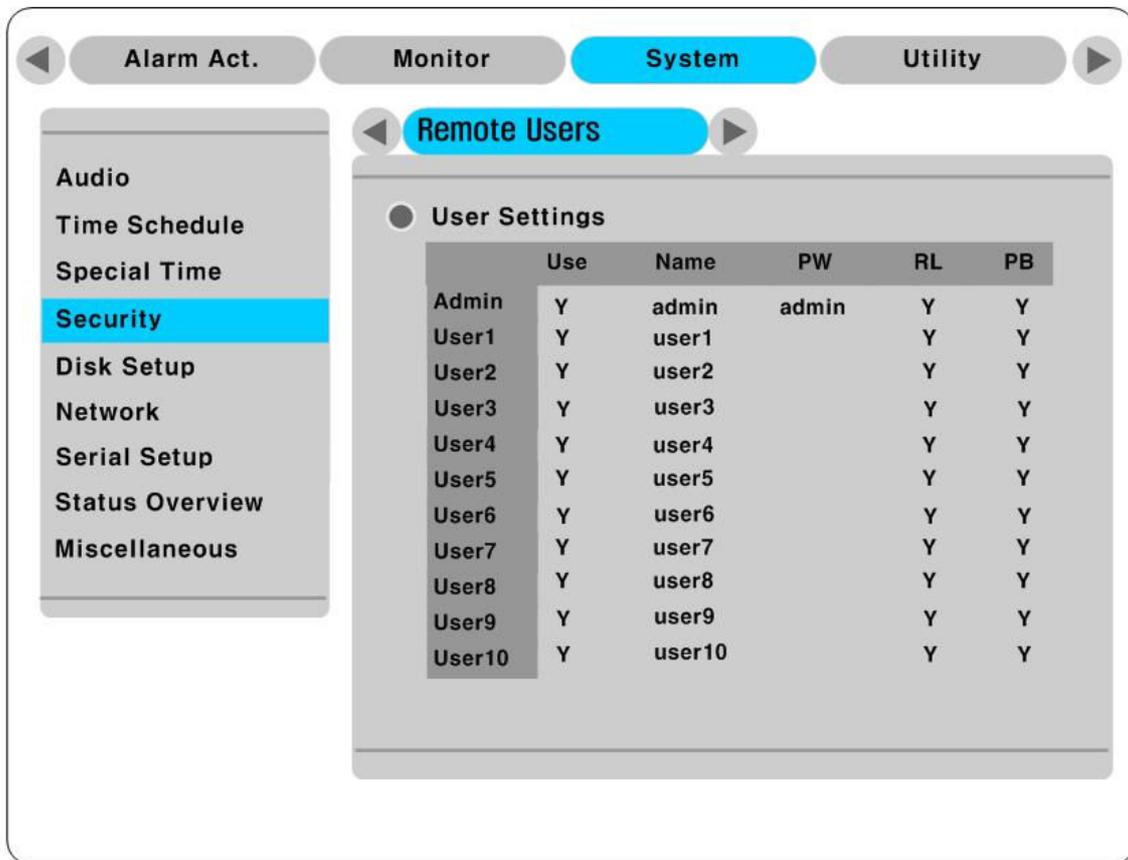

Admin ID setup

Admin ID “admin” cannot be changed.

Password of admin is set and has all rights and unchangeable.


User ID setup

Max. 10 user’s ID can be set.

To register the user, change Use’s value to “Y” and input ID & password.

Basic value is available for all monitoring/playback/Relay.

16.8.5. Disk Setup

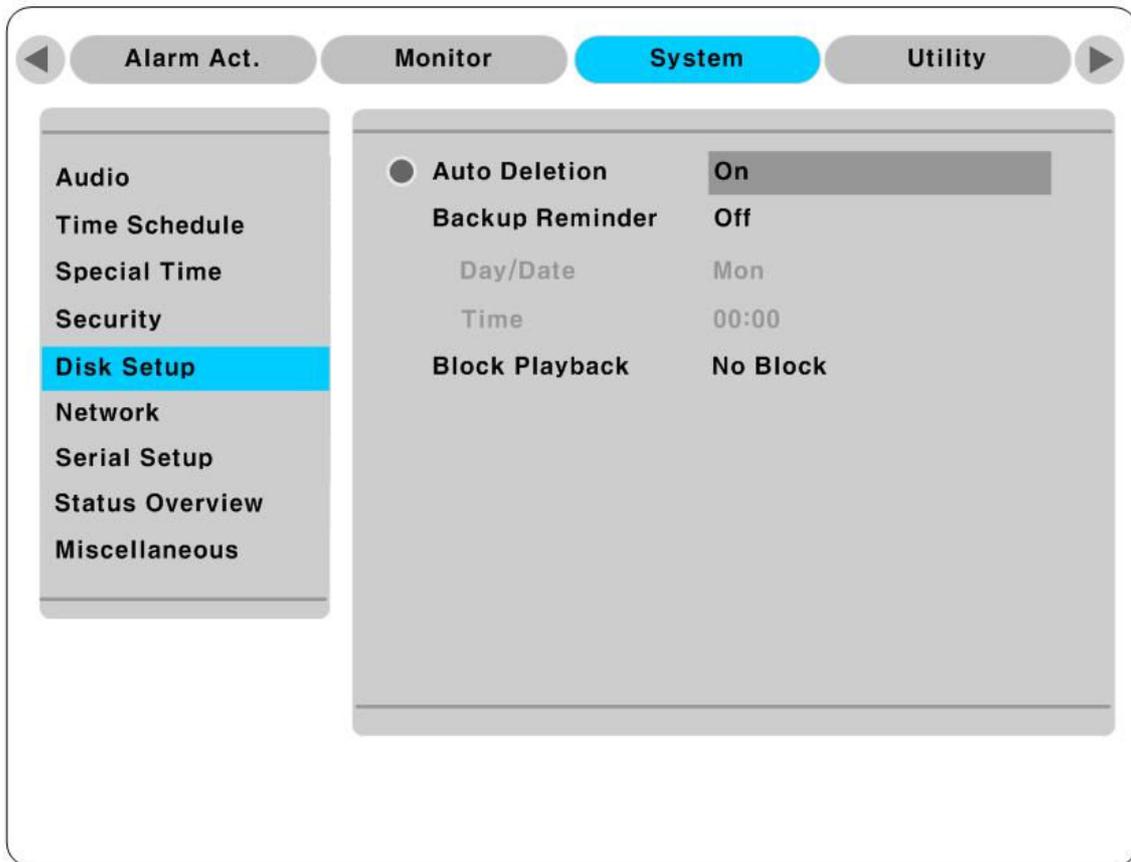

Auto Deletion

When no HDD space left for recording, it deletes the recorded data automatically.

Backup Reminder

This menu is to inform backup time by everyday, every week, every month.

Day/Date/Time

It applies the value of setup differently according to value of "Backup Reminder".

Block PlayBack


This menu is to playback the recorded images from HDD in limited time. It can set from Day 1 to 31.

16.8.6. Network Setup

There are 5 Sub menus. ; Network, xDSL, WRS, Port Setting, NTP Setting

16.8.6.1. Network

When HVRM connects to network, it is to set relevant network information.

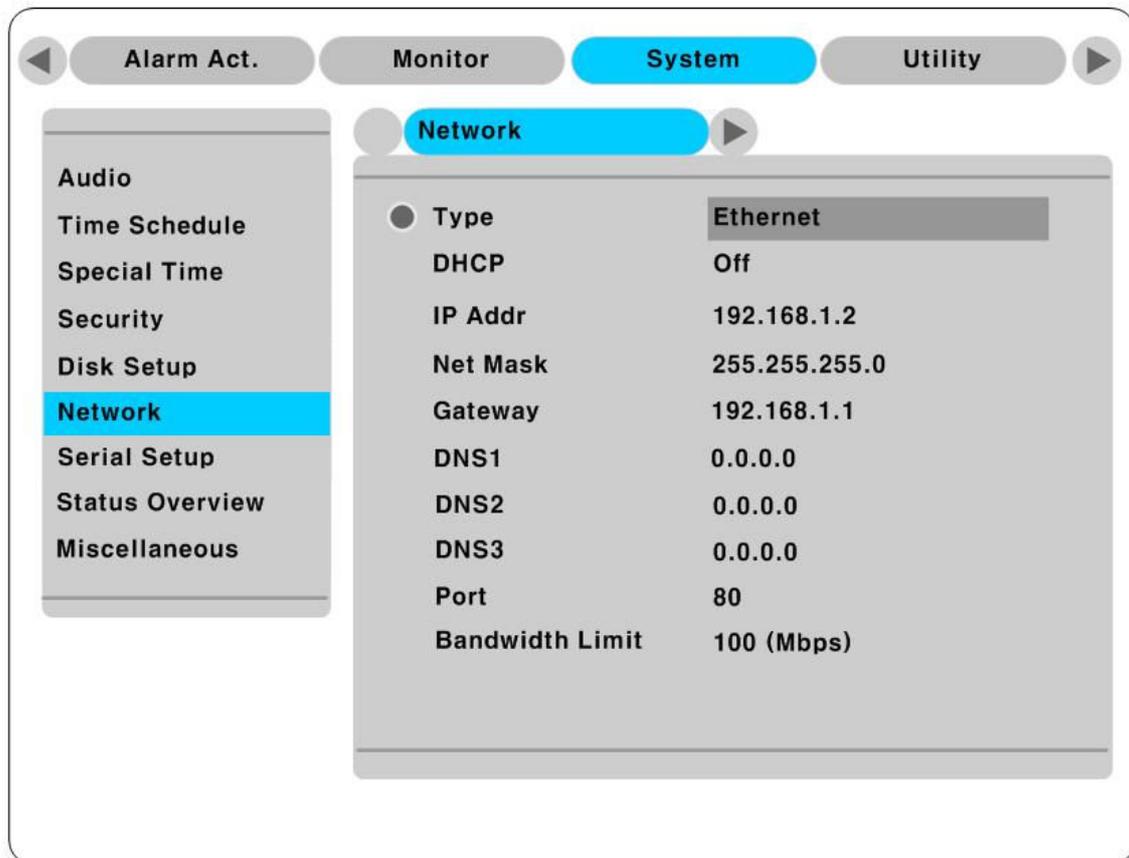

Type

It sets the type(Ethernet/xDSL) of network line connected to HVRM. It sets 'Ethernet' at the connection of network through leased line, Cable model or LAN based connection.

It sets to 'xDSL' when HVRM is connected to xDSL line of PPPoE method. But it sets to 'Ethernet' if it is not PPPoE method even if it is xDSL line.

DHCP

DHCP (Dynamic Host Configuration Protocol) is to manage HOST address in network. All Host connect to LAN using such network protocol can jointly own public IP address that is limited. Another means that all Host allocates public IP address temporary from DHCP server. If LAN has DHCP server and activates DHCP menu, DHCP server allocates public IP address to HVRM.


'DHCP' is used in LAN that DHCP server works. Normally, in mid or large scale, it operates DHCP server via LAN but generally use NAT (Network Address Translation) function via HUB in small.

IP Address, NetMask, and Gateway Address, DNS, Port, Bandwidth limit

It sets IP address, Network Mask, Broadcast address, Gateway , DNS address, and Port, Bandwidth limit.

16.8.6.2. xDSL

When HVRM is with xDSL line and PPPoE method, ID & Password should be setup.

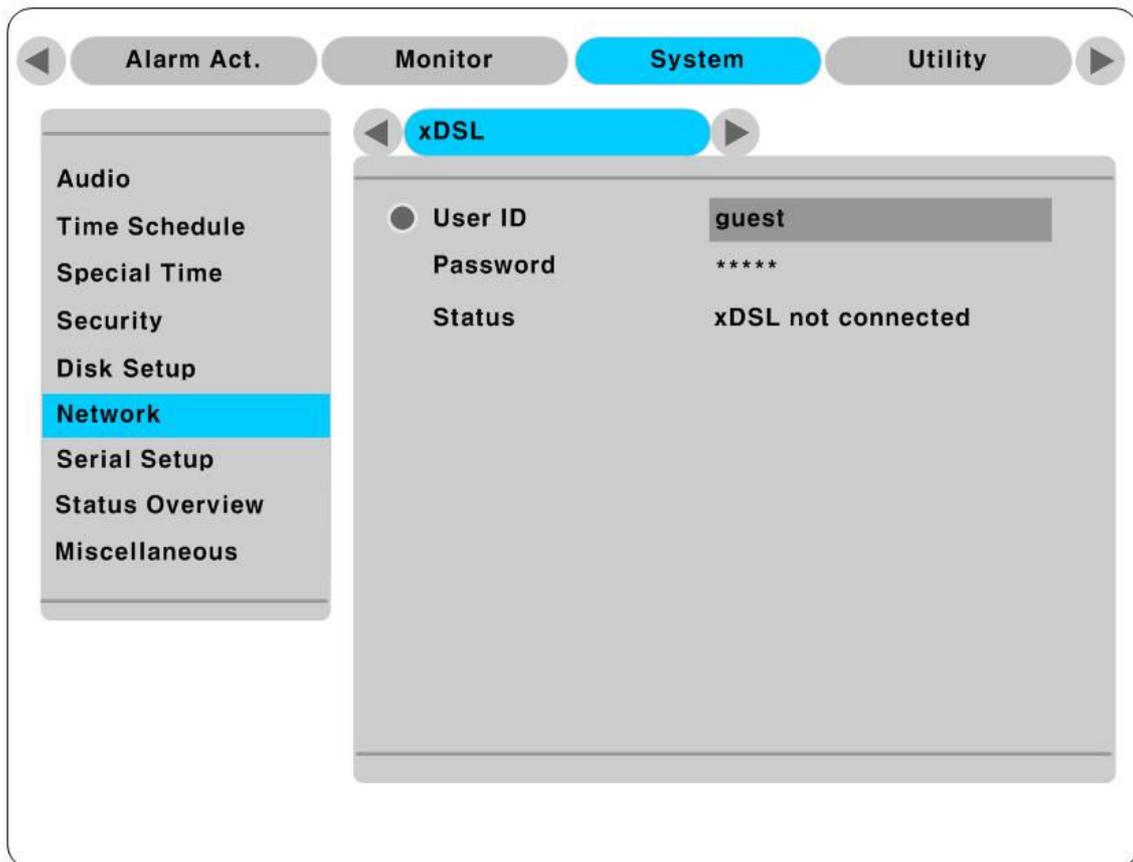

User ID/Password

Set ID & Password for HVRM in xDSL connection.


Status

It indicates the connection of HVRM.

16.8.6.3. WRS

If HVRM is connected to Cable modem or xDSL modem, IP address is changed at every connection to ISP. In this case, changed IP address can not be known. If HVRM using static IP register into WRS server, changed IP address can be known easily when it connects to HVRM.

To register Static IP to WRS, please refer the following to set.

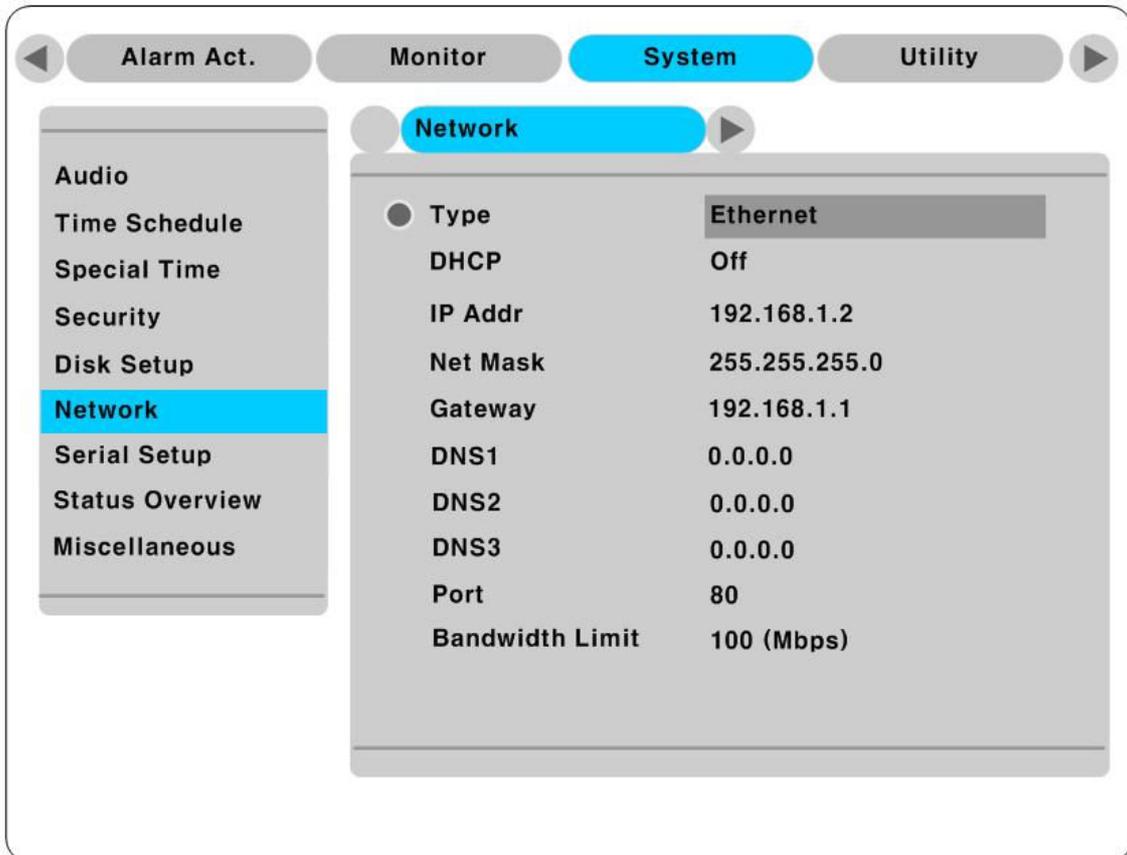

WRS Interval

For continuous registry, register interval should be set to 'WRS Interval'. According to set value of static IP address, it renews the information in WRS server regularly. If user registers the interval '0' or HVRM does not transmit any data for 2 days, the data is removed from WRS.

WRS URL


This menu is to set server address to register. WRS addresses that HUNT ELECTRONIC USA INC. operates now are webeye.to.

<Attention>

1. If domain address such as webeye.to is input in WRS URL, DNS server IP should be noted on “System → Network → DNS1”.
2. DHCP line such as Cable/DSL receives DNS address automatically and does not require an entry.

Group ID

Group ID is to set group name that HVRM registered. It recommends uneasy Group name to avoid same Group name registered.

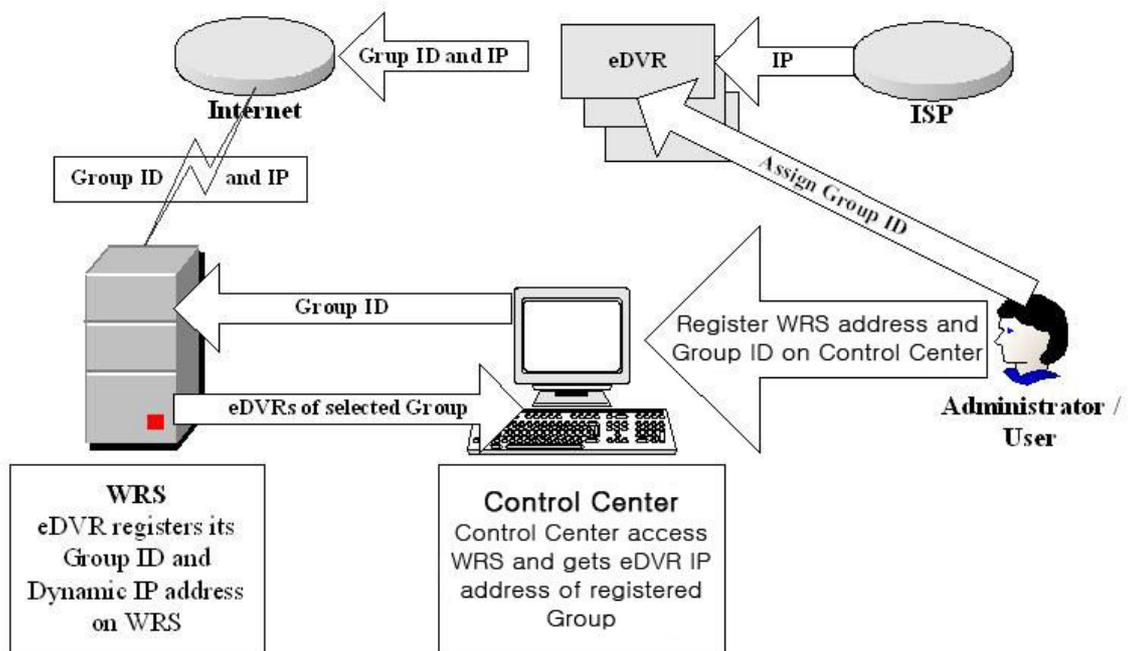


Status

It indicates the status of HVRM registry.

16.8.6.4. NTP Setting

NTP(Network Time Protocol) synchronizes the time of every devices connected to network. It consists of Server that offers standard time on network, and Client for synchronization that receives the time from server connected.

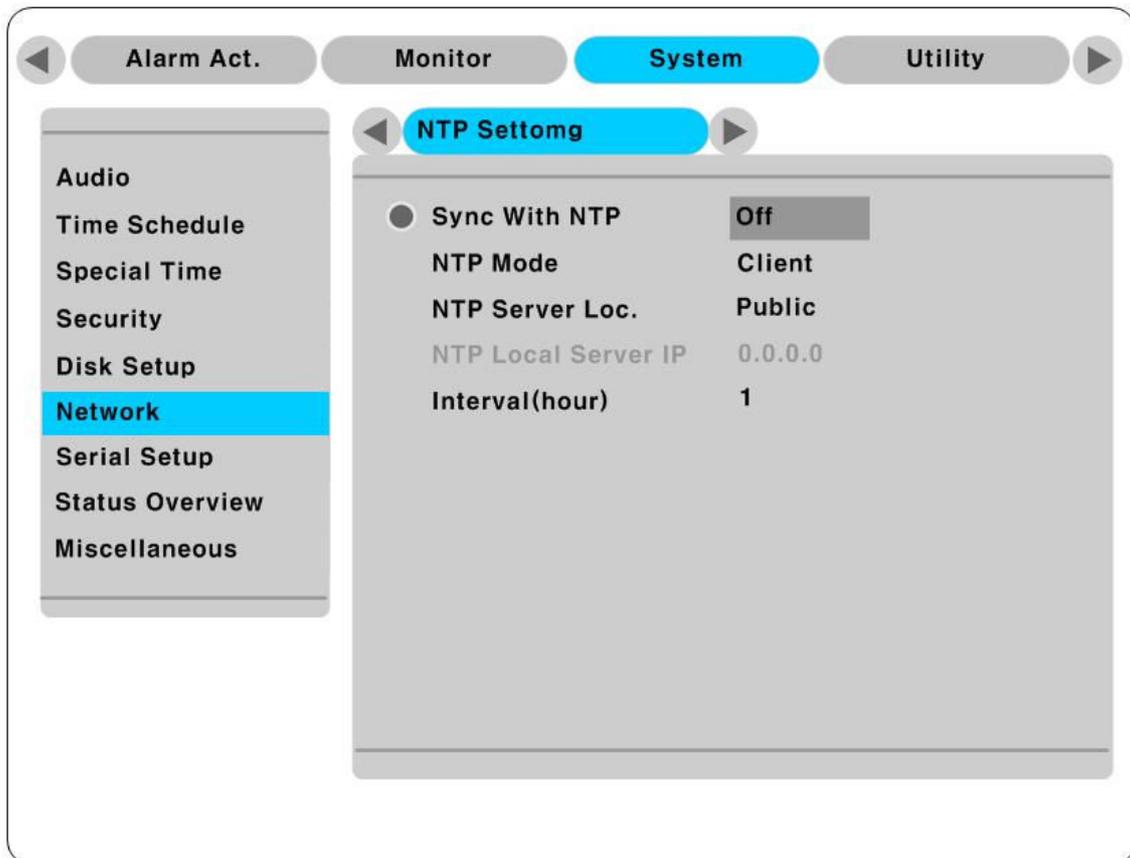

Sync With NTP

It can On/Off NTP function.

NTP Mode

It sets NTP mode of HVRM operating in Client or both.

NTP Server Loc.

It enables when NTP Mode is set to Client. It sets whether NTP server is in Local Network or Internet(Public).

NTP Local Server IP

It enables when NTP Server Loc. is set to Local, and set Server IP.

Input IP of NTP server in local network or HVRM IP that NTP mode is set to Server.


Interval (min)

It sets interval (min.) of Time synchronization.

<Note>
When NTP Mode is Client, Sync with NTP must be set to On.

16.8.7. Serial Setup

H1600L can set all 4 COM port.

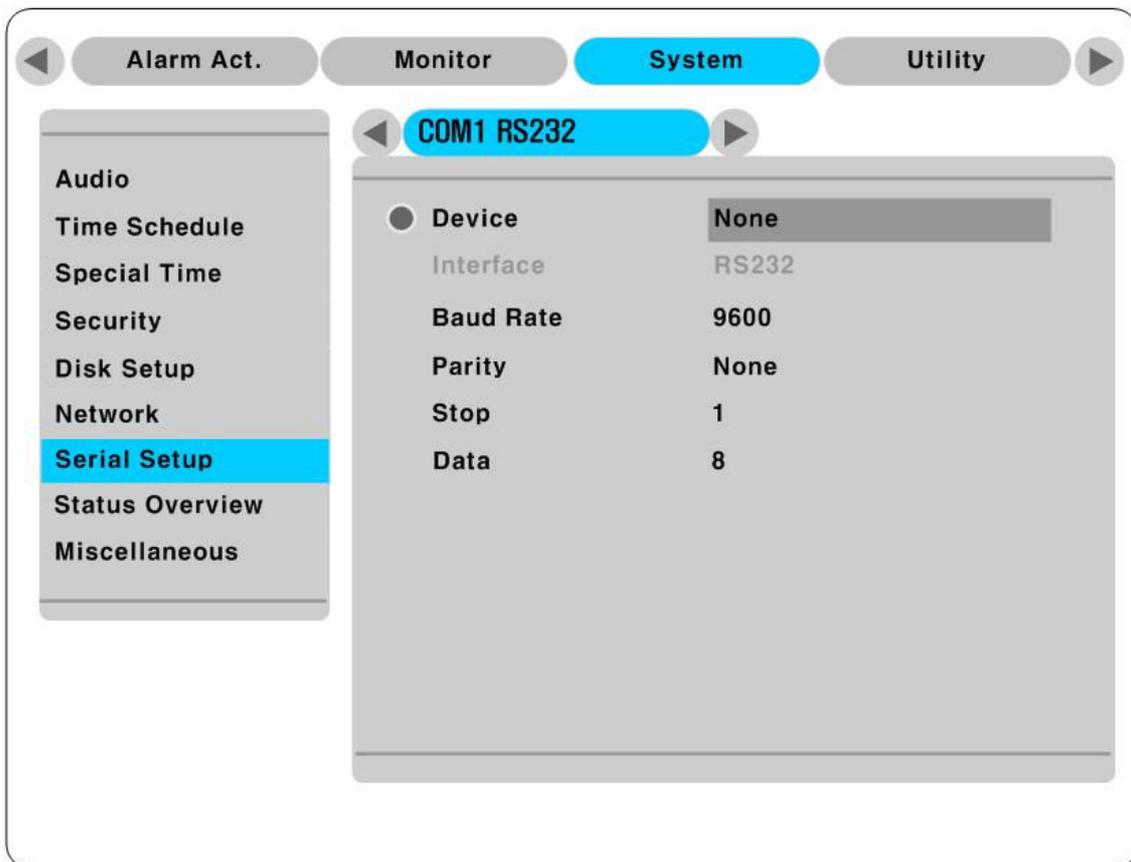

Device

Set external device connected.

Interface

This menu is to set which interface can use among RS485 from “RS485” menu.


COM1, COM3 is fixed to RS232 and COM2, COM4 is fixed to RS485.

Baud rate/Parity/Stop (bit)/Data (bit)

In put suitable value according to external device.

16.8.8. Status Overview

It shows status & temperature of HDD relevant to video recording and Fan speed.

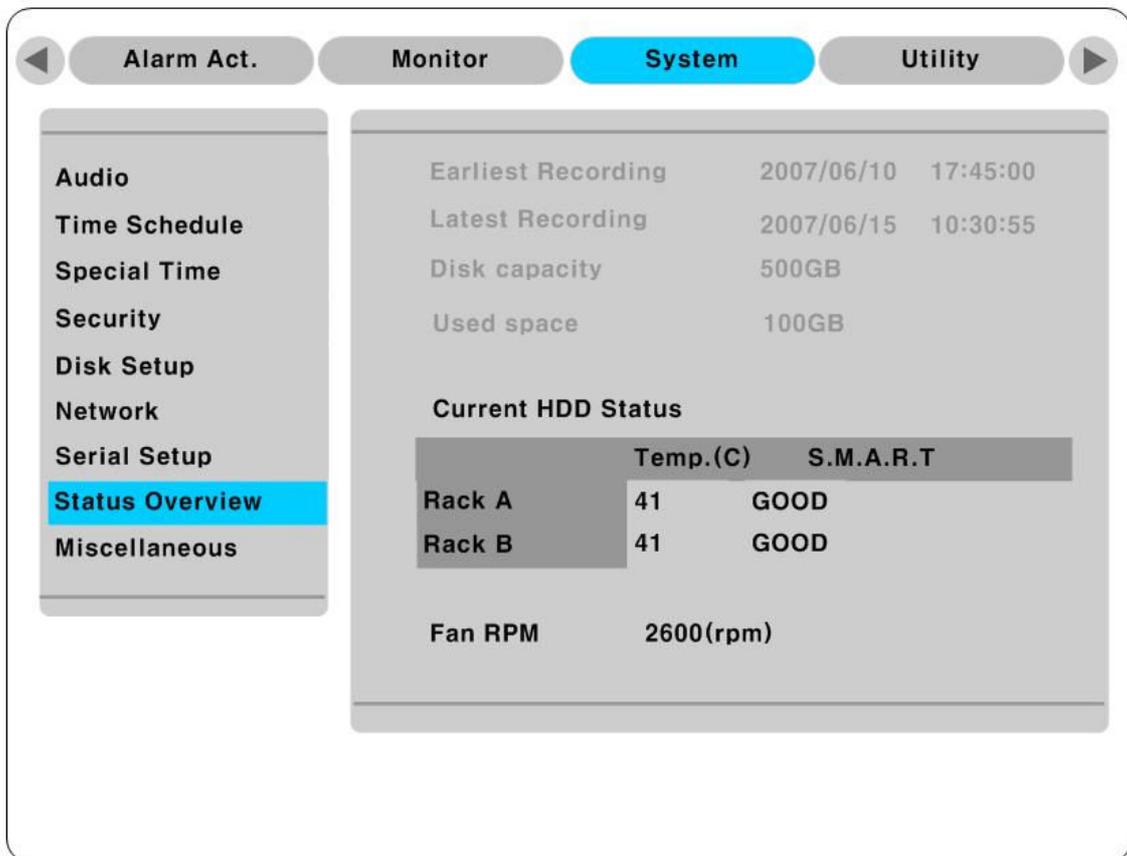

Current HDD Status			
	Temp.(C)	S.M.A.R.T	
Rack A	41	GOOD	
Rack B	41	GOOD	

Fan RPM 2600(rpm)

Earliest / Latest Recording

It shows initial starting time and last time of the recorded file.

Disk Capacity

It shows total HDD capacity installed.

Used Space

It shows HDD capacity recordable.

HDD Temp

It shows HDD temperature installed.


HDD SMART

It indicated HDD status installed in GOOD & BAD.

FAN RPM

It shows FAN speed installed in HVRM.

16.8.9. Miscellaneous

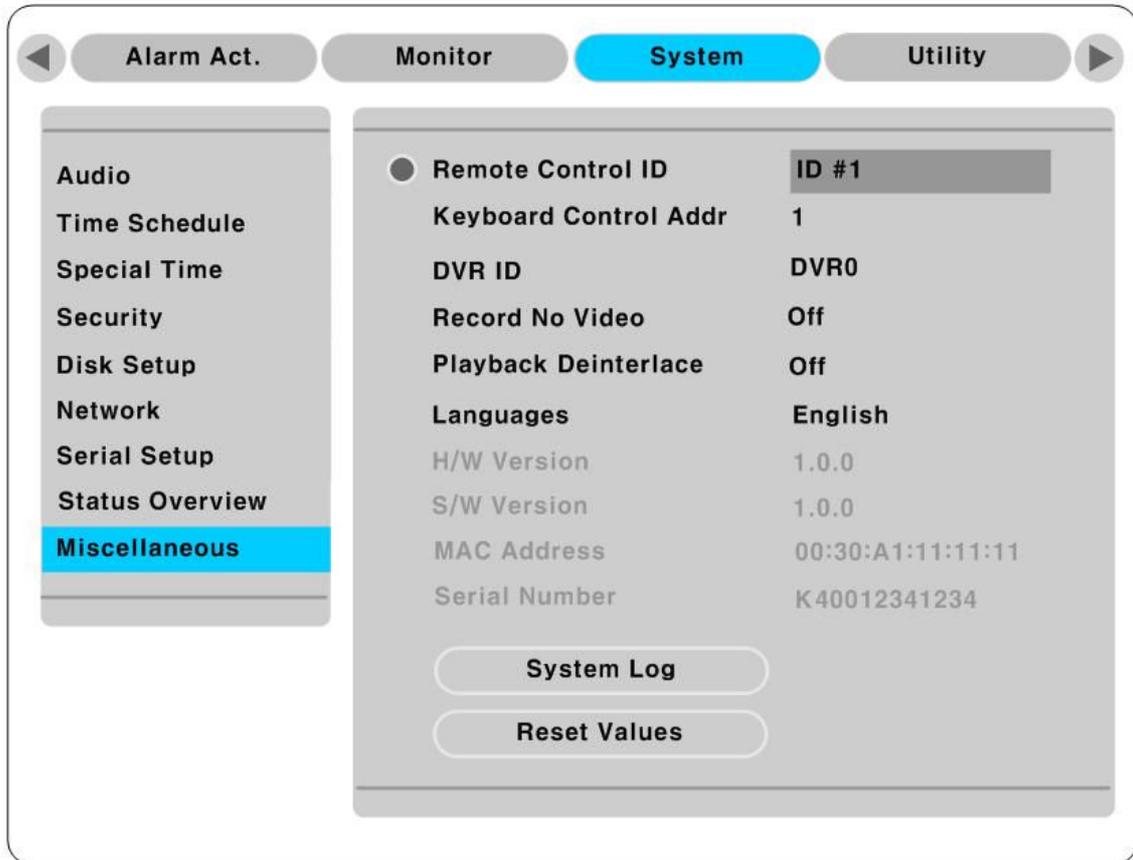

<Order of Button input>

- After press [MENU] button, move to “Miscellaneous” inferior to “System”.

Remote Control ID

Max 16 controller ID can set up and contril via 1 remote controller. Set to Off if it is not used.

<How to register Remote Controller>

- Face Remote controller toward HVRM.
- Press “ID” button on controller when HVRM is responding.
- If ID of Controller does match with ID of HVRM, all Alarm LED of HVRM is ON and sounds.
- It is capable to use after ID match.
- Refer to **“Installation Guide”** for the details.

Keyboard Control Addr

This menu is to set Keyboard address when all functions of HVRM is controlled by Keyboard button. Default value is set to “1”. If several HVRMs connect to a keyboard, 16 channel can clash. Then set to the other address of keyboard.

DVR ID

This menu is set the name of HVRM.

Record No Video

If this is “On”, it records video image which is not input.

Deinterlace On/Off

The “Deinterlace mode” only runs when the recording resolution is in Full D1.

In case of enable it, the Full D1 image with Pause condition the picture will have less tremor.

Encoding Policy

It can set Recording Prior / Networking Prior.

If it sets to Networking Prior, because it compresses video to QCIF resolution except basic recording, it can do monitoring with selection of lower resolution or QCIF resolution to meet the condition at PC client. If it sets to Recording Prio, when monitoring, it always show to resolution set to Schedule Recording.

<Attention>

1. When it changes Encoding Policy setup, it reboot DVR.
2. After it sets Recording Speed/Quality to High, recording capacity can be lowered when set Networking Prior.

Language

OSD menu is supported in multi languages. Select the wanted language.

H/W Version

It indicates H/W version of the system.

S/W Version

It indicates F/W version of the system.

MAC Address

It indicates Mac address of the system.

Serial Number

It indicates Serial number of the system.

System Logs


It is used to view System Log. Press “System Logs” button to view System Logs.

Reset Values

It is used to set system to initial factory setup. Press “Reset Values” button to set factory setup mode.

16.9. Disk Manager (Utility)

It explains adding or formatting internal, external Hard disk. HVRM supports various external storage.

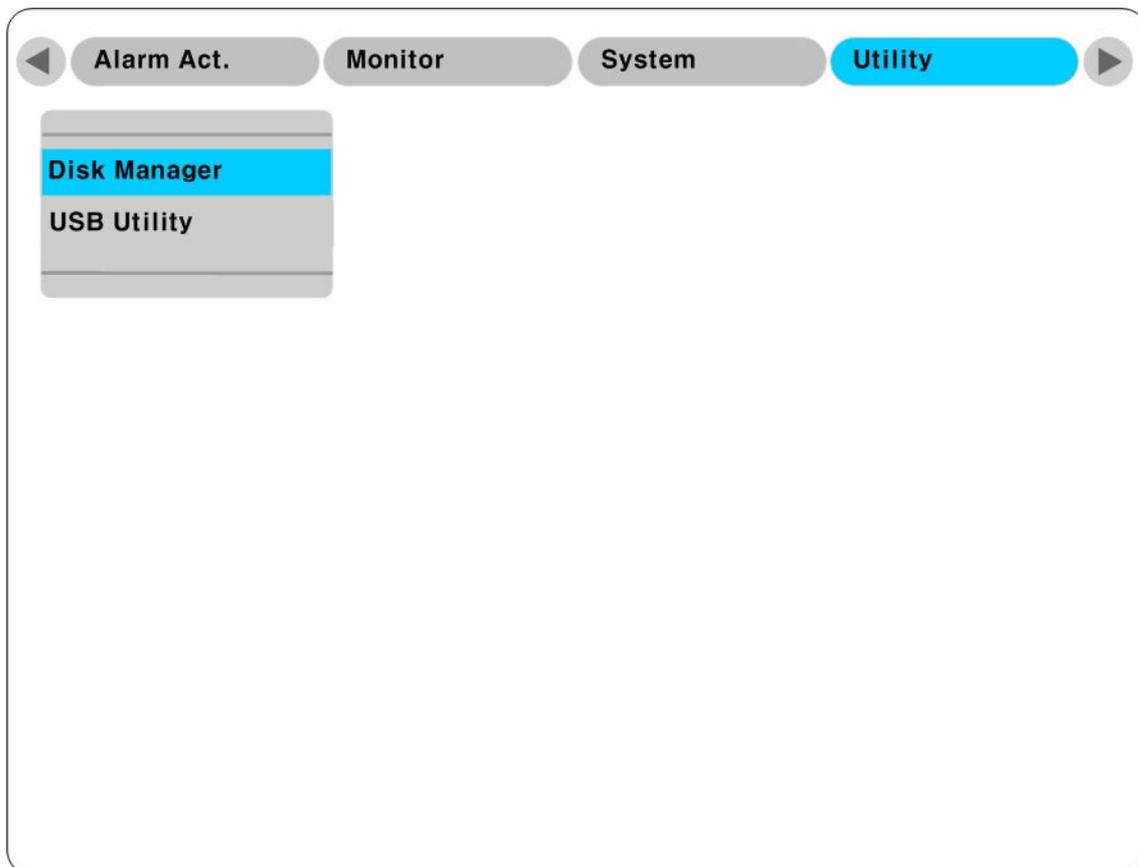


< Order of Button input >

- After press [MENU] button, move to “Utility” inferior to “System”.

16.9.1. Disk Manager

Installed Hard disk is automatically recognized.

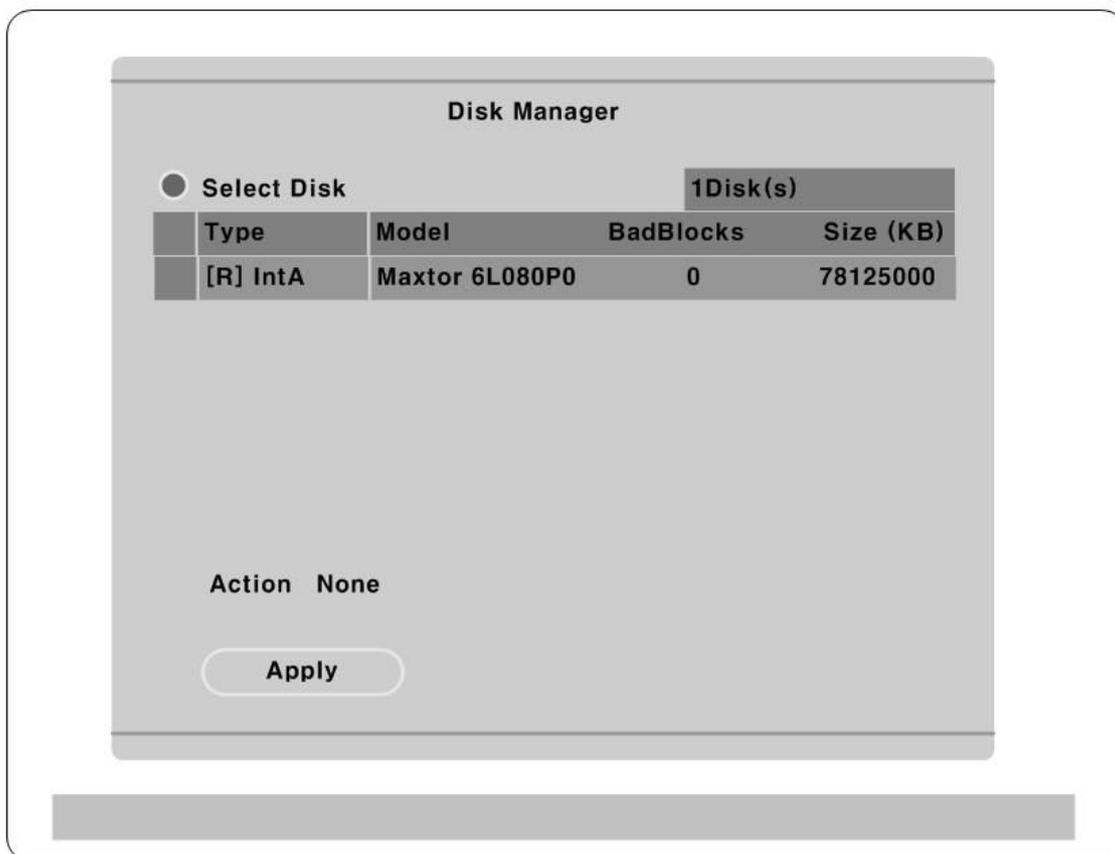

Select Disk

Select disk to set.

Action

Select wanted work among the menus, "Add/Remove/ Confirm Removed/Add used".

[Add] : Add Disk. Use disk that there is no partition table. Partition table can be removed from PC. When adding HDD, "Alarm Partition" menu is activated to set up. "Alarm Partition" indicates dividing 1 HDD to Recording part and Alarm Recording part.

[Remove] : Remove present HDD used logically. Later it is possible to use it through 'Add used' without formatting.

[Confirm Removed] : Complete removal from the lists when it remains in the list after HDD removal from HVRM.

[Add used] : Adding HDD again without formatting that is used
< **Compatible File System**> Disk that is used in HVRM reusable again

without deleting data through Add Used.

FAT32 Format

FAT32 Format when connecting external Hard disk.

Execute FAT32 Format for Backup/Copy in partition of under 250GB. For execution of FAT32 format, creat partition through disk manager of PC first. If HDD size is over 250GB, create several partitions smaller than 250GB and execute FAT32 formate in each partition.

Type

Followings indicate the type of HDD.

- [R] : It is recordable by completion of HDD format.
- [V] : It is being connected and formatted to HVRM file system. It is changed to [R] through ‘Add used’. It does not ‘Format’.
- [F] : It is connected, but it is required to change to [R] using ‘Add’ due to the difference of File System in HVRM (FAT/FAT32 File System).
- [X] : HDD connection cable is not connected or problem in HDD. Check the cable and reboot the system or remove it from the list executing ‘Confirm Removed’.
- [C] : Usable when backup to external CD-Writer

< Compatible File System >

How to Use.


- After upgrading DVR, HDD that recorded in previous version is indicated to [V] in Disk Manager.
- Select HDD in ‘Select Disk’.
- Press ‘Apply’ after selection of ‘Add Used’ at Action.
- Press OK at ‘NOTICE - Disk reused for recording’.
- Convert with messege ‘Converting files from old version may take a few minutes’ at lower screen.
- If Type is changed to [R], it indicates HDD usable with completion.

Attention

- If it upgrades system, HDD that is recorded in previous version is signed [V]. It must do Add Used for the reusable.
- Based on HDD size, it can take 10 second to a few minutes to Add Used.
- Playback from HDD recorded in previous version can not be operated smoothly and CD backup is not available.
- Previous recorded data section does not support Watermark or Smart Search.
- It is designed to be compatible file system. But there is the limit in the function/ backup as above. It recommends backup in advance before the upgrading.

16.9.2. USB Utility

It supports firmware upgrading and setup saving & sending, Text file saving for printing set value through USB.

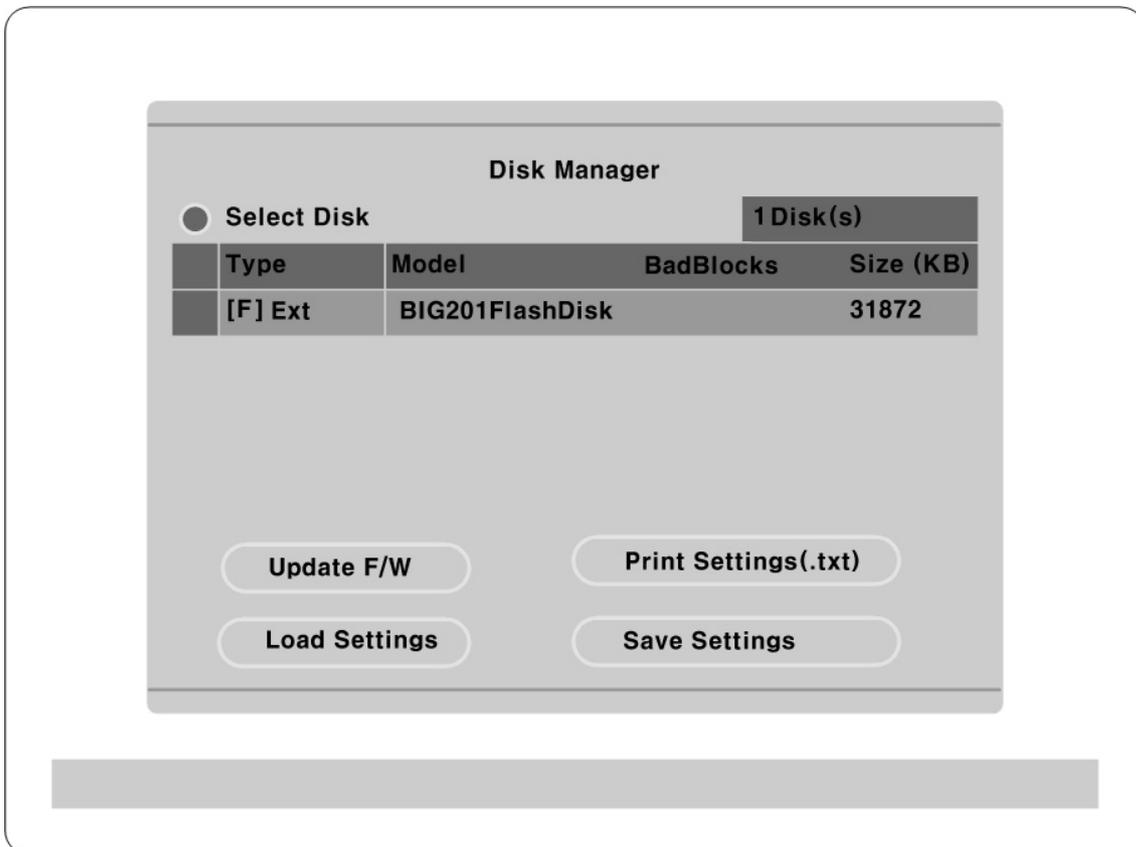

Update F/W

After saving upgrade firmware for USB use to USB device, connect HVRM and press 'Update F/W' for firmware upgrading. Upgrade firmware for USB use is supplied in “~.date” file.

Print Settings(.txt)

Function to save Set value for printing into USB device in Text file. Saved data file can be opened through Text editor like Notepad to print and check set value saved.

<List of setup data files saved in TEXT >

- Camera setup data
- Recording setup data
- Alarm Recording setup data
- Network setup data
- Audio setup data

Load Settings

Set the system as set value saved in USB device.

Save Settings

Save present set value to USB device.

17. Web Viewer

WebViewer is Web application program loaded to monitor real-time image or to monitor the images recorded through Web browser to PC located remotely.

WebViewer is divided into Login page and Monitor to do monitoring real-time images, Playback to replay recorded images.

17.1. LOGIN

USER LOGIN

IP Surveillance system

USER ID Save ID

PASSWORD

LOGIN RESET

Your System Check !!

ActiveX for internet Explorer 6.0 or the above.


If ActiveX control can't be loaded, please download and install Webviewer ActiveX Control.
>> [Download Webviewer Installer](#)

After input IP address that set to system, then WebViewer Login page will be connected.

Input the set of User ID & Password, click 'LOGIN' to access.


17.1. User Connection setup

To login WebViewer, input ID & Password of user that set to Configuration Tool program of Control Center.

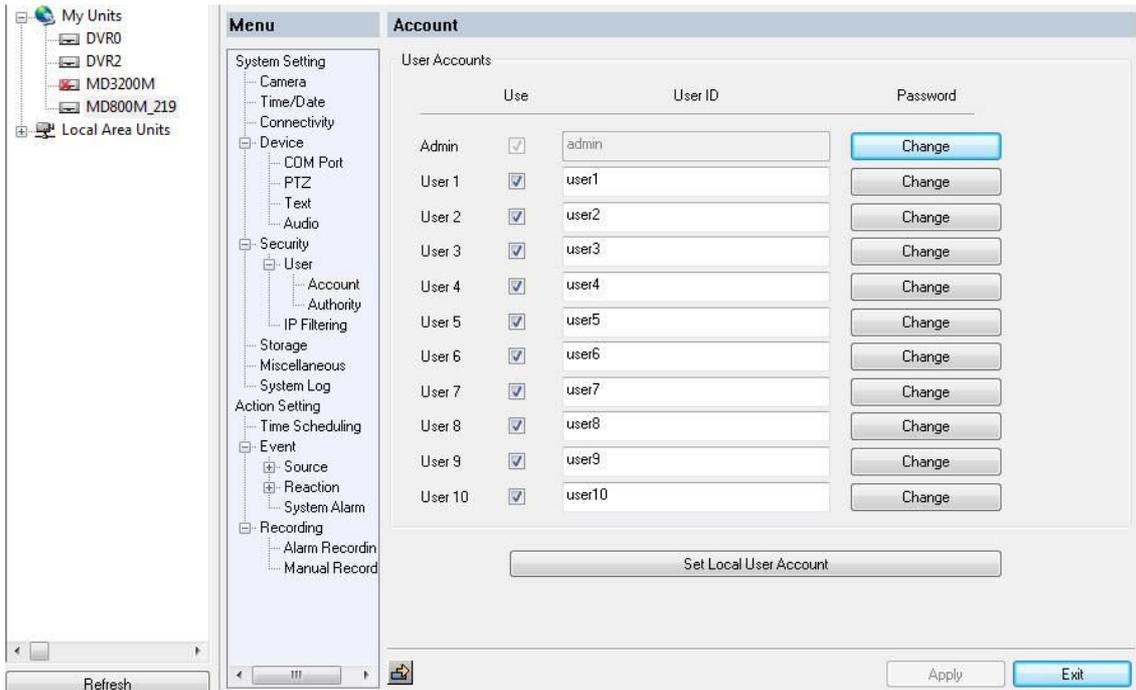


It can use total 11 ID including administrator & general user.

For the security, change ID & Password of administrator. For the unused user's account, it cancels the check of 'Use' part.

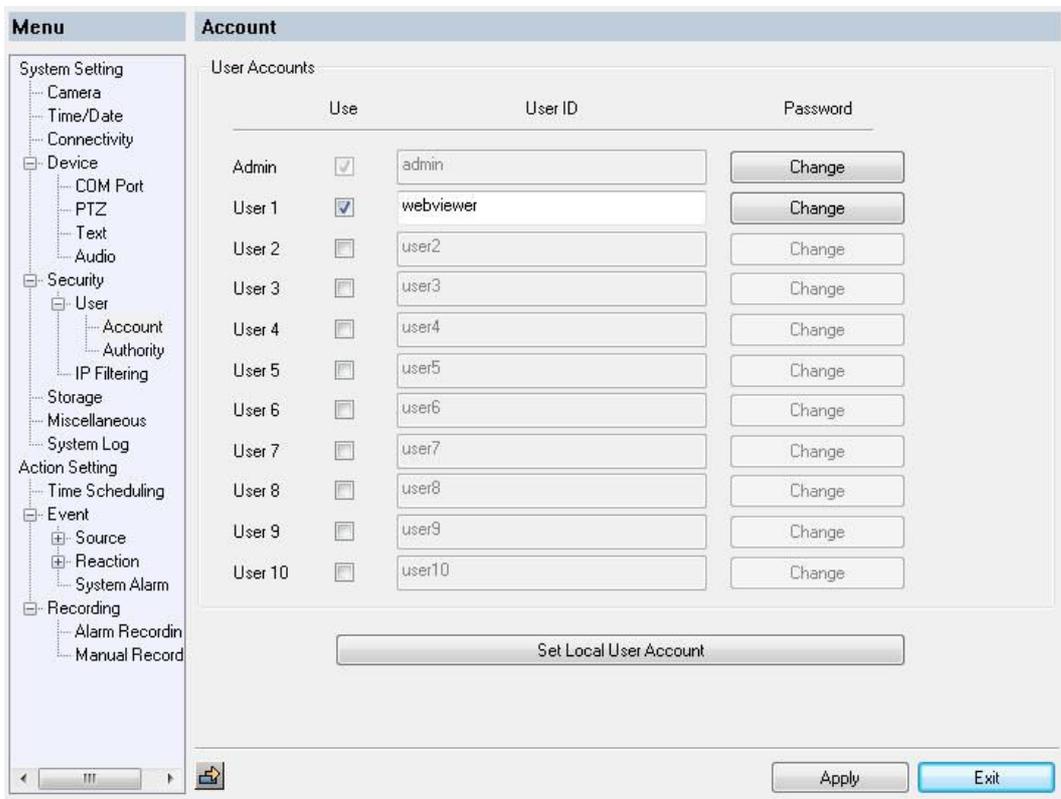

This is the changed ID & Password at Control Center Configuration Tool.

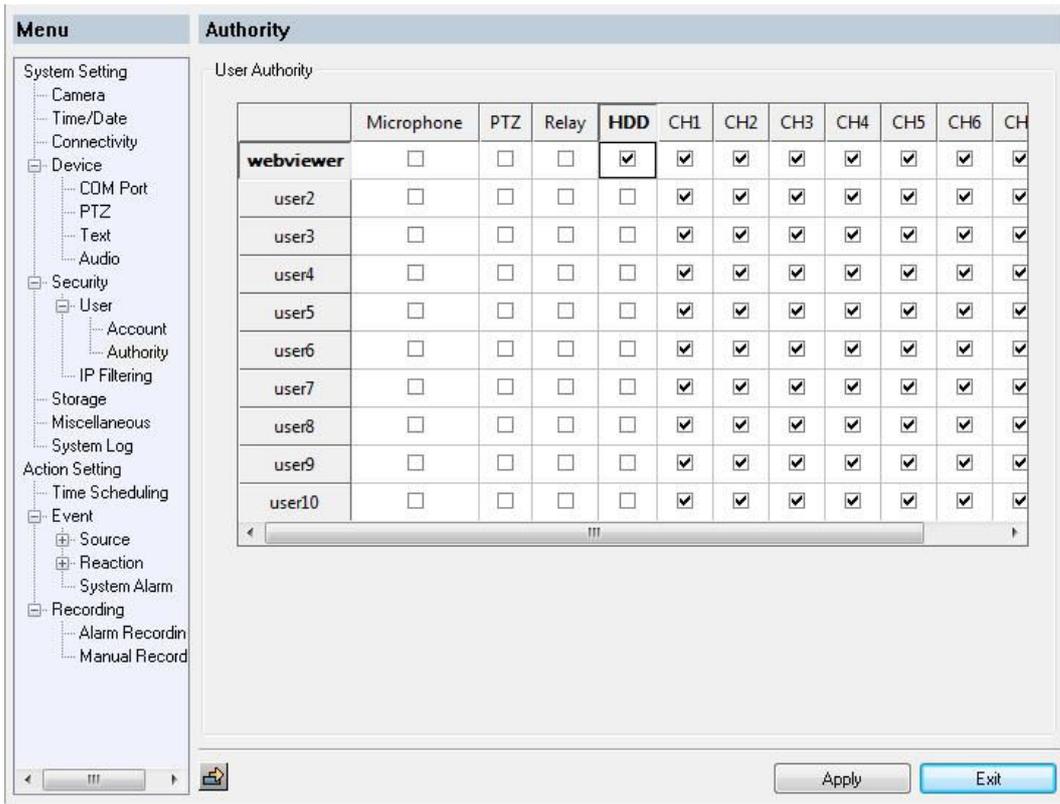

After complete of account setup, setup authorities of user's ID.

To use Playback page, check 'HDD' in User's account at Authority of Configuration Tool.

Also, click to Check box and Apply to use 'Microphone', 'PTZ', 'Relay' by user wanted.

If it shows 1CH image only, check CH 1 and uncheck the rest channel and function.



17.2. Usable Browser

WebViewer is optimized to Windows Internet Explorer 6.0 or higher in PC for smooth use.


Webviewer Installer

Login page provides manual installation program to use WebViewer function.

PC that access to WebViewer first installs ActiveX to use WebViewer's function. At this time when installation is not smooth, installation program needs to download from Login Page and install manually.

<Note>

When install WebViewer Installer, it must close all program related to Control Center. It might not be efficient to install.

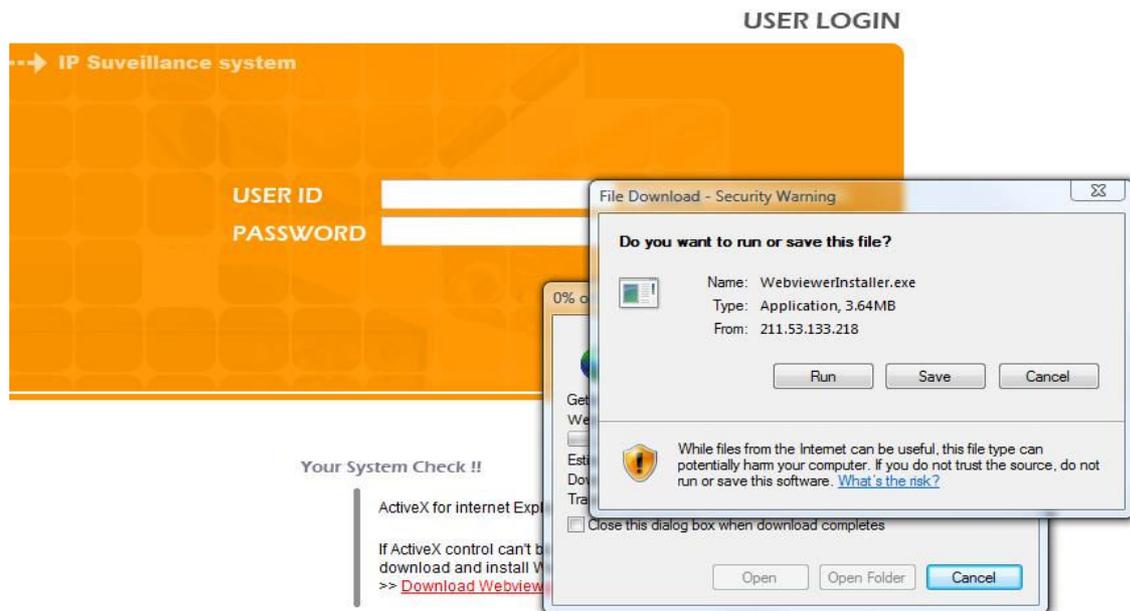

If execute Webviewerinstaller.exe file downloaded, it can use WebViewer function normally.

Save ID

Select Save ID at check box, it is to connect same User ID at next connection automatically. It is applied to a PC that Save ID is activated.

<Note>

In case of Port changed, when access to Web Viewer, IP address and Port should be input.

Ex.) In case of Port changed to 6000

<http://192.168.0.1:6000>

17.3. Monitor

The screenshot displays the 'Web Viewer Monitor' interface. At the top, there is a navigation bar with a grid icon, a channel selection bar showing '1 | 4 | 9 | 13 | 16 | 25 | 36', and buttons for 'Auto', '5 fps', and 'Go'. Below the navigation bar, the main area is divided into several sections:

- Channel Selection:** A grid of 32 numbered buttons (1-32) for selecting different camera channels.
- Sensor:** A grid of 16 sensor control icons.
- Relay:** A grid of 16 relay control icons.
- Mic:** A grid of 16 microphone control icons.
- Camera Feeds:** A 4x4 grid of 16 camera feeds, labeled 'Cam 1' through 'Cam 16'. Each feed shows a different view of a factory or workshop environment.
- Event Log:** A table at the bottom showing recorded events.

Time	Event	Message
2007.11.13 10:19:19	3 On	CH3 - Motion Detected
2007.11.13 10:19:18	5 On	CH5 - Motion Detected
2007.11.13 10:19:18	6 On	CH6 - Motion Detected
2007.11.13 10:19:18	1 On	CH1 - Motion Detected
2007.11.13 10:19:17	3 On	CH3 - Motion Detected
2007.11.13 10:19:17	4 On	CH4 - Motion Detected

When it is authorized with User ID & Password input at Login page, it moves to Monitor page. At Monitor page, monitor real time image of cameras connected to DVR, or it can control PTZ camera, Relay, and use Microphone function according to user's authorization.

Study introduction of each Monitor part and functions of the page.


17.3.1. Screen division & Change of video location

When access to first Monitor page, it is displayed into 9 division, 16 divisions or 32 divisions according to number of channel.




It can to change to 1, 4, 9, 13, 16, 25, 36 divisions by click number on top of page.

Also, it can change to 1 channel mode by click any one of channel image.

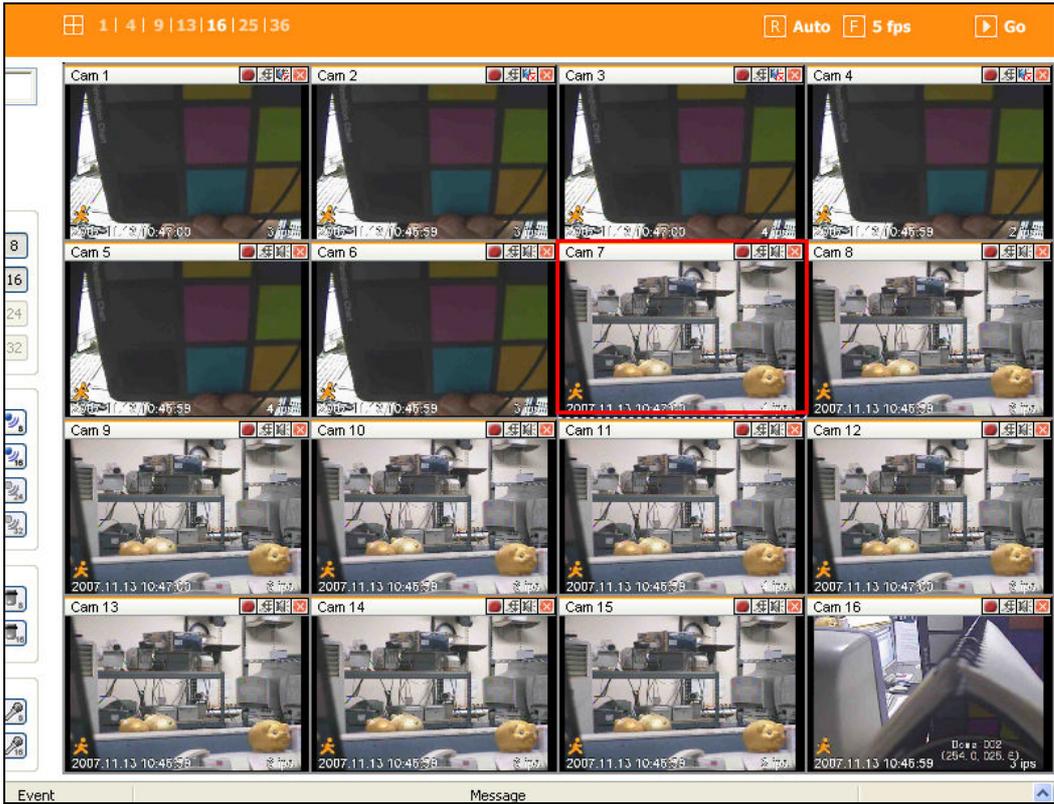

Double click on one of the playback screen to convert in 1 channel mode.

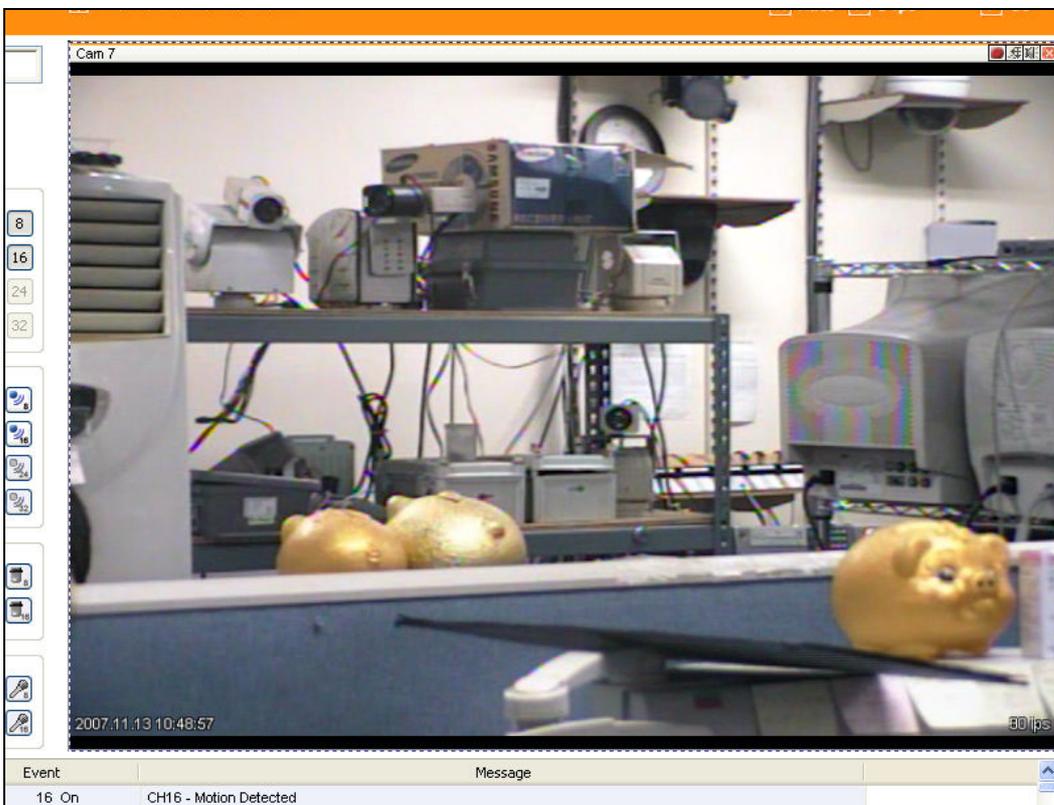


After conversion to 1channel mode, double click on screen to return to previous division channels.

At division screen, it can change screen location.

If 3channel image moves to 6ch, drag 3ch image and drop on 6ch location so as to exchange between 3ch and 6ch image.

17.3.2. Change to Resolution

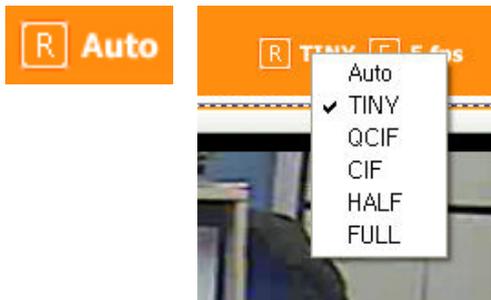

As above picture, click the menu for the menu of resolution. And select out of Auto, TINIY, QCIF, CIF, HALF, FULL, and then relevant resolution is applied to all channels.

<Note>

In case of MPEG product, frame rate change and resolution change menu is not shown characterically.

<Note>

When resolution changes, video size is not changed. The change of video size means the change from small size to big size based on selection of division screen.

17.3.3. Change of Frame Rate



As above picture, click the menu on top of page for the menu of transmission speed.

30fps, 15fps, 10fps, 8fps, 5fps, 4fps, 3fps, 2fps, 1fps can be selected. When it selects, it is applied to all channels. Default is 5fps.

<Note>


It may not speed as fast as it selects according to network speed that connected to a system and line speed connects remotely and performance of PC.

17.3.4. Moving Playback




Move to Playback page by click the menu as above picture on top of page.

17.3.5. Channel On/Off

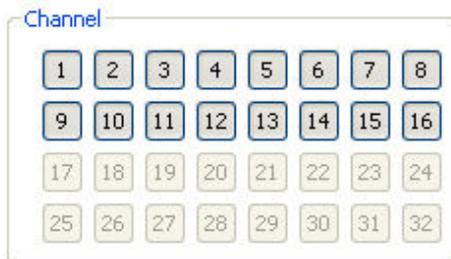

It is On/Off button for the Channel located to left in page. Click the channel wanted to On or Off. And Default is On.

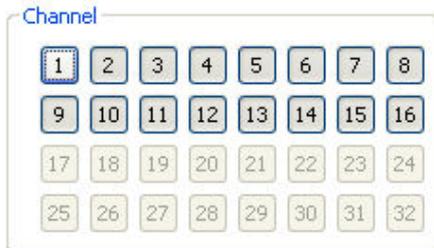

Above picture refer to Off channel 1. In case of Channel Off, relevant button is projected. And video does not come and changed to black screen.

<Note>

Disabled channel button refers to do not support and relate to this unit.

17.3.6. Sensor Indication

The icon indicates when sensor occurs in system.



When it sensed, relevant sensor icon comes to Red, and indicates sensor number of video.



<Note>

Disabled sensor button refers to do not support and relate to this unit.

17.3.7. Relay Operation



It can On or Off Relay of the unit. Click the number button to activate Relay On, then the icon changes from Blue to Orange color.




<Note>

Disabled Relay button refers to do not support and relate to this unit.

Relay is need user's authority. Refer to user manual in the unit for the setup of User's authority of Relay..

17.3.8. Using Microphone

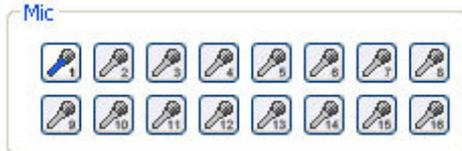

It can On or Off the use microphone. Default is Off and it is changed from the Blue to Red when click the button for the use Mic.



<Note>

Unactivated Relay button refers to do not support and relate to this unit.

17.3.9. Event data

Time	Event	Message
2007.11.13 14:44:35	1 Off	1 - Relay Output Off
2007.11.13 14:44:34	User Login	User Login (211.53.133.67:Alarm Log:admin)
2007.11.13 14:44:29	1 On	CH1 - Motion Detected
2007.11.13 14:44:25	1 On	1 - Relay Output On
2007.11.13 14:44:23	6 On	CH6 - Motion Detected
2007.11.13 14:44:22	6 On	CH6 - Motion Detected

It shows real time event data occurred at the bottom of monitoring page.

Indicated Event data list are as follow.


(Table. Event Icon)

Button	Function
	Motion Detect On
	Sensor Input
	Relay Output On
	No Video, Video Detected
	Text Input
	User Login
	Configuration Changed

17.3.10. Video Recording & recording Pause Video

17.3.10.1. Video Recording

During monitoring, it can record max. 10 minutes of video by click Quick Recording button “”. During Quick Recording, recording time is indicated on video.

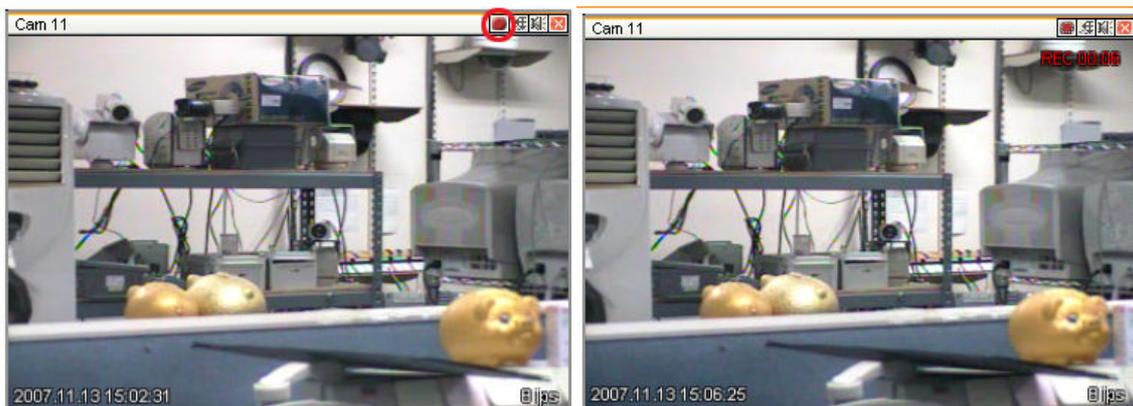


During video recording, if click Quick Recording button “” to stop recording and open the dialogue box to store recorded files. At this time, user can save it to the directory with any file name by user.

Saved recording file is saved into “*.re4” file format. re4 file can playback through Control Center Playback program or Mini Player program.

17.3.11. Using PTZ



Among the icon on top of video on monitoring, click 'PTZ' to activate interfacing to control Pan, Tilt, Zoom, and Focus. But, when PTZ camera is connected and ready to set PTZ, the button is activated to use the functions.

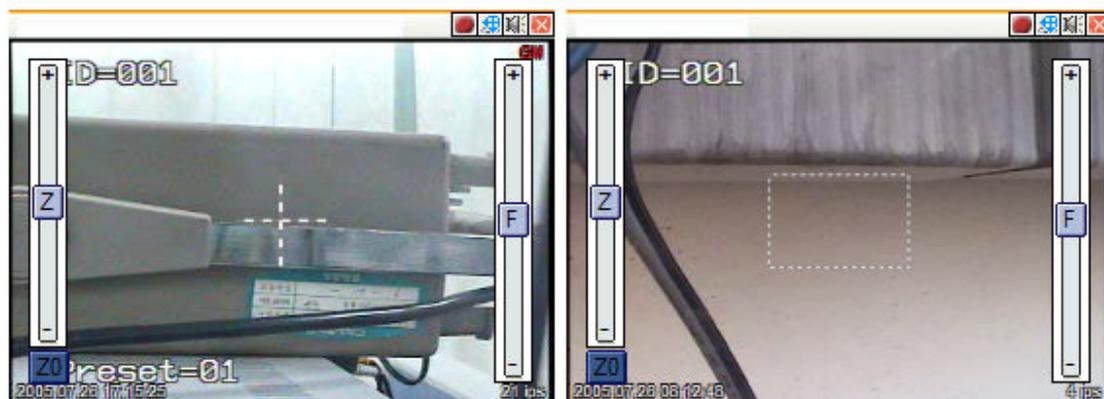

Pan, Tilt Control

Mouse is on the image and click right button to pop-up menu for the selection or "PTZ" or  button. Then it show Cross line on the middle of screen and click image to operate Pan, Tilt. At the middle click Left/Right direction to control Pan, and Click Up/Down direction to control Tilt. Click as far from the middle to activate Pan/Tilt faster.

Zoom, Focus Control

Move mouse to the edge of left & right to see slide bar for Zoom, Focus.

The unit Area Zoom In available has Zoom Zero operating button. It can Zoom In/Out using slide bar at left of image, left slide bar can control Focus.

Moving Preset

In case of Preset set, Mouse on image press right button for pop-up menu and “Goto Preset” is indicated additionally. When select Preset list, it moves to Preset position selected. Preset should be set up by user in advance.

Activating Auxiliary

In case of Preset set, “Auxiliary” is indicated additionally, and it operates action when select registered menu.

Group mode

In case Group mode set to use, if PTZ enable, it signs 『GM』 at top right of screen which means the status of operating of Group mode.

Area Zoom In Control

In case of Connect and set PTZ cameras that supports Area Zoom In, it is usable relevant functions. A dotted quadrangle is shown. And it is the mode to selects the specific area with dragging mouse for operation of Pan, Tilt, and Zoom automatically, based on the location of relevant area. To change normal PTZ mode, press right mouse button on the image for menu pop-up, then select “Normal PTZ Mode” to convert normal PTZ mode.

<Note>


Refer to ‘PTZ Setup’ list for PTZ camera list and PTZ setup.
Contact to local supplier for the cameras that support Area Zoom In.

17.3.12. Using Audio



In case of Channel setup sync with Audio, press right mouse button on the image to activate pop-up menu to “Listen” or activate Audio listen button. First default is Mute. In case of listening Audio, select pop-up menu or button. After cancelling mute, control audio volume. It can mix several channels of audio.

17.3.13. Closing Video Channel

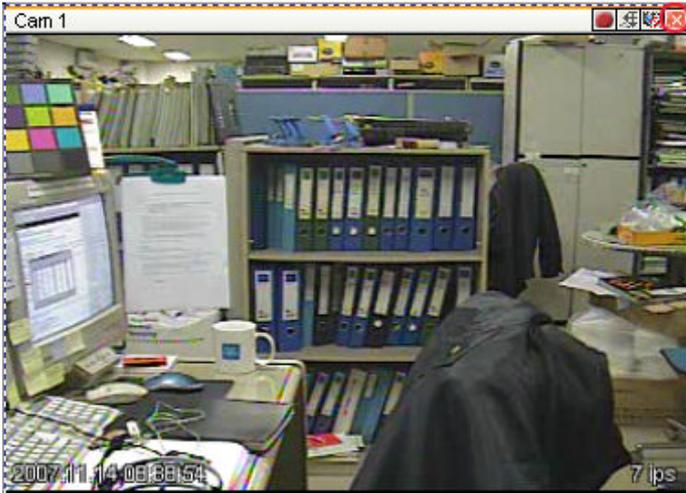

Cancel for disconnection of image monitoring by click ‘Close’ at top right on screen, then it comes to black screen.

To reconnect the channel disconnected, it can reconnect relevant channel using ‘Channel On/Off’ menu.

17.4. Playback

The screenshot displays the 'Web Viewer Playback' interface. At the top, there is a navigation bar with a grid icon and '1 | 4 | 9 | 16' indicating the current view. Navigation buttons for 'Prev', 'Next', 'Save', 'Print', and 'Backup' are present, along with a 'Go' button. The main area shows a 4x4 grid of 16 video channels, each displaying a different scene from a factory or laboratory. To the right of the grid, there is a dropdown menu for 'MD1600H-221' and a 'Connect' button. Below this is a 4x4 grid of buttons for channel selection. Further down is a 'Channel' grid with numbers 1 through 32. Below the channel grid, there is a status box showing 'Capacity 2853.37G / Free 142.00M', 'From : 2007.11.03 03:38:48', 'To : 2007.11.14 08:45:12', and a '99%' progress indicator. Below the status box is a calendar for 'November 2007' with a date range of '2007.11.13 08:40:12 ~ 2007.11.14 08:40:12'. At the bottom, there is a playback control bar with buttons for 'Prev', 'Next', '1x', '24h', and a 'Go to' button with a time input field set to '08:40:12'.

This page is to playback recorded images, and user who has authority of 'HDD' among user ID or administrator can use this function.

Playback that is made up 16 divisions can play the images by searching through calander by recording period and moving the period. It can backup recorded image and also print Pause image or save to Bmp file.

17.4.1. Video Division & Changing Channel




Playback supports 1, 4, 9, and 16 divisional screens. It can select division using menu on tip of page as above picture. 32ch DVR can call the channel using Group moving button as follow.




If screen shows 4 divisions CH1~CH4 and look for next CH5~CH8, it can change the channel with click 'Next' button. Press 'Prev' button to call for previous channel group CH1~CH4.

17.4.2. Image recording

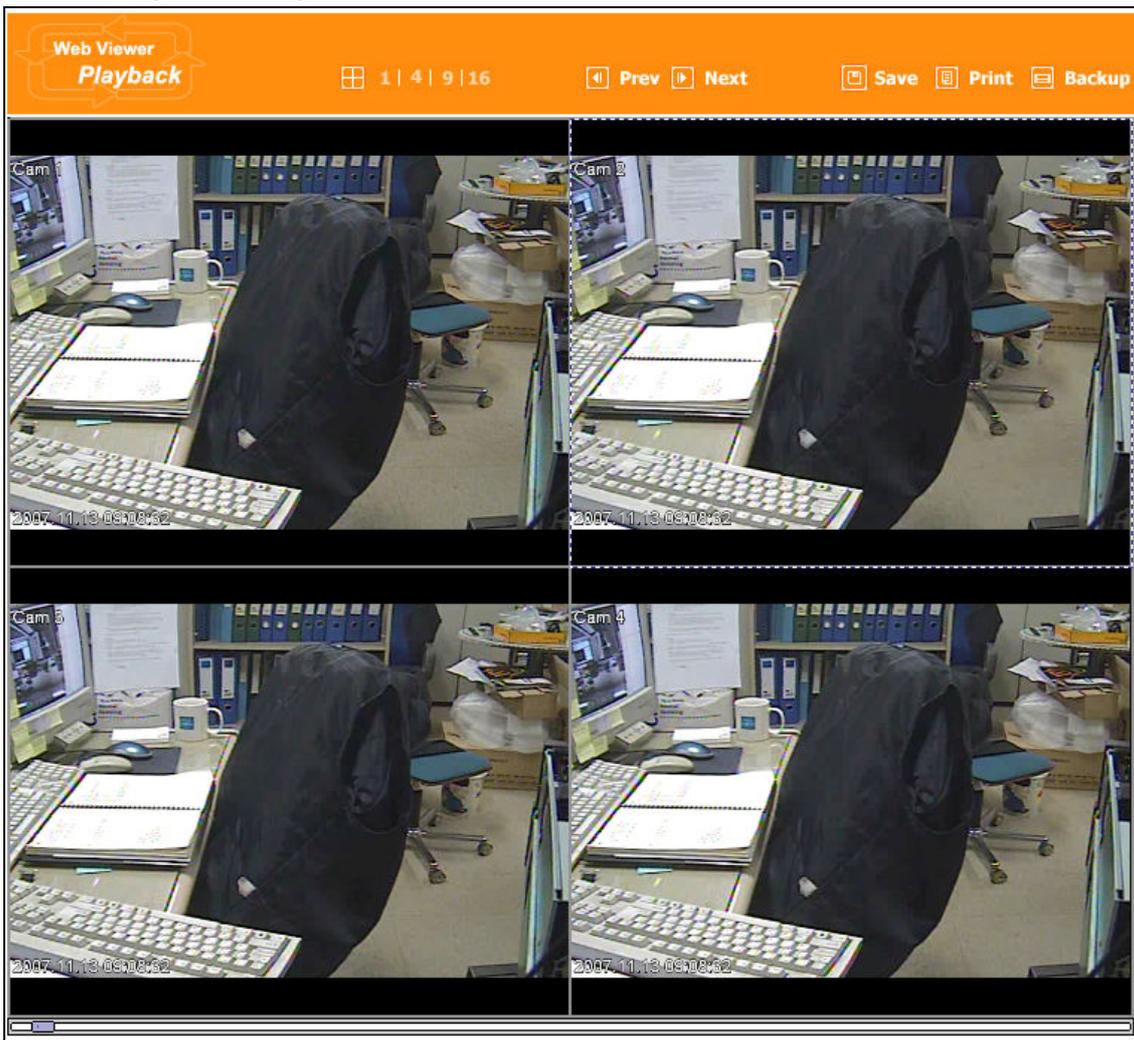

It can save playback image to BMP file.

Click mouse to channel to save. Dotted line will be surrounding to the selected channel, and click 'Save' button.

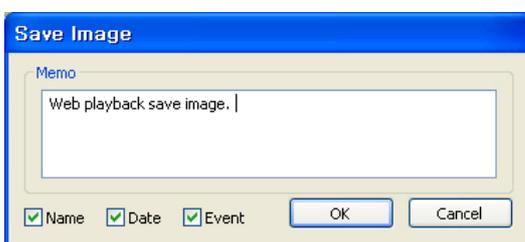


Save Image dialog box appears, then it can input message or select channel name, date, event data.

Press 'OK' to open dialog box for the saving location, then save bmp file.

17.4.3. Printing

Select image with mouse for the channel to print image saved, and then click 'Print' button.

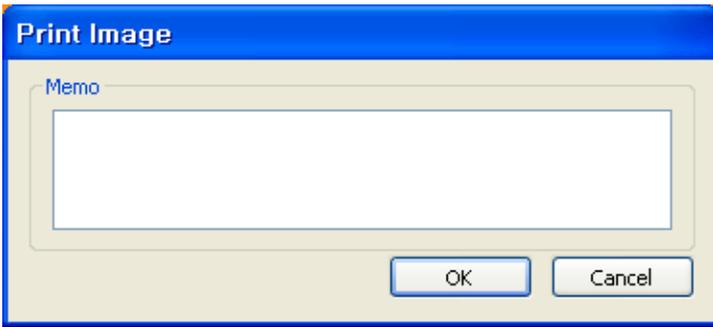


Window comes to input Memo, and click 'OK' button to print the image through the printer connected.

Print material includes 'Printing Date', 'Channel name', 'Recording Date' 'Event', 'Memo'.

17.4.4. Backup

It can save recorded image to PC in avi or rec format by channel.

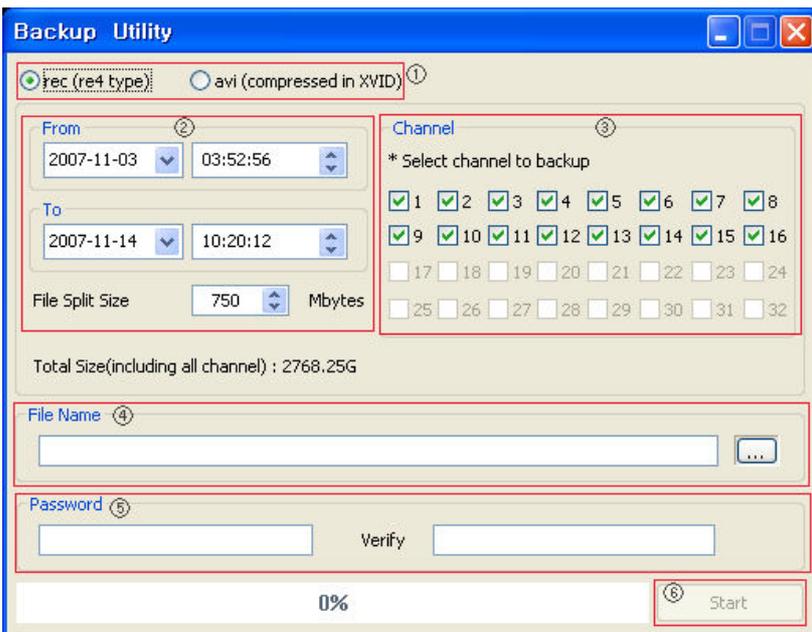


- ① Indicate file format to backup. In case of backup in .rec file, it can play through Control Center Playback program or Miniplayer. And XVID codec is needed in PC playing in case of .avi file back up.

Re4 backup can backup all channels simultaneously, and avi backup can do one channel only at once.

- ② It can select recording time to backup. File Split Size divides the file to the set value in case of over limits of the capacity set. Input range of File Split Size is from 10 to 2,048.

After completion of recording time selection, total size comes. This is total size for recording, and shows approximate size on the basis of all channels' backup. Even if it makes for 1 channel only, it shows the total channel base.

- ③ It can select backup channel. When avi backup, it can select 1 channel only.
- ④ Input the location & file name to save or select folder through button, and input name.
- ⑤ It can input password backup file, max. 14 digits.
- ⑥ After select backup file format and channel, recording time, press 'Start' button for the window that shows the backup processing status and processing backup.

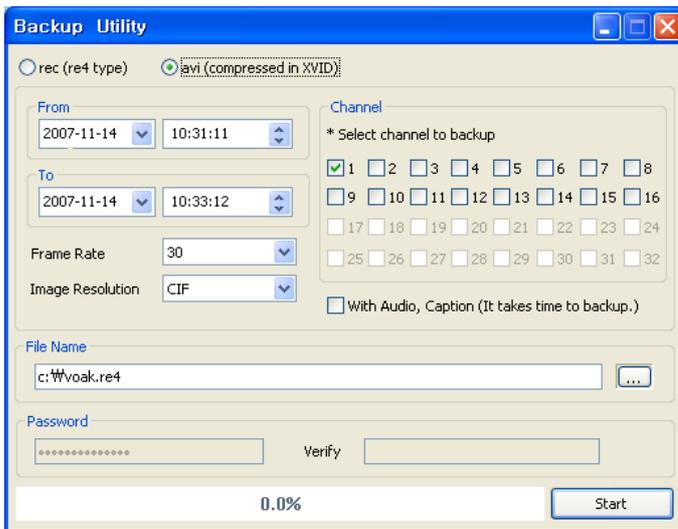

When select avi file format, File Split Size item disappears and replaced to Frame Rate setup and Image Resolution setup item. Also it shows window the select that can includes Audio & Caption.

17.4.5. Web Monitor



Click 'Go' button at top of page, and it can move Web monitor page.

17.4.6. Channel On/Off


It is the same function like Channel On/Off function at Web Monitor.

It is Channel On/Off button located on right of Page, and click On or Off page for wanted channel. Default is On.

<Note>


Disabled Channel button refers to do not support and relate to this unit.

17.4.7. Saving time & Checking Rec. Capacity

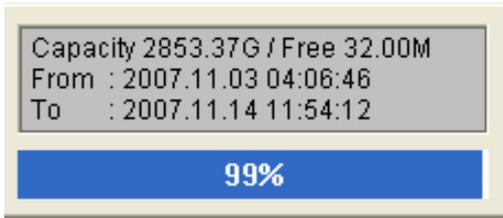

It indicates total capacity of HDD & remains and shows Starting date & Last date of recording. Also it shows percentage (%) for HDD capacity.

17.4.8. Searching Calander

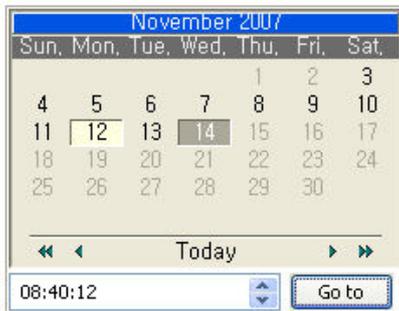

Recorded date is abled in black color, and others unrecorded date disabled in grey. Select button after select date & time so as to playback images on the date & time selected.



When click 'Go To' button, it indicates for 24hours from the time selected at left bottom. As above picture, it is possible to change the time zone with '24h' button.

17.4.9. Functional function at the buttom of monitor



- ① Indicates playback range of recorded image.
- ② Press button as the time set at (5) so as to change the time zone to playback in forwarding and backwarding.
- ③ From left button, it can 'Move a frame back', 'Play backward', 'Stop', 'Play', 'Move a frame forward'.
- ④ It is the function to set play speed. After click the button, it can set the play speed '0.5x, 1x, 2x,

- 4x, 16x, 32x, 64x, and All’.
- ⑤ It is the function to set play area. After click the button, it can select play area ‘10min, 30min, 1hour, 3hour, 6hour, 12hour, 24hour’.
 - ⑥ It can select DirectX use or not. If check DirectX mode, it can play image into Direct Draw based on graphic card and performance of PC.
 - ⑦ It is the function to set audio play or not, and volume.

EXTENSION


18. External device connection

External device connection is based on the standard of H1600L

18.1. Using Text device


There are 4 essential setups to use Text devices; Text menu, RS232 menu of Serial Setup, Alarm Rec. menu, Recording menu.

18.1.1. Setup in Text

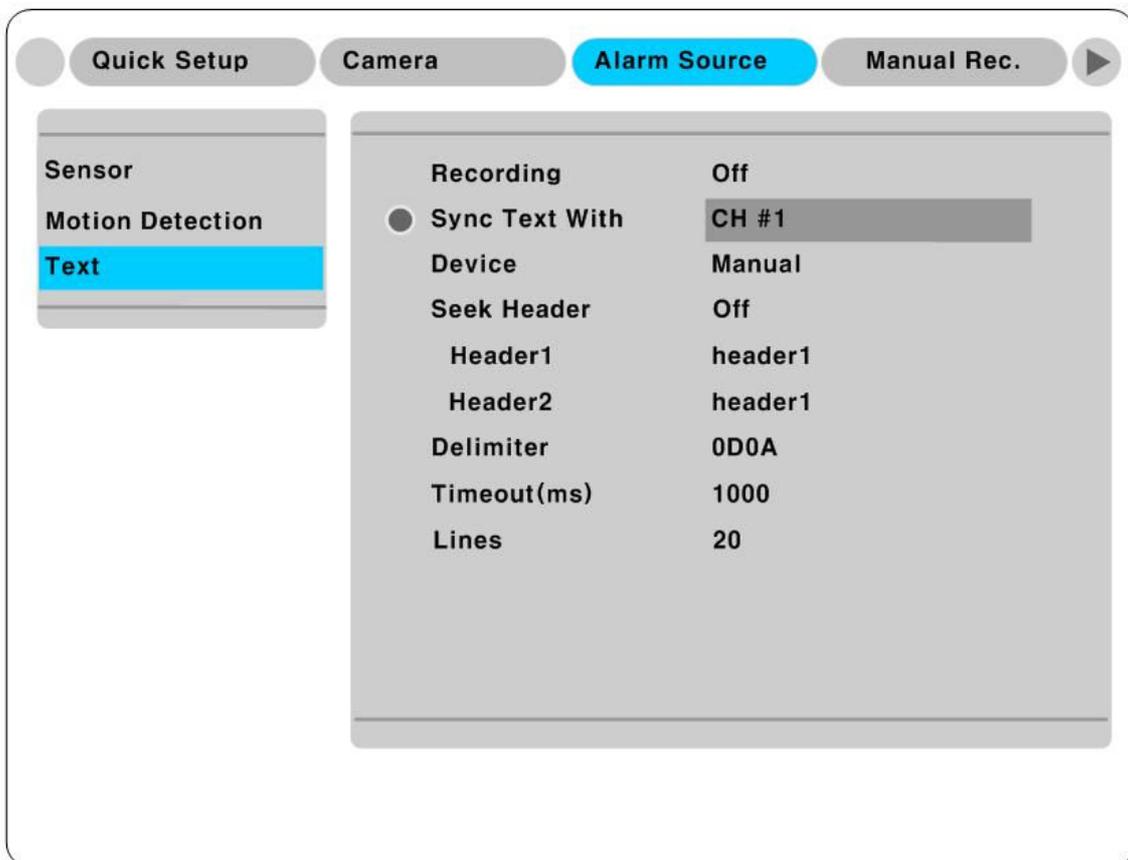

Set Recording & Monitoring menu to all 'On' and set Sync channel to the wanted value. If connectable device is Star Finger 007, set the relevant device only. And set other products to Manual and set all inferior menus.

18.1.2. Setup in RS232 menu of Serial Setup

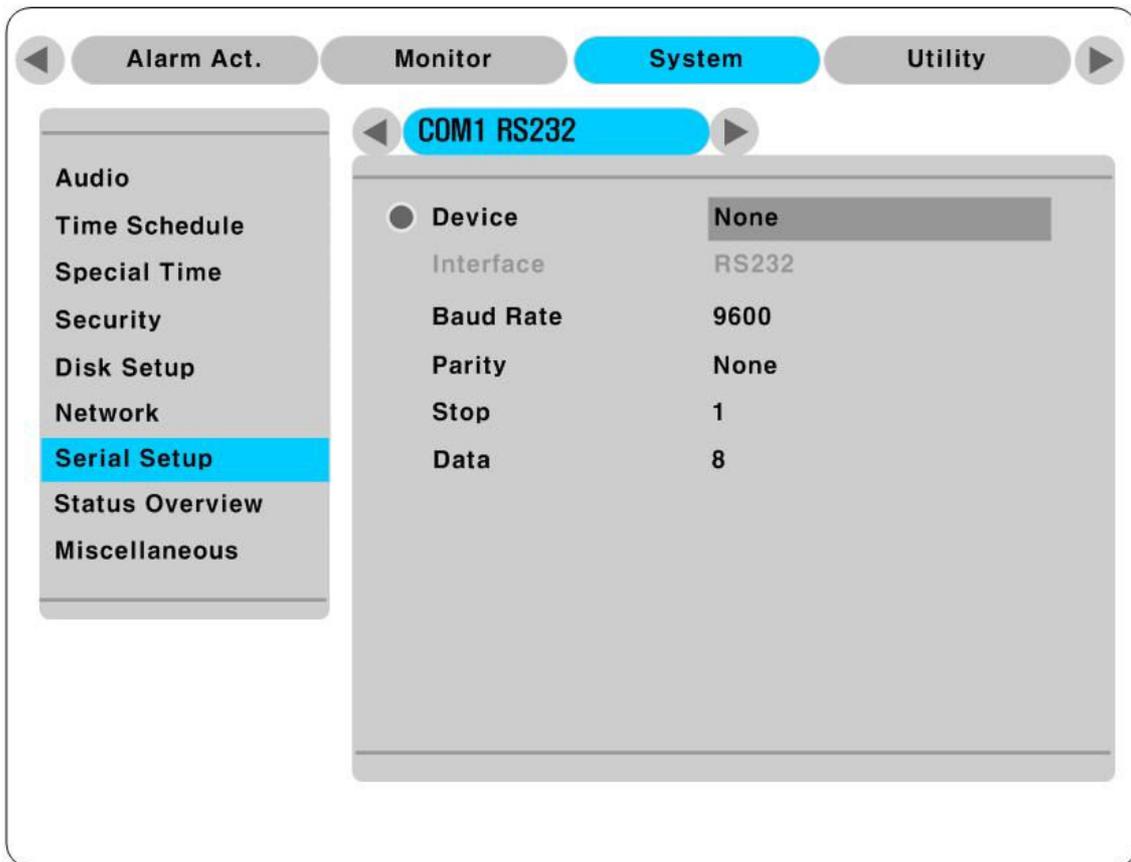

Set connectable device in COM1 of Serial Setup menu, and also set Baud Rate, Parity, Stop, Data with relevant value.

18.1.3. Setup in Alarm Rec

The screenshot shows the 'Alarm Rec.' configuration screen. The left sidebar lists camera channels from 'Global' to 'Cam #9', with 'Cam #1' selected. The main configuration area is titled 'Alarm Source(*=all)' and includes the following settings:


- Sensor:** 1 - - -
- MD:** On
- Text:** Off
- Preset:** # # # # #
- Recording Speed/Quality:** High
- Speed(ips):** 15
- Quality:** Q5
- Pre Alarm (sec):** 5
- Post Alarm (sec):** 60

At the bottom, the 'Alarm Rec.' table shows recording status for different days:

	WDD	WDN	WED	WEN
Alarm Recording	On	On	On	On

If there is video channel want to record with Text sync., set Text Event from Off to On.

18.1.4. Setup in Recording

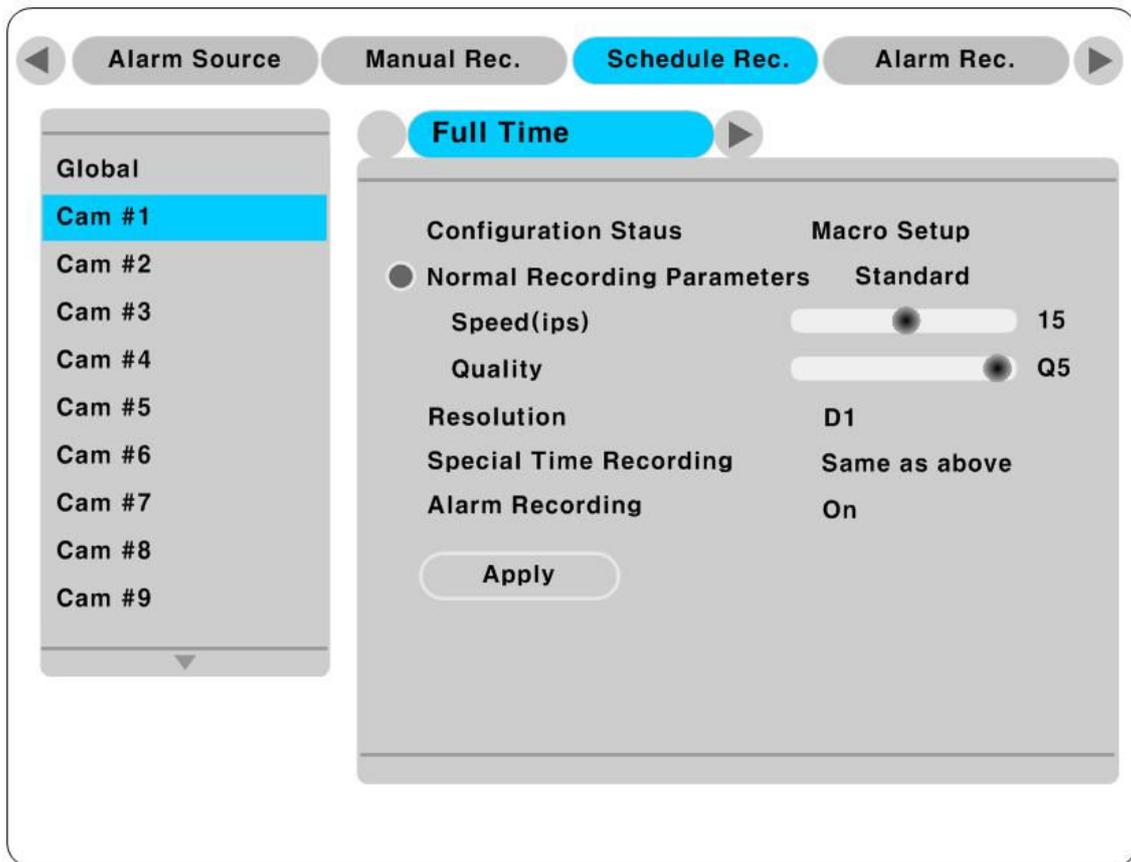

If any channel like to record with Text, set Alarm recording to 'On'. Full Time is to set all Week day & night, Weekend day & night, and change menu to set Weekday and Weekend differently.


< Attention >

Every pressing 'Help' button, it differ the step of showing video data. Default value at Monitoring shows channel number only. And whenever pressing 'Help', it changes to channel name & text sign stage, event status sign, HDD status sign. In opposite, default value at Playback changes in stages of all data sign, channel name and text sign, event status sign, channel numbe sign. So to view text data when Monitoring or Playback, press Help button at once for the stage of channel name & text sign.

18.2. Using Keyboard

There are 2 essential setups to use Keyboard; RS232 menu of Serial Setup, PTZ menu of Serial Setup

18.2.1. Setup in COM1 menu of Serial Setup

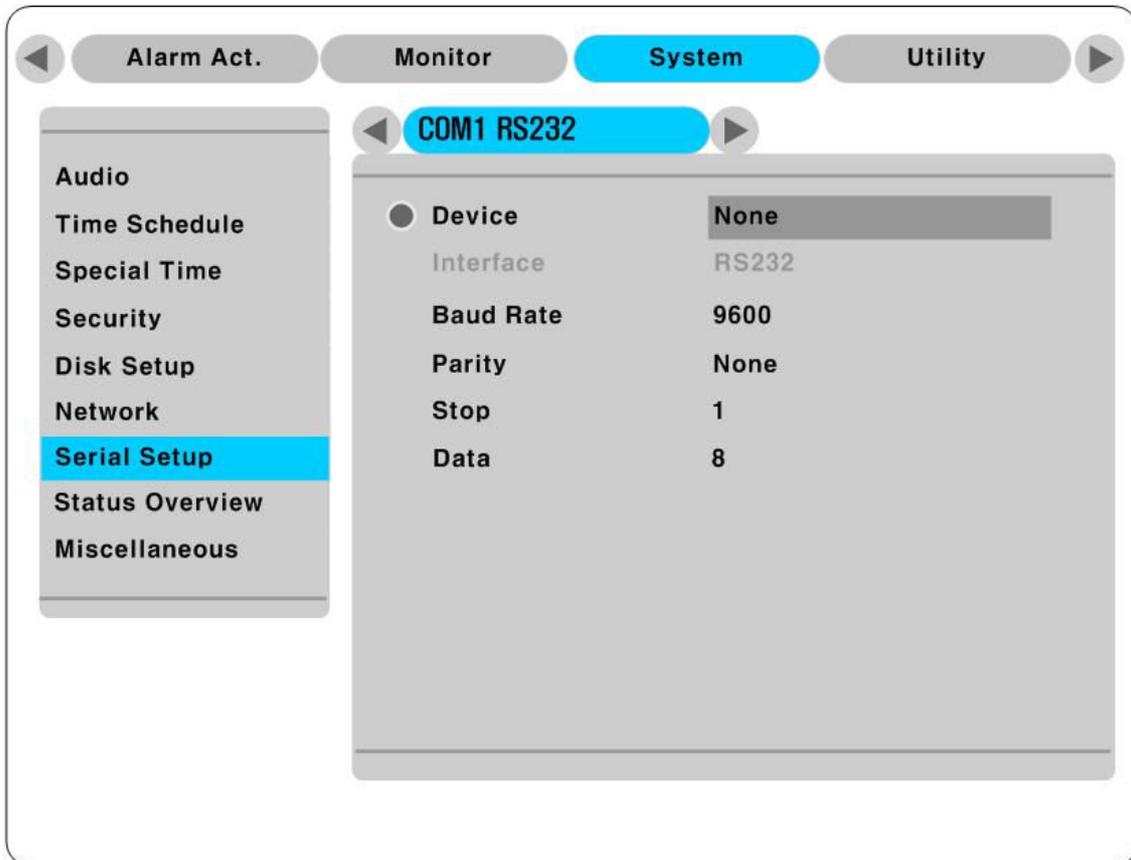

Set connectable device in RS232 in Serial Setup menu to Keyboard. Also set Baud Rate, Parity, Stop, Data with relevant value.

18.2.2. Setup in PTZ menu of Serial Setup

Set communication between HVRM and camera to control via Keyboard & other devices.


Inquire to seller for the detailed information about Setup with other products.

Appendix

#1. HDD

#1.1. Fundamental notions & terms

HVRM storing constructure (VFS2)

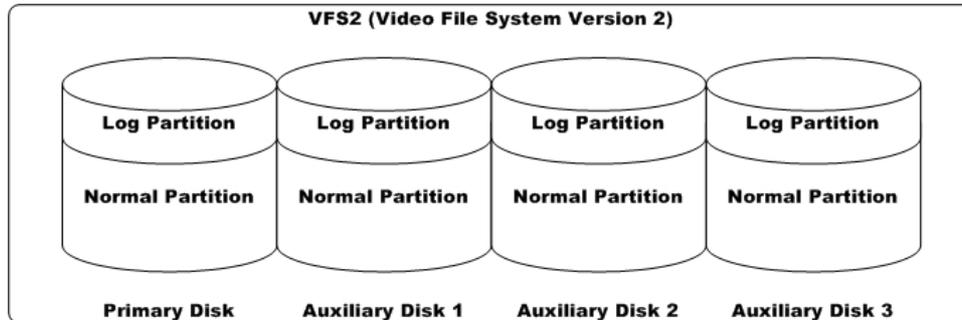

HVRM series has a peculiar storing constructure, and its features are as follows.

- (1) It is possible to connect 2 sets of HDD internally (Internal, ATA Interface) and 63 sets of HDD externally (External, 2 ports of IEEE1394 / External, 2 ports of eSATA / Storage Network).
- (2) All of the connected HDDs are recognized as one virtual disk, and HVRM supports upto 8TB.

<Note>


Log Partition	To store the information of recorded data
Normal Partition	To store the data as normal recording schedule

Backup

- (1) Backup is possible only through (IEEE1394 port, eSATA, Storage Network) and HDD for backup should be formatted as FAT32 type. (Its type is indicated as [F] in Disk Manager.)

Disk Manager

- (1) When HDD is added or deleted physically, Disk Manager runs automatically after rebooting. If not, you can run “Disk Manager” manually with moving “Menu→Utility→Disk Manager”.

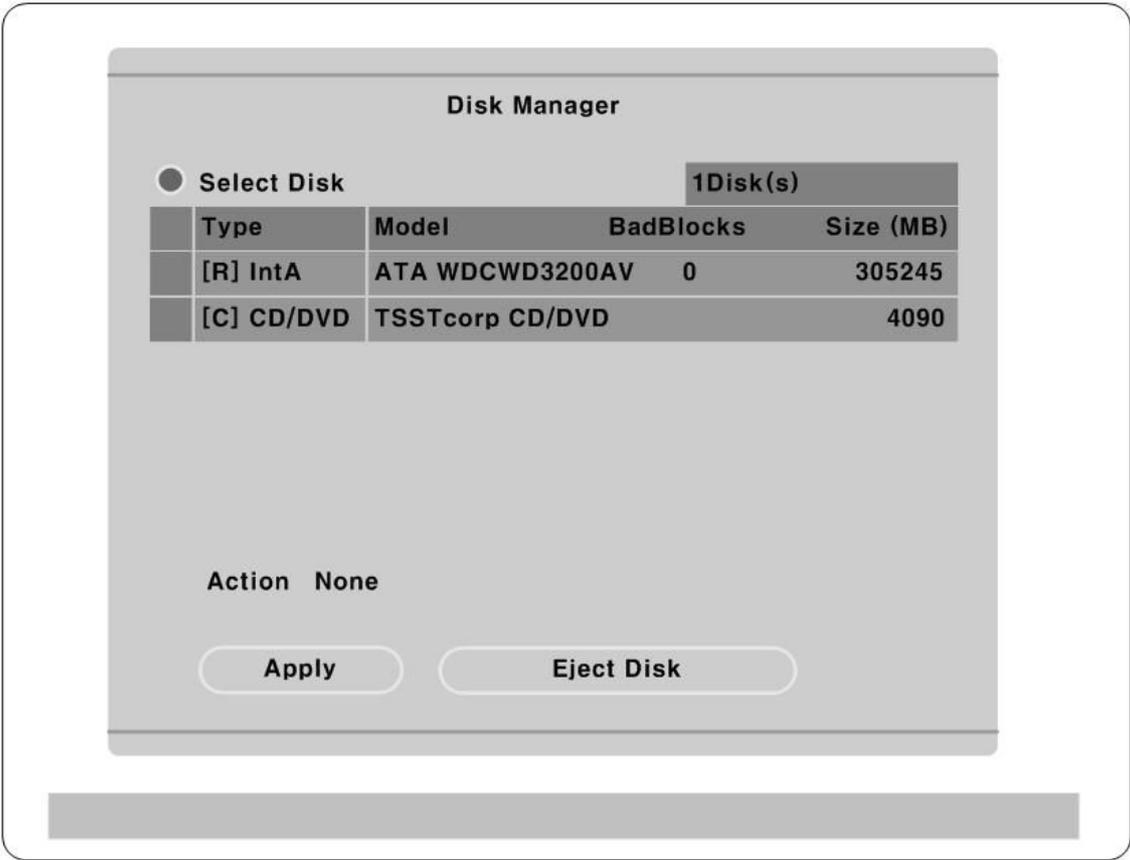

(2) HDD Type at Disk Manager

[R]	Available recording status
[V]	Connected and formatted as HVRM's file system. If using 'Add Used' command, it will be changed to [R]. There is no need to format.
[F]	Connected but not available HVRM's file system. After using 'Add', need to format for making as [R]. Indicate FAT32 file system connected for backup.
[C]	CD/DVD-Recorder
[X]	HDD cable is not connected nor has some problem. In case of that, HDD should be removed with using 'Confirm Removed' menu. In case of being [X] at the disk list, the buzzer will ring until closing a disk manager.
IntA	Internal SATA HDD 1
IntB	Internal SATA HDD 2
Ext	External HDD, which can be reordered by the order of recognition

(3) HDD Managing Command




Add	Add a HDD for recording. In case of adding a disk, "Alarm Partition" menu is activated as an available status. "Alarm Partition" means that one HDD divides a partition as Normal Recording & Alarm Recording part.
Add Used	Add a HDD that has been used and formatted. There is no need to reformat. It is possible only when HDD is added as Primary Disk.
Remove	Remove current HDD. HDD can be reused without data loss by the 'Add Used' command.
Confirm Removed	Use when a removed HDD is still listed. ALL DATA WILL BE LOST!
FAT32 Format	: Use when connect to the external HDD Format the partition of below 250GB to copy/backup by FAT32 file system. It is necessary to create partition by using Disk manager on PC for this work. In case the size is over 250GB, format each partition by FAT32 file system after creating multiple partitions smaller than 250GB.

#2. Specification

Item		Description		
		HVRM-H1600L	HVRM-H1600M	HVRM-H3200M
Video Input	Analog Ch.	16 BNC connectors (NTSC/PAL, Auto detect)		32 BNC connectors (NTSC/PAL, Auto detect)
Video Output	Monitor	4 BNC(Each monitor support 16 division), 1 VGA	2 BNC(Each monitor support 16 division), 1 VGA	4 BNC(Each monitor support 16 division), 1 VGA
	Loop Out	16 with Auto-termination		-
Video Compression		MPEG4 & JPEG		
Display	Speed	480/400ips (NTSC/PAL)		
	Resolution	D1(4CIF), HALF(2CIF), CIF		
	Multi Screen	1, 4, 9, 16ch		
Recording	Speed	480/400ips (NTSC/PAL) at D1(4CIF)	480/400ips (NTSC/PAL) at Half(2CIF)	960/800ips (NTSC/PAL) at Half(2CIF)
	Resolution	D1(4CIF), HALF(2CIF), CIF		
	Multi Screen	1, 4, 9, 16ch		
Sensor Input / Relay Output		16 input / 4 output, configurable NO/NC		
System Control		Key Buttons, Remote Client, IR Remote, Keyboard Controller(Optional)		
PTZ Control		RS485 / RS232		
Audio		4ch Input / 1ch Output		
Display		Brightness, Contrast and Covert Feature		
Camera Title		22 Characters per channel		
Recording Mode		Manual(Emergency), Alarm (Pre/Post), Schedule		
Recording Quality		5 Levels of compression rate / Record frame rate adjustment		
Pre/Post Recording		5sec / 60sec		
Motion Detection		22x15 (NTSC)/ 22x18 (PAL) grid		
Search Mode		Date/Time, Log, Text, Smart		
Playback Mode		Forward, Reverse, Pause, 1x, 2x, 4x, 8x, 16x, 32x, 64x		
Multiplex Function		Simultaneous Live Display/Playback/Record, Remote Monitoring/Playback		
Alarm Notification		Automatic E-mail, Internal Buzzer, Relay-out, Pop-up Screen, Network Event		

File System	Intelligent Power Failure Recovery	
Watermark	Yes	
Password Protection	2 Level (Admin/User)	
Backup	DVD Writer (DVD-R 4.7G Media), , eSATA, USB, R-HDD, Network, IEEE-1394b*, NVS04R*	
Interface	2 RS-232C, 2 RS-485	
Storage	2 Internal + 2 Hot-Swappable SATA HDD	
Network	TCP/IP, ARP, ICMP, DHCP, PPPoE, UDP, SMTP, SNMP, FTP, SNTTP, HTTP	
Remote Control	Software application: Control Center Lite (supplied basically) Remote observation through Web Browser Functions: Monitor, Search, Playback, Backup, Event Monitor, PTZ	
Operation System	Embedded Linux	
Temperature	Operation	+0℃ ~ +40℃
	Storage	-20℃ ~ +60℃
Relative	Operation	93% RH Below
	Storage	95% RH Below
Dimensions (mm)	445(W) x 388(D) x 88(H)	
Weight	10.3Kg	
Power Consumption (Applied Adaptor)	AC 100~240V, 50/60Hz, Max. 85W, Typical 60W	
Total Integration Solution & API	Control Center, WinDVrS, WESP SDK	

(*under development)

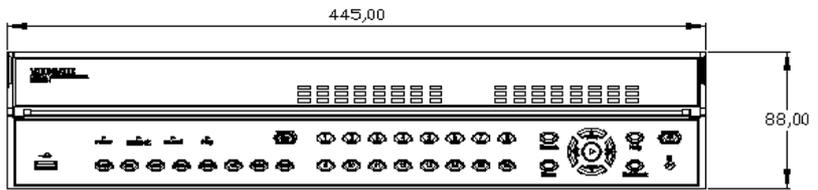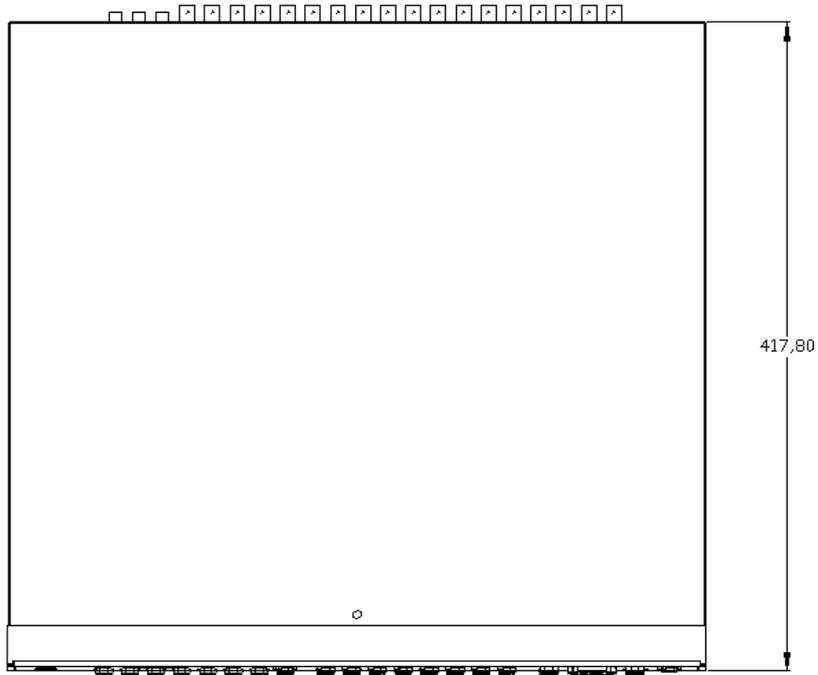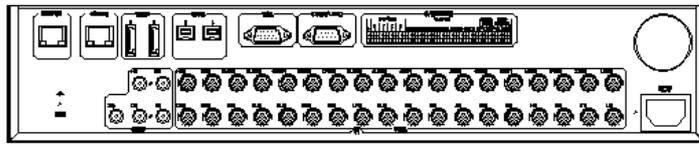

HUNT ELECTRONIC USA INC.

11790 Jersey Blvd.

Rancho Cucamonga, CA 91730

Tel: (888)993-4868, (909)987-6999

Fax: (909)987-6997

techsupport@huntcctv.com

www.huntcctv.com

The content of this manual can differ according to firmware or Software upgrading, and the standard and appearance of products may be changed for the improvement of quality without an advance notice